

Jocca 4997

Jocca 4997 Vacuum Sealer Instruction Manual

Model: 4997

INTRODUCTION

Thank you for choosing the Jocca 4997 Vacuum Sealer. This appliance is designed to help preserve food by removing air from specially designed bags and then sealing them, extending the freshness of your food. Please read this manual carefully before operating the device to ensure safe and efficient use.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.

PRODUCT OVERVIEW

The Jocca 4997 Vacuum Sealer is designed for ease of use and efficient food preservation. It features indicator lights for sealing and cutting, and a triple function for vacuuming, sealing, and cutting. A

convenient compartment is included for storing the electrical cable.



An image showing the Jocca 4997 Vacuum Sealer, a compact appliance designed for food preservation.

Key Components:

- **Control Panel:** Includes buttons for vacuum, seal, and cut functions, along with indicator lights.
- **Sealing Bar:** Heats to create a strong, airtight seal.
- **Vacuum Channel:** Area where air is extracted from the bag.
- **Cutting Blade:** For custom-sizing vacuum sealer rolls.
- **Lid Latch:** Secures the lid during operation.
- **Power Cord Storage:** Integrated compartment for tidy storage.

SETUP

1. **Unpack:** Carefully remove the vacuum sealer from its packaging. Retain packaging for future storage or transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper ventilation.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. The appliance is rated for 160 watts.
5. **Prepare Bags/Rolls:** If using a roll, cut a piece to the desired length, ensuring enough space for the food and sealing. Seal one end of the bag if it's a roll.

OPERATING INSTRUCTIONS

1. Sealing a Bag (without vacuuming):

1. Place the open end of the bag onto the sealing bar.
2. Close the lid firmly until it latches.
3. Press the 'Seal' button. The indicator light will illuminate.
4. Once the light turns off, the sealing process is complete. Open the lid and remove the sealed bag.

2. Vacuum Sealing:

1. Place the food inside the vacuum sealer bag, leaving at least 5-7 cm of space from the open end.

2. Ensure the open end of the bag is clean and dry.
3. Place the open end of the bag into the vacuum channel, ensuring it lies flat over the sealing bar.
4. Close the lid firmly until it latches.
5. Press the 'Vacuum & Seal' button. The appliance will automatically extract air and then seal the bag. Indicator lights will guide the process.
6. Once the process is complete and the indicator lights turn off, open the lid and remove the vacuum-sealed bag.

3. Cutting a Roll:

1. Insert the vacuum sealer roll into the designated slot.
2. Pull the desired length of film across the cutting blade area.
3. Slide the cutter across the film to create a custom-sized bag.

MAINTENANCE AND CLEANING

- **Always unplug** the appliance before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the vacuum sealer with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Vacuum Channel:** Clean any food residue or liquids from the vacuum channel using a soft, damp cloth. Ensure it is completely dry before next use.
- **Sealing Bar:** Gently wipe the sealing bar with a dry cloth. Do not touch the sealing bar when it is hot.
- **Storage:** Store the appliance in a dry place, away from direct sunlight and heat. Use the integrated cable storage compartment to keep the power cord tidy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Bag does not vacuum properly.	Bag not correctly placed; bag is damaged; food too close to opening.	Ensure the bag opening is flat and fully inside the vacuum channel. Check for holes or tears in the bag. Leave sufficient space (5-7 cm) from the food to the bag opening.
Bag does not seal.	Sealing bar dirty; bag opening wet or wrinkled; lid not properly latched.	Clean the sealing bar. Ensure the bag opening is dry and smooth. Press down firmly on the lid until it latches.
Vacuum is weak.	Vacuum channel blocked; lid not fully closed.	Clear any debris from the vacuum channel. Ensure the lid is securely latched.

SPECIFICATIONS

- **Brand:** Jocca
- **Model Number:** 4997
- **Power:** 160 Watts
- **Power Source:** Corded Electric
- **Product Dimensions:** Approximately 37.2 x 16 x 11.2 cm
- **Product Weight:** Approximately 1.72 kg
- **GTIN:** 08435253520685

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Jocca customer service directly. Specific warranty terms may vary by region and retailer.