

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic Omnidvision VCR PV-2401 Instruction Manual](#)

Panasonic PV-2401

Panasonic Omnidvision VCR PV-2401 Instruction Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Panasonic Omnidvision VCR PV-2401. This manual provides essential information for the proper setup, operation, and maintenance of your video cassette recorder. Please read these instructions carefully before using the unit and retain them for future reference.

2. SETUP AND CONNECTIONS

2.1 Unpacking

Carefully remove the VCR and all accessories from the packaging. Ensure the following items are present:

- Panasonic Omnidvision VCR PV-2401 unit
- Remote control
- Audio/Video cables (RCA type)
- Power cord

2.2 Connecting to a Television

There are two primary methods for connecting your VCR to a television:

1. RCA (Composite Video/Audio) Connection:

Connect the yellow video cable from the 'VIDEO 1 OUT' port on the VCR's rear panel to the 'VIDEO IN' port on your TV. Connect the white audio cable from the 'AUDIO 1 OUT' (L) port and the red audio cable from the 'AUDIO 1 OUT' (R) port on the VCR to the corresponding 'AUDIO IN' (L/R) ports on your TV. This method provides the best picture and sound quality.

2. RF (Coaxial) Connection:

If your TV does not have RCA inputs, or if you prefer to use the antenna input, connect a coaxial cable from the 'VHF/UHF OUT TO TV' port on the VCR to the 'ANTENNA IN' or 'RF IN' port on your TV. Set the '3 CH. 4' switch on the VCR's rear panel to either channel 3 or 4, and tune your TV to the

corresponding channel to view the VCR output.

2.3 Connecting to an Antenna or Cable Source

If you wish to record broadcast television or cable channels directly through the VCR, connect your antenna or cable line to the 'IN FROM ANT.' port on the VCR's rear panel. If using the RF connection to your TV, the VCR will then pass the signal through to your TV.

2.4 Power Connection

Once all audio/video and antenna connections are made, plug the VCR's power cord into a standard AC outlet.



This image displays the rear panel of the VCR, highlighting the 'AUDIO 1 OUT/IN' (white and red RCA), 'VIDEO 1 OUT/IN' (yellow RCA), 'IN FROM ANT.' (RF coaxial), and 'VHF/UHF OUT TO TV' (RF coaxial with CH. 3/4 switch) ports. These are crucial for connecting the VCR to your television and antenna or cable source.

3. BASIC OPERATION

3.1 Inserting and Ejecting a VHS Tape

- **Inserting:** Gently push a VHS tape into the tape slot with the label facing up until the VCR automatically pulls it in.
- **Ejecting:** Press the 'EJECT' button on the VCR or remote control. The tape will be released.

3.2 Playback

1. Insert a VHS tape.
2. Ensure your TV is set to the correct input (e.g., Video 1, AV, or Channel 3/4).
3. Press the 'PLAY' button on the VCR or remote control.
4. Use 'REW' (Rewind) and 'FF' (Fast Forward) to navigate the tape.
5. Press 'STOP' to halt playback and 'PAUSE' to temporarily freeze the image.

3.3 Recording

The PV-2401 supports both manual and scheduled recording.

- **Manual Recording:**

Insert a recordable VHS tape. Tune the VCR to the desired channel. Press the 'REC' button on the VCR or remote control to begin recording. Press 'STOP' to end recording.

- **Scheduled Recording:**

Refer to the 'REC/TIME MENU' button on your remote control. This function allows you to program the VCR to record a specific channel at a set time and duration. Follow the on-screen prompts to set the program details. Ensure the VCR is powered on or in standby mode for scheduled recording to activate.

3.4 Using the Remote Control

The remote control provides full functionality for your VCR. Familiarize yourself with the button layout for convenient operation.



The remote control features buttons for power, channel selection (CH PRESET, CH UP/DOWN), VCR/TV mode, playback controls (PLAY, STOP, REW, FF, PAUSE), recording (REC/TIME MENU), tracking, and display functions. This remote is essential for convenient operation of the VCR.

4. MAINTENANCE AND CARE

4.1 General Cleaning

- **Exterior:** Wipe the VCR's exterior with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation slots are clear of dust and obstructions to prevent overheating.

4.2 Tape Care

- Store VHS tapes in their cases, away from direct sunlight, extreme temperatures, and strong magnetic

fields.

- Avoid touching the tape surface.
- Rewind tapes fully before storing them.

5. TROUBLESHOOTING

If you encounter issues with your VCR, please refer to the following common problems and solutions:

- **No Power:**

Ensure the power cord is securely plugged into both the VCR and a working electrical outlet. Check if the outlet is active.

- **No Picture/Sound:**

Verify that all audio and video cables are correctly connected between the VCR and your TV. Ensure your TV is set to the correct input source (e.g., AV1, Video 1, or Channel 3/4 if using RF).

- **Tape Not Playing/Ejecting:**

Ensure the tape is inserted correctly. If the tape is jammed, do not force it; consult a service technician.

- **Remote Control Not Responding:**

Check the batteries in the remote control and replace them if necessary. Ensure there are no obstructions between the remote and the VCR's infrared sensor.

- **Poor Picture Quality:**

Adjust the tracking control on the remote or VCR if available. Ensure the tape is clean and in good condition.

6. SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Name	PV-2401
Media Type	VHS
Special Feature	Recording
Connector Type	RCA, Analog Stereo
Connectivity Technology	RCA (composite) video, audio
Audio Output Mode	Stereo
Included Components	Remote, Cables
Item Weight	8.22 pounds
Package Dimensions	15.5 x 12.8 x 4.9 inches
Color	Black

7. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation provided at the time of purchase or contact the seller directly. For technical support or service inquiries, please contact Panasonic customer service or the authorized dealer from whom you purchased the unit.

© 2026 Panasonic. All rights reserved.