

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm JX370 14.0 MP Digital Camera User Manual

Fujifilm JX370R

Fujifilm JX370 14.0 MP Digital Camera User Manual

Model: JX370R

PRODUCT OVERVIEW

The Fujifilm JX370 is a compact digital camera designed for ease of use and high-quality image capture. It features a 14.0 megapixel sensor, a 5x optical zoom Fujinon lens, and the ability to record HD movies. Its intuitive design makes it suitable for everyday photography.



Image: Front view of the Fujifilm JX370 14.0 MP Digital Camera. This black camera features a prominent Fujinon lens, a built-in flash, and "14 MEGA PIXELS" and "HD MOVIE" branding visible on its body. The lens specifications "f=5-25mm 1:2.6-6.2" are also visible around the lens barrel.

WHAT'S IN THE BOX

Upon unboxing your Fujifilm JX370, please verify that all the following items are included:

- Fujifilm FinePix JX370 Digital Camera
- Camera Case
- 4GB SDHC memory card
- Li-ion battery NP-45A / B

- AC adapter
- USB cable
- Hand strap
- CD-ROM Owner's manual (digital version)

SETUP GUIDE

1. Charging the Battery

1. Insert the supplied Li-ion battery NP-45A / B into the camera.
2. Connect the AC adapter to the camera's USB port and then to a power outlet.
3. The charging indicator light will illuminate. Charging typically takes a few hours.
4. Once charging is complete, the indicator light will change or turn off. Disconnect the AC adapter.

2. Inserting the Memory Card

1. Open the battery/card compartment cover on the camera.
2. Insert the 4GB SDHC memory card into the designated slot with the label facing the correct direction (usually towards the front of the camera).
3. Gently push the card until it clicks into place.
4. Close the compartment cover securely.

3. Attaching the Hand Strap

Thread the hand strap through the strap eyelet on the camera body and secure it to prevent accidental drops.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the top of the camera to turn it on or off. The lens will extend when powered on.

Taking Photos

1. Turn on the camera.
2. Select your desired shooting mode using the menu system. The camera features SR AUTO (Scene Recognition Auto) for automatic optimization.
3. Frame your shot using the 2.7-inch LCD display.
4. Press the shutter button halfway down to focus. The camera will confirm focus.
5. Press the shutter button fully down to capture the image.

Recording Videos

1. Turn on the camera.
2. Navigate through the menu to select the movie recording mode.
3. Press the dedicated movie record button (if available) or the shutter button to start recording.
4. Press the button again to stop recording. The camera supports 1080p HD video recording.

Zoom Function

Use the zoom lever (typically around the shutter button) to adjust the 5x optical zoom and 6.7x digital zoom. Zoom in for closer shots and zoom out for wider views.

Playback Mode

Press the playback button (often indicated by a play icon) to review your captured photos and videos on the LCD screen. Use the directional buttons to navigate through your media.

Web Uploading

The Fujifilm JX370 supports easy web uploading to YouTube and Facebook via MyFinePix Studio software. Connect the camera to your computer using the supplied USB cable and follow the software instructions for transferring and uploading files.

MAINTENANCE

Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water and then wipe dry. Avoid using organic solvents.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a specialized lens cleaning cloth and lens cleaning solution. Do not touch the lens surface with your fingers.
- **LCD Screen:** Gently wipe the screen with a soft, dry cloth. Avoid pressing hard on the screen.

Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing for an extended period, charge the battery to about 50% capacity.

Storage

When not in use, store the camera in its case in a dry, dust-free environment away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or not inserted correctly.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Pictures are blurry.	Camera shake, subject movement, or out of focus.	Hold the camera steady. Use digital image stabilization. Ensure the camera focuses before shooting. Avoid shooting very close-up subjects without proper lighting.
Flash does not fire.	Flash mode is off or battery is low.	Check flash settings in the menu. Recharge the battery.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files or use a new card. Format the card (this will erase all data). Ensure the card is SDHC compatible.
Cannot upload photos to computer.	USB cable issue or MyFinePix Studio software not installed.	Ensure USB cable is securely connected. Install MyFinePix Studio software from the supplied CD-ROM or Fujifilm website.

SPECIFICATIONS

Feature	Detail
Model Name	JX370R
Effective Still Resolution	14.0 Megapixels
Image Sensor	1/2.3-inch CMOS or CCD
Lens Type	Fujinon 5x Optical Zoom Lens
Focal Length	5.0 - 25.0mm (equivalent to 28 - 140mm on a 35mm camera)
Maximum Aperture	F2.6 (Wide) - F6.2 (Telephoto)
Optical Zoom	5x
Digital Zoom	6.7x
Image Stabilization	Digital
LCD Screen	2.7-inch TFT Color LCD
Video Recording	1080p HD Movie (MP4 format)
Supported File Formats	JPEG (Still), MP4 (Video), WAV (Audio)
Connectivity	USB 2.0
Battery Type	Li-ion battery NP-45A / B
Dimensions (D x W x H)	0.9"D x 3.7"W x 2.2"H
Weight	0.24 Pounds

WARRANTY INFORMATION

The Fujifilm JX370 Digital Camera comes with a **1-year manufacturer's limited warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed terms and conditions, please refer to the warranty card included with your product or visit the official Fujifilm support website.

SUPPORT AND CONTACT

For further assistance, technical support, or service inquiries regarding your Fujifilm JX370 Digital Camera, please contact Fujifilm customer support.

- Online Support:** Visit the official Fujifilm support website for FAQs, driver downloads, and service center locations.
- Customer Service:** Refer to the contact information provided in your product packaging or on the Fujifilm website for phone or email support.

Note: Always provide your camera's model number (JX370R) and serial number when contacting support for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question