

[manuals.plus](#) /

› [CubicFun](#) /

› [CubicFun Yacht Mary 3D Jigsaw Puzzle \(Model T4010h\) Instruction Manual](#)

CubicFun T4010h

CubicFun Yacht Mary 3D Jigsaw Puzzle (Model T4010h) Instruction Manual

1. INTRODUCTION

Welcome to the world of CubicFun 3D Puzzles! This instruction manual provides detailed guidance for assembling your Yacht Mary 3D Jigsaw Puzzle, Model T4010h. This kit allows you to construct a detailed replica of the Yacht Mary using 83 precision-cut EPS foam paper pieces. No tools or glue are required for assembly, making it a fun and engaging project for enthusiasts aged 10 and up.



Image 1.1: The CubicFun Yacht Mary 3D Jigsaw Puzzle product box, showing the assembled model and key features.

2. SAFETY INFORMATION

- **Recommended Age:** This puzzle is recommended for ages 10 years and up.
- **Small Parts Warning:** The kit contains small parts which may pose a choking hazard for children under 3 years. Adult supervision is advised for younger users within the recommended age range.
- **Material Safety:** The puzzle pieces are made from EPS Foam Paper, which is safe for handling. Avoid ingestion.
- **Sharp Edges:** While pieces are designed for safety, exercise caution when punching out pieces to avoid any minor sharp edges.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present and undamaged:

- 83 x EPS Foam Paper Puzzle Pieces (pre-cut sheets)
- 1 x Instruction Sheet (visual assembly guide)

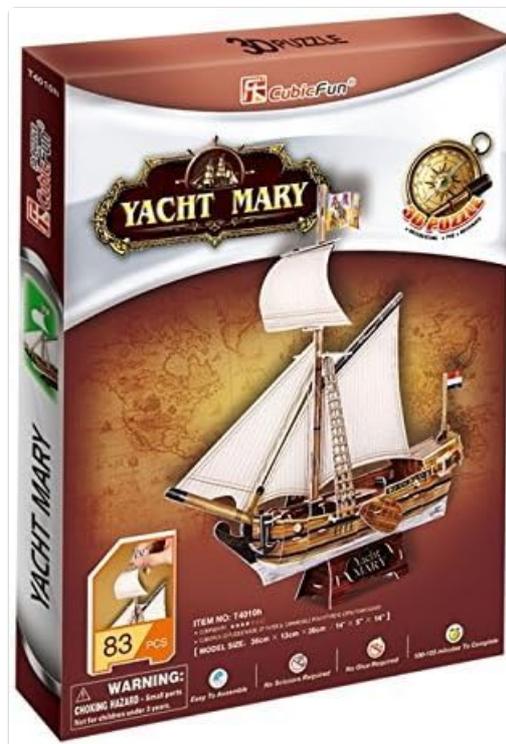


Image 3.1: Example of the EPS Foam Paper puzzle sheets before pieces are punched out.

4. ASSEMBLY INSTRUCTIONS (SETUP)

Follow these steps carefully to assemble your CubicFun Yacht Mary 3D Jigsaw Puzzle. No glue or tools are needed; pieces interlock securely.

1. **Prepare Your Workspace:** Find a clean, flat, and well-lit surface to work on. Keep all puzzle sheets organized.
2. **Identify Pieces:** Each puzzle piece is numbered. Refer to the included instruction sheet for the assembly sequence.
3. **Punch Out Pieces:** Gently push out the required pieces from their foam sheets. Be careful not to tear or bend them. If a piece is difficult to remove, use a blunt object (like the back of a pen) to push it from the opposite side.
4. **Follow the Steps:** The instruction sheet provides a step-by-step visual guide. Match the numbers on the pieces to the corresponding steps in the diagram.
5. **Interlock Pieces:** Carefully align and insert the tabs of one piece into the slots of another. Apply gentle, even pressure to ensure a snug fit. Do not force pieces together, as this may damage them.
6. **Build Sections:** The assembly typically involves building smaller sections first (e.g., hull, deck, mast) and then combining them to form the complete model.
7. **Final Touches:** Once all pieces are assembled, ensure all connections are secure. Your Yacht Mary model is now complete.



Image 4.1: Visual guide showing key assembly steps and how pieces interlock.

5. DISPLAY AND OPERATING (USAGE)

Once assembled, the CubicFun Yacht Mary 3D Jigsaw Puzzle is designed as a decorative display model. Place it on a stable, flat surface where it can be admired. It is not intended for water use or rough play.

6. MAINTENANCE

- **Cleaning:** To clean your assembled model, gently dust it with a soft, dry cloth or a soft brush. Avoid using water or cleaning solutions, as these may damage the EPS foam paper material.
- **Storage:** If disassembling for storage (not recommended as repeated assembly may weaken connections), keep pieces in a dry, cool place away from direct sunlight to prevent fading or warping.
- **Handling:** Handle the assembled model with care to prevent pieces from detaching or bending.

7. TROUBLESHOOTING

- **Pieces Don't Fit:** Double-check the piece numbers against the instruction sheet. Ensure you are using the correct pieces for the current step. Do not force pieces; gently adjust alignment.
- **Missing Pieces:** Carefully check all foam sheets and your workspace. Sometimes small pieces can get overlooked. If a piece is genuinely missing, please contact CubicFun customer support.
- **Model is Unstable:** Ensure all connections are fully engaged and snug. Review previous steps to confirm no pieces were incorrectly assembled or missed.

8. SPECIFICATIONS

Feature	Detail
Brand	CubicFun

Model Name	Yacht Mary
Model Number	T4010h
Number of Pieces	83
Material	EPS Foam Paper
Assembly Required	Yes
Tools/Glue Required	No
Recommended Age	10 years and up
Assembled Dimensions (L x W x H)	36 x 13 x 36 cm (14.2 x 5.1 x 14.2 inches)
Package Dimensions (L x W x H)	44 x 16 x 0.1 cm
Item Weight	0.18 Kilograms

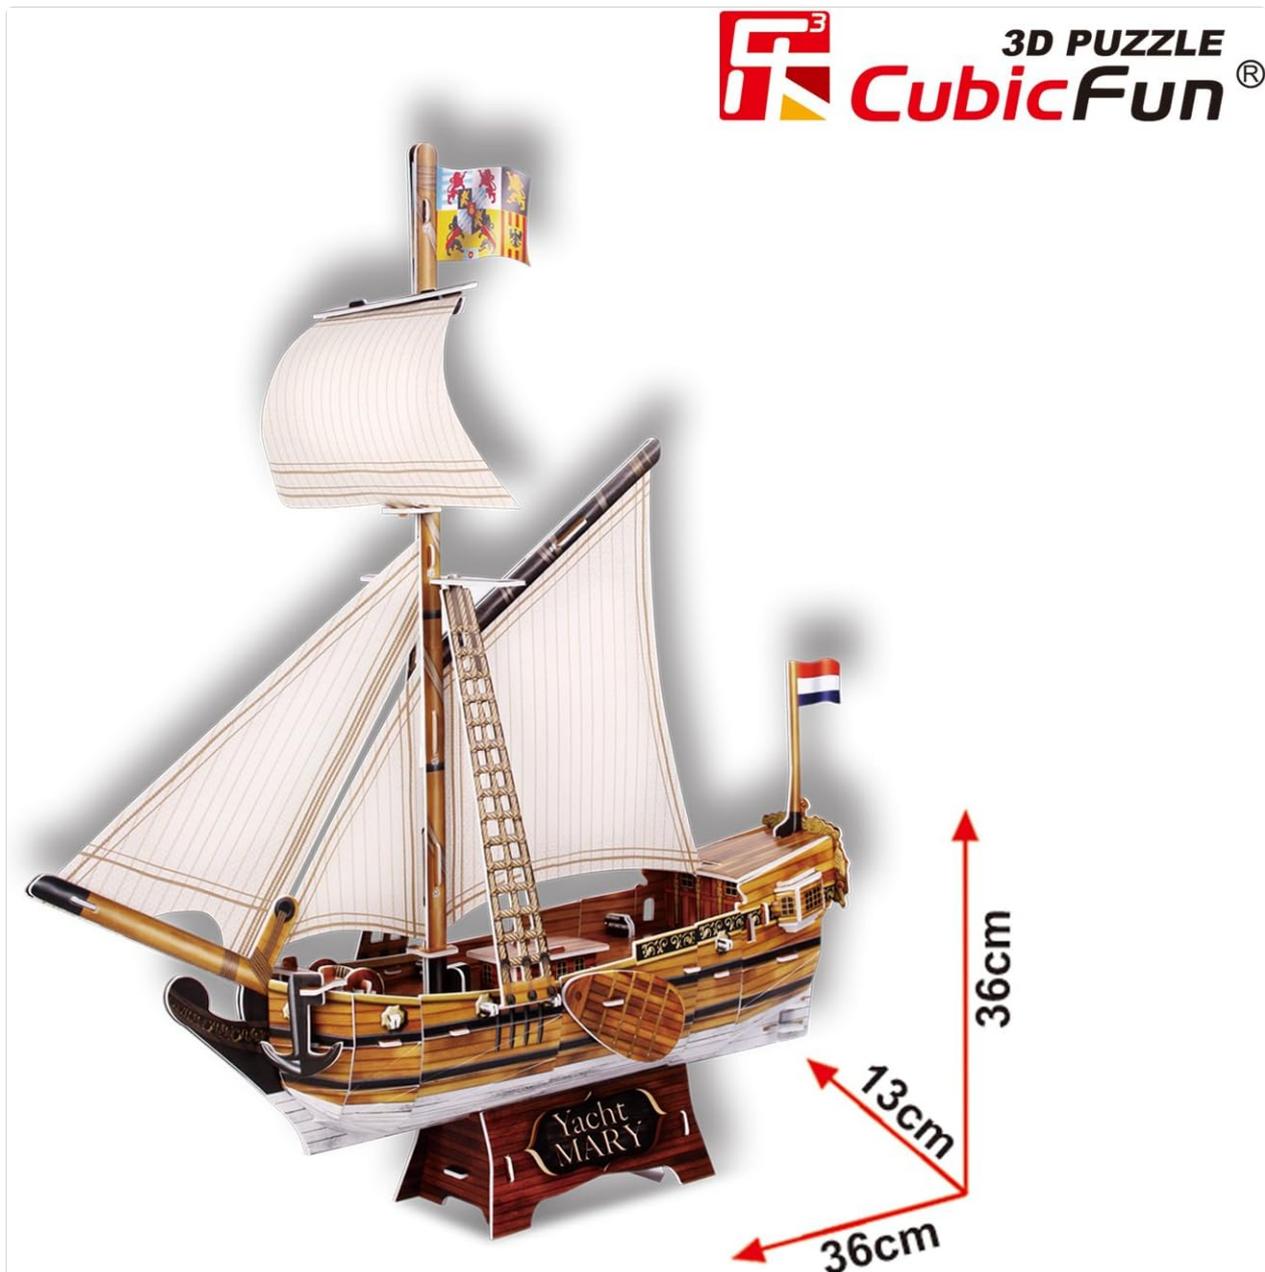


Image 8.1: The assembled Yacht Mary model with its approximate dimensions.

9. WARRANTY AND SUPPORT

CubicFun strives to provide high-quality products. If you encounter any issues with your Yacht Mary 3D Jigsaw Puzzle, such as missing or defective pieces, please contact CubicFun customer support. While specific warranty details are not provided, we are committed to customer satisfaction.

For support inquiries, please visit the official CubicFun website or contact your retailer for assistance.