

Atlanta 1668-19

Atlanta Analog Alarm Clock User Manual

MODEL: 1668-19

Introduction

Thank you for choosing the Atlanta 1668-19 Analog Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper function and longevity of your device. Keep this manual for future reference.

Product Overview



This image displays the Atlanta 1668-19 analog alarm clock. It features a silver-colored casing, a white clock face with large black Arabic numerals (1-12), and black hour and minute hands. A thin silver second hand is also visible. The dial includes small markings for minutes and seconds, and the brand name 'Atlanta' is printed below the 12 o'clock position. Below the center, 'LIGHT SENSOR SWEEP' is printed, indicating its features. The clock has a rounded, compact design.

The Atlanta 1668-19 is a reliable analog alarm clock designed for ease of use. It features a clear dial, a quiet sweep second hand, and a light sensor for automatic illumination in low light conditions. Key components typically include:

- **Time Setting Knob:** Located on the back, used to adjust the current time.
- **Alarm Setting Knob:** Located on the back, used to set the desired alarm time.
- **Alarm ON/OFF Switch:** A switch to activate or deactivate the alarm function.
- **Snooze/Light Button:** Usually a large button on top, activates snooze and/or backlight.
- **Battery Compartment:** Located on the back, for battery installation.

Setup

1. Battery Installation:

- Open the battery compartment cover on the back of the clock.
- Insert one (1) AA battery (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
- Close the battery compartment cover securely.

2. Setting the Current Time:

- Locate the *Time Setting Knob* on the back of the clock.
- Rotate the knob clockwise or counter-clockwise until the hour and minute hands display the correct current time.

3. Setting the Alarm Time:

- Locate the *Alarm Setting Knob* on the back of the clock.
- Rotate this knob until the alarm hand points to your desired alarm time.
- *Note:* The alarm hand moves independently of the time hands. Ensure you set it for AM or PM correctly if your clock has a 12-hour alarm cycle.

Operating Instructions

• Activating the Alarm:

- Slide the *Alarm ON/OFF Switch* to the 'ON' position. The alarm will sound at the set time.

• Snooze Function:

- When the alarm sounds, press the large *Snooze/Light Button* on top of the clock. The alarm will temporarily stop and sound again after approximately 5-10 minutes.

• Backlight Function:

- Press the *Snooze/Light Button* to briefly illuminate the clock face for easy viewing in the dark.
- The clock also features a *Light Sensor*. In low light conditions, the clock face may automatically illuminate dimly for continuous visibility.

• Stopping the Alarm:

- To permanently stop the alarm, slide the *Alarm ON/OFF Switch* to the 'OFF' position. The alarm will not sound again until reactivated.

Maintenance

• Cleaning:

- Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or chemical solvents, as they may damage the casing or dial.
- Avoid exposing the clock to excessive dust or moisture.

• Battery Replacement:

- Replace the battery when the clock hands slow down, the alarm sound weakens, or the backlight becomes dim.
- Always use a fresh, high-quality AA battery.
- Remove exhausted batteries promptly to prevent leakage and damage to the clock.

Troubleshooting

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery is dead or incorrectly inserted.	Check battery polarity or replace with a new AA battery.
Alarm does not sound	Alarm ON/OFF switch is in 'OFF' position; Alarm time not set correctly; Battery is low.	Slide switch to 'ON'; Re-set alarm time; Replace battery.
Backlight is dim or not working	Battery is low; Light sensor is covered.	Replace battery; Ensure light sensor (usually on the dial) is not obstructed.
Alarm sounds at wrong time	Alarm hand is set incorrectly.	Re-set the alarm time using the Alarm Setting Knob.

Specifications

- Model Number:** 1668-19 (Internal Model: 44352)
- Dimensions (L x W x H):** 12 x 3.81 x 10 cm (approximately 4.7 x 1.5 x 3.9 inches)
- Weight:** 200 grams (approximately 0.44 lbs)
- Power Source:** 1 x AA Battery (not included)
- Display Type:** Analog
- Features:** Quiet sweep second hand, Light Sensor, Snooze function, Backlight

Warranty and Support

Specific warranty details and customer support contact information are not provided within this manual. Please refer to the product packaging, the retailer's website, or the official Atlanta brand website for information regarding warranty coverage, returns, and technical support.

© 2024 Atlanta. All rights reserved.

Documents - Atlanta – 1668-19

no relevant documents