

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Braun](#) /

> [Braun J700 Multiquick 7 Juicer Instruction Manual](#)

Braun J700

Braun J700 Multiquick 7 Juicer Instruction Manual

Model: J700

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using the appliance and retain them for future reference. This appliance is designed for household use only.

- **Electrical Safety:** This appliance is designed for 220-240V, 50Hz operation. **It is not for use in USA/Canada or any 110-120V regions.** Ensure your mains voltage corresponds to the voltage marked on the appliance.
- Always unplug the appliance from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Always use the food pusher provided.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way. Contact an authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The appliance features a four-way automatic safety switch-off mechanism. Ensure all parts are correctly assembled and the safety lock is engaged before operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Braun J700 Multiquick 7 Juicer is a robust and elegant appliance designed for efficient juicing. It features a high-gloss plastic body with stainless steel accents, combining form and function for optimal performance.



Figure 2.1: Front view of the Braun J700 Multiquick 7 Juicer.

Key Features:

- **Powerful 1000W Motor:** Delivers efficient juicing performance.
- **Large 75mm Chute:** Accommodates whole fruits and vegetables, reducing preparation time.
- **Anti-Splash Stainless Steel Spout:** Ensures a clean juicing experience.
- **Variable 2-Speed Control:** Allows for optimal juicing of both soft and hard produce.
- **Four-Way Automatic Safety Switch-Off:** Enhances user safety during operation.
- **Dishwasher Safe Parts:** Simplifies cleaning.
- **2-in-1 Cleaning Brush:** Included for thorough cleaning of the sieve.

3. ASSEMBLY AND SETUP

Before first use, wash all removable parts (juice jug, lid, pulp container, food pusher, filter basket, juicer cover) in warm soapy water, rinse thoroughly, and dry. Ensure the motor unit is unplugged from the power outlet.

1. Place the motor unit on a stable, flat, and dry surface.
2. Insert the pulp container into the motor unit.
3. Place the filter basket (sieve) into the pulp container, ensuring it is seated firmly.
4. Position the juicer cover onto the motor unit, aligning the spout with the opening on the motor unit. Ensure the safety clips on both sides click into place.
5. Place the juice jug under the spout.
6. Insert the food pusher into the feed chute.



Figure 3.1: Assembled juicer with speed control dial.

The appliance is now ready for operation. Only plug it into a suitable 220-240V power outlet when ready to juice.

4. OPERATING INSTRUCTIONS

Prepare fruits and vegetables by washing them thoroughly. For larger items, cut them into pieces that fit the 75mm feed chute. Remove large seeds or pits from fruits like peaches, plums, or cherries. Peeling is generally not necessary for most fruits and vegetables, but citrus fruits should be peeled to avoid a bitter taste.





Figure 4.1: Juicing an apple with the Braun J700.

1. Ensure the juice jug is placed under the spout. The jug has a foam separator to ensure clear juice.
2. Plug the appliance into a 220-240V power outlet.
3. Select the appropriate speed setting using the control dial:
 - **Speed 1 (Low):** For soft fruits and vegetables (e.g., berries, grapes, tomatoes, cucumbers).
 - **Speed 2 (High):** For hard fruits and vegetables (e.g., apples, carrots, celery, pineapple).
4. Switch on the appliance.
5. Gradually feed the prepared fruits and vegetables into the feed chute using the food pusher. Apply gentle, even pressure. Do not force large quantities of produce at once.
6. Once juicing is complete, switch off the appliance and unplug it from the power outlet.
7. Allow the motor to stop completely before disassembling.

Note: The appliance is designed for continuous operation for up to 15 minutes. If juicing for longer periods or processing large quantities (up to 5 kg), allow the appliance to cool down for a few minutes after each 15-minute cycle.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your juicer. Clean the appliance immediately after each use to prevent pulp and juice residue from drying, which can make cleaning more difficult.

1. Unplug the appliance from the power outlet.
2. Disassemble the juicer by removing the food pusher, juicer cover, filter basket, pulp container, and juice jug.
3. Rinse all removable parts under running water. Use the provided 2-in-1 cleaning brush to thoroughly clean the filter basket, removing any pulp residue from the fine mesh.
4. All removable parts (juice jug, lid, pulp container, food pusher, filter basket, juicer cover) are dishwasher safe. Place them on the top rack of your dishwasher.
5. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or rinse it under running water.
6. Dry all parts thoroughly before reassembling or storing the appliance.



Figure 5.1: Juice jug with measurement markings, suitable for dishwasher cleaning.

For stubborn stains, especially from carrots, a small amount of vegetable oil on a paper towel can help remove discoloration from plastic parts, followed by washing with soapy water.

6. TROUBLESHOOTING

If you encounter issues with your Braun J700 Multiquick 7 Juicer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not switch on.	Not plugged in; safety clips not engaged; power outage.	Ensure the appliance is securely plugged into a working 220-240V outlet. Check that both safety clips are correctly locked. Verify power supply.
Motor stops during operation.	Overload; safety switch activated; pulp container full.	Switch off and unplug. Remove excess produce. Empty pulp container. Allow motor to cool for 15-20 minutes before restarting. Ensure produce is fed gradually.
Low juice yield or wet pulp.	Incorrect speed setting; filter basket clogged; produce too soft.	Use Speed 2 for harder produce. Clean the filter basket thoroughly. For very soft produce, consider blending or using a different juicing method if yield is unsatisfactory.
Vibration or excessive noise.	Filter basket not properly seated; uneven load; damaged filter basket.	Switch off and unplug. Reassemble the filter basket, ensuring it is firmly seated. Feed produce evenly. Inspect filter basket for damage; replace if necessary.

7. SPECIFICATIONS

Technical details for the Braun J700 Multiquick 7 Juicer.

Feature	Detail
Model Number	J700
Power	1000 Watts
Voltage	220-240 Volts
Frequency	50 Hz
Number of Speeds	2
Juice Jug Capacity	1.25 Liters
Pulp Container Capacity	2 Liters
Feed Chute Diameter	75 mm
Product Dimensions (L x W x H)	12 x 16 x 14 inches (approximate)
Item Weight	10.98 pounds (approximate)
Material	High-gloss plastic body with stainless steel accents
Care Instructions	Dishwasher Safe parts

8. WARRANTY AND SUPPORT

Braun products are manufactured to the highest standards of quality, reliability, and performance. In the unlikely event that your Braun J700 Multiquick 7 Juicer requires service, please refer to the warranty card included with your purchase for specific terms and conditions.

For further assistance, product registration, or to locate an authorized service center, please visit the official Braun website or contact your local Braun customer service representative. Keep your proof of purchase for warranty claims.

Online Support: www.braun.com

