

[Manuals.plus](#) /

› [Lorell](#) /

› Lorell LLR60998 LCD Wall/Alarm Clock User Manual

Lorell LLR60998

Lorell LLR60998 LCD Wall/Alarm Clock User Manual

Model: LLR60998

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Lorell LLR60998 LCD Wall/Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The Lorell LLR60998 LCD Wall/Alarm Clock, showcasing its digital display with time, date, temperature, and moon phase. The clock features a black frame and a clear LCD screen.

IMPORTANT SAFETY INFORMATION

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Use only the specified battery type (1 AA battery).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Verify that all items are present:

- Lorell LLR60998 LCD Wall/Alarm Clock (1 unit)
- User Manual (this document)

Note: 1 AA battery is required for operation and is not included.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover.
3. Insert one (1) AA battery, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover.



Image: The rear view of the Lorell LLR60998 clock, highlighting the battery compartment. This is where the AA battery should be inserted for power.

2. Initial Power-On

Upon battery installation, the clock will power on and display default settings. You may need to adjust the time zone or other settings as described in the "Operating" section.

3. Mounting Options

The Lorell LLR60998 clock can be placed on a flat surface or mounted on a wall.

- **For Wall Mounting:** Use a suitable screw (not included) and anchor (if necessary) in your desired wall location. Hang the clock using the keyhole slot on the back. Ensure the clock is securely fastened before releasing.
- **For Desk/Table Placement:** The clock is designed to stand upright on a flat surface.



Image: A visual representation of the Lorell LLR60998 clock with its dimensions (approximately 10.25 inches wide by 7 inches high) indicated, useful for planning placement.

OPERATING INSTRUCTIONS

The clock features several buttons, typically located on the back or side, for setting time, alarm, and other functions. Refer to the diagram below for button identification (if available on product, otherwise general description).



Image: The front view of the Lorell LLR60998 LCD Wall/Alarm Clock, showing its sleek black frame and the large, unlit LCD screen before activation.

1. Setting the Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is activated (e.g., hours flashing).
2. Use the **UP** or **DOWN** buttons to adjust the flashing value (hours, minutes, year, month, day).
3. Press **MODE** again to confirm the setting and move to the next adjustable item.
4. Continue until all time and date settings are complete.

2. Setting the Alarm

The alarm function works for weekdays and weekends and includes a snooze feature.

1. Press the **ALARM** button to enter alarm setting mode. The alarm time will flash.
2. Use the **UP** or **DOWN** buttons to set the desired alarm hour and minute.
3. Press **ALARM** again to confirm.
4. To activate/deactivate the alarm, press the **ALARM ON/OFF** button (or similar). An alarm icon will appear on the display when active.

5. When the alarm sounds, press the **SNOOZE** button to temporarily silence it. The alarm will sound again after a few minutes. To turn off the alarm completely, press any other button.

3. Temperature Display

The clock displays temperature in either Fahrenheit (°F) or Celsius (°C).

- To switch between Fahrenheit and Celsius, locate the **°C/°F** button (or similar) and press it.
- The clock also features a bar chart showing the temperature history for the last 12 hours. This display updates automatically.

4. Moon Phase and Week Display

The clock automatically calculates and displays the current moon phase and the week of the year. These features do not require manual adjustment once the date is set correctly.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AA battery when the display becomes dim or functions become erratic. Always replace with a new, high-quality AA battery.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery. Incorrect battery installation.	Replace the AA battery with a new one. Ensure correct polarity.
Time is incorrect.	Time not set correctly.	Refer to "Setting the Time and Date" in the Operating Instructions.
Alarm does not sound.	Alarm is not activated. Alarm time is incorrect.	Ensure the alarm is turned ON (alarm icon visible). Verify the alarm time setting.
Temperature reading seems inaccurate.	Clock placed near a heat source or vent.	Relocate the clock to an area with stable ambient temperature.

SPECIFICATIONS

- Model:** LLR60998
- Brand:** Lorell
- Display Type:** Digital LCD
- Dimensions:** 10.25" W x 7" H (26.03 cm x 17.78 cm)
- Power Source:** 1 x AA Battery (not included)
- Material:** ABS Plastic (casing), Plastic (lens)
- Color:** Silver/Black
- Features:** Time, Date, Day of Week, Temperature (°F/°C), 12-hour Temperature History Bar Chart, Moon Phase, Week of Year, Alarm with Snooze

Mounting: Wall Mount or Desk/Tabletop

Indoor/Outdoor Usage: Indoor

WARRANTY INFORMATION

This Lorell LLR60998 LCD Wall/Alarm Clock comes with a **5-year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or improper installation. For warranty service, please retain your proof of purchase and contact Lorell customer support.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or warranty inquiries, please visit the official Lorell website or contact their customer service department. Contact information can typically be found on the manufacturer's packaging or website. **Lorell Official Website:** [Lorell Store on Amazon](#) (for general brand information)