

[Manuals.plus](#) /

› [Luis Enrique](#) /

› Luis Enrique - Ciclos Audio CD User Manual

Luis Enrique Ciclos Audio CD (ASIN: B006K1ASXC)

Luis Enrique - Ciclos Audio CD User Manual

Model: Ciclos Audio CD (ASIN: B006K1ASXC)

PRODUCT OVERVIEW



This image displays the album cover for 'Ciclos' by Luis Enrique. It features the artist, Luis Enrique, seated at a table, with the album title 'Ciclos' and his name 'Luis Enrique' prominently displayed.

The Luis Enrique 'Ciclos' Audio CD marks the return of "El Príncipe de la Salsa" after a 10-year hiatus. This album, produced by Sergio George, is a 2-time Latin GRAMMY Award winner, recognized as the 2009 Tropical Album of the Year and featuring the 2009 Tropical Song of the Year, "Yo No Sé Mañana." The album reflects Luis Enrique's personal evolution, with each song carrying significant meaning derived from his life experiences. It showcases his signature sound and thought-provoking lyrics, bringing his artistic journey full circle.

SETUP

To begin enjoying your Luis Enrique 'Ciclos' Audio CD, ensure you have a compatible audio playback device. This includes, but is not limited to, a dedicated CD player, a car stereo system with CD playback capability, or a computer equipped with a CD-ROM or DVD-ROM drive. No complex assembly or installation is required for the CD itself.

1. Verify your playback device is powered on and functioning correctly.
2. Ensure the disc tray or slot is accessible and clear of any obstructions.

OPERATING INSTRUCTIONS

Playing the 'Ciclos' Audio CD is straightforward. Follow these steps for optimal listening:

- 1. Insert the CD:** Gently open the disc tray or slot of your audio playback device. Hold the 'Ciclos' CD by its edges and carefully place it onto the spindle, ensuring the label side (the side with the album art and text) faces upwards. For slot-loading players, gently push the disc into the slot until the mechanism pulls it in.
- 2. Close the Tray:** If your device has a disc tray, press the 'Close' button or gently push the tray back into the device.
- 3. Select Input:** On your audio system, select the appropriate input source, typically labeled "CD," "Disc," or "Aux."
- 4. Start Playback:** Press the 'Play' button on your device or remote control. The album should begin playing from the first track.
- 5. Navigation:** Use the 'Next Track' (>>|) and 'Previous Track' (|<<) buttons to skip between songs. The 'Pause' (||) button will temporarily stop playback, and 'Stop' (■) will end playback.

The 'Ciclos' album contains 10 tracks, offering a complete musical experience.

MAINTENANCE

Proper care of your Audio CD will help preserve its sound quality and extend its lifespan:

- **Handling:** Always handle the CD by its outer edges or the center hole. Avoid touching the shiny playing surface to prevent fingerprints, dust, and scratches.
- **Storage:** Store the CD in its original jewel case or a dedicated protective sleeve when not in use. This protects it from physical damage and environmental factors.
- **Environment:** Keep the CD away from direct sunlight, high temperatures, and excessive humidity. These conditions can warp the disc or damage the data layer.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (such as a microfiber cloth). Always wipe from the center of the disc outwards in a straight line, never in a circular motion. Do not use abrasive materials, harsh chemicals, or solvents.

TROUBLESHOOTING

If you encounter issues while playing your 'Ciclos' Audio CD, consider the following common solutions:

Problem	Possible Cause / Solution
CD Not Playing / No Sound	<ul style="list-style-type: none">• Ensure the CD is inserted correctly (label side up).• Verify your playback device is set to the correct input source (e.g., "CD" or "Disc").• Check if the CD is clean and free of smudges or debris.• Confirm the volume on your playback device and amplifier/speakers is turned up.
Skipping or Stuttering Playback	<ul style="list-style-type: none">• Clean the disc surface gently with a soft, lint-free cloth, wiping from the center outwards.• Inspect the disc for deep scratches or cracks. Severely damaged discs may not play correctly.• Try playing the CD in a different compatible device to determine if the issue is with the disc or the player.

Problem	Possible Cause / Solution
Disc Tray Not Opening/Closing	<ul style="list-style-type: none">• Ensure the playback device is powered on.• Check for any physical obstructions in the disc tray mechanism.• Consult your playback device's user manual for specific troubleshooting steps.

SPECIFICATIONS

Feature	Detail
Product Type	Audio CD
Artist	Luis Enrique
Album Title	Ciclos
Label	Atlantic
ASIN	B006K1ASXC
Number of Discs	1
Product Dimensions	5.5 x 5 x 0.25 inches
Item Weight	3.12 ounces
Date First Available	December 9, 2011

WARRANTY AND SUPPORT

This Audio CD is a physical media product. For any issues related to the physical condition of the disc upon receipt, please contact the retailer from whom you purchased the product directly, adhering to their return and exchange policies. For content-related inquiries or information about the artist, Luis Enrique, and the record label, Atlantic, please refer to official artist websites, record label resources, or reputable music databases.