

[manuals.plus](#) /

› [Oster](#) /

› [Oster FoodSaver FreshSaver Handheld Rechargeable Sealing System FSFRSH0051-P00 User Manual](#)

## Oster FSFRSH0051-P00

# Oster FoodSaver FreshSaver Handheld Rechargeable Sealing System User Manual

Model: FSFRSH0051-P00

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Oster FoodSaver FreshSaver Handheld Rechargeable Sealing System, model FSFRSH0051-P00. Please read this guide thoroughly before first use and retain it for future reference. This system is designed to remove air from FoodSaver vacuum zipper bags and containers, helping to preserve food freshness.



**Figure 1:** The Oster FoodSaver FreshSaver Handheld Rechargeable Sealing System. This image displays the compact, white handheld device, ready for use in vacuum sealing food.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not immerse the appliance, charging base, or power cord in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Use only on dry, stable surfaces.
- Do not use outdoors.
- Do not use attachments not recommended by the manufacturer.
- Do not use for purposes other than intended.

## PACKAGE CONTENTS

---

Please check the contents of your package. It should include:

- Oster FoodSaver FreshSaver Handheld Rechargeable Sealing System
- Charging Base
- Power Adapter
- FoodSaver Vacuum Zipper Bags (various sizes)
- Instruction Manual (this document)

## SETUP AND CHARGING

---

1. **Initial Charge:** Before first use, fully charge the FreshSaver Handheld Sealing System. Place the handheld unit onto the charging base. Connect the power adapter to the charging base and then plug it into a standard electrical outlet.
2. **Charging Indicator:** The indicator light on the unit will illuminate during charging. It will change color or turn off when the unit is fully charged. Refer to the specific indicator behavior described in your product's quick start guide if available.
3. **Placement:** Ensure the charging base is placed on a dry, flat surface away from heat sources or direct sunlight.

## OPERATING INSTRUCTIONS

---

### Sealing FoodSaver Vacuum Zipper Bags

1. **Prepare the Bag:** Place food into a FoodSaver Vacuum Zipper Bag. Ensure the zipper is securely closed. Lay the bag flat on a clean, dry surface.
2. **Locate the Air Valve:** Identify the circular air valve on the bag.
3. **Position the Sealer:** Press the nozzle of the FreshSaver Handheld Sealing System firmly and flatly over the air valve on the bag. Ensure a tight seal between the nozzle and the valve.
4. **Start Sealing:** Press the ON button on the handheld unit. The unit will begin to remove air from the bag.
5. **Monitor Sealing:** Continue holding the unit in place until the bag becomes taut around the food and the unit automatically stops, or until you observe sufficient air removal.
6. **Release:** Once sealing is complete, release the ON button and lift the unit from the bag.

### Sealing FoodSaver Containers

1. **Prepare the Container:** Place food into a FoodSaver vacuum-sealable container. Securely close the lid.
2. **Locate the Accessory Port:** Identify the accessory port on the container lid.
3. **Connect Accessory Hose (if applicable):** If your FreshSaver system includes an accessory hose, connect one end to the handheld unit's accessory port (if present) and the other end to the container's accessory port. If no hose is present, the handheld unit may directly seal certain containers.

- 4. Start Sealing:** Press the ON button on the handheld unit. The unit will begin to remove air from the container.
- 5. Monitor Sealing:** Continue holding the unit (or hose connection) in place until the unit automatically stops, indicating a vacuum has been achieved.
- 6. Release:** Release the ON button and disconnect the unit/hose.

## MAINTENANCE AND CLEANING

- Cleaning the Unit:** Wipe the exterior of the handheld unit and charging base with a damp cloth. Do not immerse the unit or charging base in water.
- Cleaning the Nozzle:** If food particles accumulate in the vacuum nozzle, gently wipe them away with a damp cloth or a cotton swab. Ensure the nozzle is clean and dry before next use to maintain an effective seal.
- Storage:** Store the FreshSaver Handheld Sealing System and its charging base in a clean, dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is depleted.	Place the unit on the charging base and ensure it is plugged in. Allow sufficient time for charging.
Unit does not create a vacuum.	Nozzle not properly sealed over the bag valve/container port.	Ensure the nozzle is pressed firmly and flatly over the valve/port. Check for any obstructions.
Bag does not stay vacuumed.	Bag zipper is not fully closed or bag is damaged.	Re-seal the zipper completely. Inspect the bag for punctures or tears. Use a new bag if necessary.
Container does not stay vacuumed.	Container lid is not properly sealed or container is damaged.	Ensure the lid is securely closed. Check the container and lid for cracks or damage.

## SPECIFICATIONS

- Model Number:** FSFRSH0051-P00
- Product Dimensions:** 5.8 x 3.3 x 8.5 inches
- Item Weight:** 14.9 ounces
- Manufacturer:** Oster
- Power Source:** Rechargeable Battery (1 Product Specific battery required)

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Oster website. Keep your purchase receipt as proof of purchase.

[Visit the Oster Store on Amazon](#) for more products and information.



