

[Manuals.plus](#) /

› [Radio Flyer](#) /

› Radio Flyer Deluxe Steer & Stroll Kids Tricycle User Manual

Radio Flyer 53V

Radio Flyer Deluxe Steer & Stroll Kids Tricycle User Manual

Model: 53V

INTRODUCTION

The Radio Flyer Deluxe Steer & Stroll Kids Tricycle is designed to provide a fun and engaging riding experience for children aged 2 to 5 years. This versatile tricycle offers two modes of use: parent-controlled steering for younger riders and independent pedaling for older, more confident children. Its durable all-steel construction ensures long-lasting use, while thoughtful features enhance comfort and convenience.



Image: The Radio Flyer Deluxe Steer & Stroll Tricycle in parent-push mode.

SAFETY INFORMATION

WARNING: Please read all safety instructions provided in the included Installation Manual (PDF) before assembly and use. Adult supervision is required at all times.

- Ensure all parts are securely fastened before each use.
- Always use in a safe, open area away from traffic, steep inclines, and water.
- Children should wear appropriate safety gear, including a helmet, when riding.
- Do not allow more than one rider at a time.



Image: Child riding the tricycle with a helmet, emphasizing safety.

SETUP AND ASSEMBLY

Assembly of the Radio Flyer Deluxe Steer & Stroll Tricycle is required. For detailed, step-by-step instructions, please refer to the official Installation Manual (PDF) available at <https://manuals.plus/m/2c59f4b2b283588d59d6bf07c6964d5de5426aa52ac53bd5c71c292db6fb3fcb>.

Key Assembly Features:

- **Adjustable Seat:** The seat can be adjusted to accommodate your child's growth, ensuring a comfortable fit for ages 2 to 5 years.
- **Removable Push Handle:** The adjustable push handle can be easily attached for parent-controlled steering or removed when your child is ready to ride independently.
- **Pedal Lock:** Pedals can be locked into footrests, allowing the rider to rest their feet while being pushed.



Image: Adjustable seat mechanism.



Image: Detaching the parent push handle.

OPERATING INSTRUCTIONS

Parent-Controlled Steer Mode:

- Attach the adjustable push handle securely to the rear of the tricycle.
- Ensure the pedals are locked into the footrest position if your child is not yet pedaling independently.
- Use the push handle to steer and guide the tricycle. The handle provides direct steering control over the front wheel.

Parent-controlled steering



Image: Parent-controlled steering in action.



Image: Pedals in footrest position.

Independent Ride Mode:

- Remove the adjustable push handle.
- Unlock the pedals from the footrest position, allowing your child to pedal freely.
- Encourage your child to use the handlebars for steering and the pedals for propulsion.
- The tricycle features a small bell on the handlebars for added fun and to alert others.

For 2 - 5 years



Image: Child riding independently.

Storage Bin:

- The tricycle includes a covered storage bin located at the rear.
- This bin is suitable for carrying small toys or essentials during rides.

Rear storage bin



Image: Rear storage bin with items.

MAINTENANCE

- **Regular Inspection:** Periodically check all nuts, bolts, and screws to ensure they are tight. Tighten any loose fasteners.
- **Cleaning:** Clean the tricycle with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Lubrication:** Apply a small amount of lubricant to moving parts like the wheel axles and pedal mechanisms if they become stiff.
- **Storage:** Store the tricycle in a dry, covered area to protect it from weather elements and prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tricycle wobbles or feels unstable	Loose fasteners or uneven ground	Check and tighten all nuts and bolts. Ensure use on a flat, stable surface.
Pedals are stiff or not turning smoothly	Lack of lubrication or debris	Clean around the pedal mechanism. Apply a small amount of lubricant to the moving parts.
Push handle does not steer the front wheel	Handle not properly engaged or connected	Ensure the push handle is fully inserted and locked into its steering mechanism. Refer to the assembly manual.

SPECIFICATIONS

- **Product Dimensions:** 28 x 21.5 x 19 inches
- **Item Weight:** 14.6 pounds
- **Item Model Number:** 53V
- **Manufacturer Recommended Age:** 24 months - 5 years
- **Maximum Weight Capacity:** Up to 49 pounds
- **Material:** All-steel seamless body, molded wheels

WARRANTY AND SUPPORT

For additional questions, support, or concerns regarding your Radio Flyer Deluxe Steer & Stroll Tricycle, please contact our customer service team:

- **Website:** <https://www.radioflyer.com/customer-service/>
- **Phone:** 1 (800) 621-7613

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question