

[manuals.plus](#) /

› [Surker](#) /

› [Surker RFC-508 Cordless Ceramic Hair Clipper Instruction Manual](#)

Surker RFC-508

Surker RFC-508 Cordless Ceramic Hair Clipper Instruction Manual

Model: RFC-508



INTRODUCTION

Thank you for purchasing the Surker RFC-508 Cordless Ceramic Hair Clipper. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read these instructions carefully before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not immerse the appliance in water or any other liquid.
- Always unplug the appliance immediately after use and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.

- Do not use an extension cord with this appliance.
- Ensure the voltage specified on the charger matches your local power supply.

PRODUCT COMPONENTS



Image 1: The Surker RFC-508 Cordless Ceramic Hair Clipper shown with its charging adapter, oil bottle, cleaning brush, and various comb attachments. The main clipper unit is red and silver, featuring an adjustable blade length dial and power switch. A smaller detail trimmer is also depicted.

The Surker RFC-508 Cordless Ceramic Hair Clipper package typically includes:

- Main Hair Clipper Unit
- Charging Adapter
- Cleaning Brush
- Lubricating Oil
- Multiple Comb Attachments (various lengths)
- (Potentially) Additional Battery
- (Potentially) Detail Trimmer

Note: Actual contents may vary slightly based on the specific product package.

SETUP

1. Initial Charging

1. Before first use, ensure the clipper is fully charged.
2. Connect the charging adapter to the clipper's charging port.
3. Plug the adapter into a suitable electrical outlet (100-240V AC, 50/60Hz).
4. The charging indicator light will illuminate (if present) to show charging is in progress.
5. Allow the clipper to charge for approximately 8-12 hours for the first charge. Subsequent charges may take less time.
6. Once fully charged, disconnect the adapter from the outlet and the clipper.

2. Attaching Comb Guides

- Select the desired comb attachment for your preferred hair length.
- Align the comb guide with the clipper blade and slide it firmly into place until it clicks.
- To remove, gently push the comb guide upwards and away from the blade.

3. Blade Adjustment

The clipper features an adjustable blade length dial (often located on the side or front of the clipper body). Rotate this dial to fine-tune the cutting length without a comb attachment, or to adjust the base length when a comb is attached.

OPERATING INSTRUCTIONS

1. Before Clipping

- Ensure hair is clean, dry, and free of tangles.
- Comb hair in the direction of growth.
- Apply a small amount of lubricating oil to the blades before each use for optimal performance and longevity.

2. Turning On/Off

Locate the power switch (usually a slide switch) on the clipper body. Slide it to the "ON" position to start the clipper and to the "OFF" position to turn it off.

3. Hair Clipping Techniques

- Always start with a longer comb attachment than you think you need, and gradually reduce the length if desired.
- Hold the clipper with the blade teeth pointing upwards, flat against the head.
- Move the clipper slowly against the direction of hair growth.
- Overlap each stroke to ensure an even cut.
- For detailing or outlining, remove the comb attachment and use the bare blade, being careful around ears and neckline.

MAINTENANCE

1. Cleaning After Each Use

1. Turn off the clipper and disconnect it from the power source.
2. Remove any comb attachments.
3. Use the provided cleaning brush to brush away loose hairs from the blades and the clipper body.
4. For thorough cleaning, the blade set can often be detached. Consult the specific instructions for blade removal if applicable to your model.
5. Do not rinse the clipper under water unless explicitly stated as waterproof.

2. Oiling the Blades

- After cleaning and before each use, apply 1-2 drops of the provided lubricating oil to the blades.
- Turn the clipper on for a few seconds to allow the oil to distribute evenly.
- Wipe off any excess oil with a soft cloth.
- Regular oiling ensures smooth operation, reduces friction, and prolongs blade life.

3. Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is discharged.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull or dirty. Blades are not oiled.	Clean and oil the blades. If problem persists, blades may need replacement.
Clipper makes unusual noise.	Blades are not properly aligned or oiled.	Ensure blades are clean, oiled, and correctly seated.
Clipper gets hot during use.	Extended use or lack of lubrication.	Allow the clipper to cool down. Ensure blades are properly oiled. Avoid continuous long periods of operation.

If you encounter issues not listed here or if the problem persists after attempting the solutions, please contact customer support.

SPECIFICATIONS

- Model:** RFC-508
- Brand:** Surker
- Blade Material:** Ceramic
- Power Source:** Cordless, Rechargeable
- Input Voltage (Charger):** 100-240V AC, 50/60Hz
- Special Features:** Cordless operation, Rechargeable battery, Ceramic blades
- Dimensions:** Approximately 27.6 x 21.2 x 6.2 cm (Package dimensions)
- Weight:** Approximately 819.99 grams (Package weight)
- Manufacturer Model Number:** 20111214_SML

WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Retain your proof of purchase for any warranty claims.

The warranty typically covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized service, or normal wear and tear.

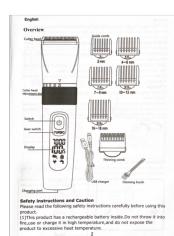
CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact your retailer or the manufacturer's customer service department.

Please have your model number (RFC-508) and proof of purchase ready when contacting support.

Note: Specific contact details may be found on the product packaging or the manufacturer's official website.

Related Documents - RFC-508

 <p>HATTEKER RFC-695 Electric Hair Clipper User Manual and Safety Guide Comprehensive user manual for the HATTEKER RFC-695 Electric Hair Clipper, covering features, safety instructions, charging, usage, cleaning, maintenance, and environmental disposal.</p>
 <p>Anko Professional Hair Cut Kit RFC-676A & RFC-661 User Manual User manual for the Anko Professional Hair Cut Kit, models RFC-676A & RFC-661. Provides comprehensive safety guidelines, operating instructions for both the hair clipper and trimmer, charging procedures, maintenance tips, battery care, technical specifications, and warranty information.</p>
 <p>DigiQuest GROOMY Cordless Hair and Beard Trimmer User Manual (Model: HOME0042) Comprehensive user manual for the DigiQuest GROOMY cordless hair and beard trimmer (Model: HOME0042). Includes safety instructions, operating procedures, maintenance, cleaning, and technical specifications.</p>
 <p>DigiQuest GROOMY HOME0042 Cordless Hair Clipper & Beard Trimmer User Manual Comprehensive user manual for the DigiQuest GROOMY HOME0042 cordless hair clipper and beard trimmer, covering safety, operation, maintenance, and technical specifications.</p>
 <p>Manuale d'Uso DIGIQuest GROOMY HOME0042: Tagliacapelli e Regolabarba Senza Filo Guida completa all'uso, manutenzione e sicurezza del tagliacapelli e regolabarba senza fili DIGIQuest GROOMY (modello HOME0042). Scopri come ottenere le migliori prestazioni dal tuo apparecchio.</p>
 <p>Romanda Hair Clippers and Finishing Trimmers Kit User Manual User manual for the Romanda Hair Clippers and Finishing Trimmers Kit, including product features, usage instructions, charging information, maintenance tips, troubleshooting, and warranty details for models RFC-676 and RFC-667.</p>

