



[Manuals.plus](#) /

› [Famous Brand Furniture](#) /

› User Manual for Gray Reclining Loveseat w/ Console - Famous Brand Furniture Model 3420167

Famous Brand Furniture 3420167

User Manual for Gray Reclining Loveseat w/ Console

MODEL: 3420167 | BRAND: FAMOUS BRAND FURNITURE

Introduction

Thank you for choosing the Gray Reclining Loveseat with Console. This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your new furniture. Please read this manual thoroughly before use to ensure proper handling and longevity of your product.

Setup and Assembly

Your reclining loveseat is designed for easy setup. Follow these steps to prepare your loveseat for use:

- Unpacking:** Carefully remove all packaging materials from the loveseat. Inspect for any shipping damage. Retain packaging for a short period in case of return.
- Placement:** Position the loveseat in your desired location, ensuring there is adequate space behind and in front for the reclining mechanism to fully extend without obstruction. Allow at least 10-12 inches (25-30 cm) from a wall for full recline.
- Leg Attachment (if applicable):** If the legs are not pre-attached, locate them in the packaging. Screw them firmly into the designated threaded inserts at the bottom corners of the loveseat.
- Console Setup:** The central console is integrated. Ensure the lid opens and closes smoothly and the cup holders are clear of debris.



This image displays the full view of the Gray Reclining Loveseat, featuring two reclining seats, padded armrests, and a central console with two integrated cup holders and a storage compartment. The loveseat is upholstered in a gray DuraBlend/Match material.

Operating Instructions

This loveseat features manual reclining mechanisms and a functional center console.

- **Reclining Mechanism:**

To recline, locate the lever on the side of each seat (typically on the outer side). Pull the lever to release the footrest. Lean back gently to recline the backrest to your desired position. To return to the upright position, push down on the footrest with your legs while simultaneously leaning forward. The backrest will return to its original position.

- **Center Console:**

The center console provides convenient storage and cup holders. Lift the padded lid to access the storage compartment. Use the integrated cup holders for beverages. Ensure the lid is closed securely when not in use.

Care and Maintenance

Proper care will extend the life and appearance of your loveseat. The upholstery features DuraBlend/Match material.

- **General Cleaning:**

For routine cleaning, dust the surface with a soft, dry cloth. For light spills, immediately blot with a clean, absorbent cloth. Avoid rubbing, as this can spread the stain.

- **Spot Cleaning (DuraBlend/Match):**

For more stubborn stains, use a mild soap solution (e.g., diluted dish soap) on a clean, damp cloth. Test in an inconspicuous area first. Gently wipe the stained area, then wipe with a clean, damp cloth to remove soap residue. Allow to air dry completely. Do not use harsh chemicals, abrasive cleaners, or excessive water.

- **Mechanism Care:**

Periodically check all bolts and screws to ensure they are tight. Do not lubricate the reclining mechanism unless specifically instructed by the manufacturer, as this can attract dust and debris.

- **Sunlight Exposure:**

Avoid prolonged exposure to direct sunlight, as this can cause fading and deterioration of the upholstery material.

Troubleshooting

If you encounter issues with your loveseat, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Reclining mechanism is stiff or not engaging.	Obstruction, loose connection, or mechanism needs to be reset.	Check for objects obstructing the mechanism. Ensure the loveseat is not pushed too close to a wall. Fully extend and retract the mechanism several times.
Squeaking noises during operation.	Loose bolts or friction points.	Check and tighten any visible loose bolts. If squeaking persists, contact customer support. Do not apply lubricants unless advised.
Console lid does not close properly.	Object inside console, hinge issue.	Remove any items from the console. Inspect hinges for damage or misalignment.

If the problem persists after attempting these solutions, please contact the retailer or manufacturer for further assistance.

Product Specifications

Feature	Detail
Model Number	3420167
Brand	Famous Brand Furniture
Upholstery Material	DuraBlend®/Match (DuraBlend® in seating areas, Polyurethane elsewhere)
Color	Grey
Product Dimensions (L x W x H)	203.2 x 99.06 x 104.14 cm (80 x 39 x 41 inches)
Features	Reclining seats, Padded arms, Bustle back design, Integrated storage console with cup holders

Warranty Information

Specific warranty details for this product are not included in this manual. Please refer to the warranty card provided with your purchase, or contact the retailer or manufacturer directly for comprehensive warranty terms and conditions.

Customer Support

For further assistance, parts, or service inquiries, please contact the retailer from whom you purchased this product. You may also visit the official website of Famous Brand Furniture or refer to your purchase documentation for direct manufacturer contact information.