

## Evenflo 61731198

# Evenflo ExerSaucer Jump and Learn Jumper, Jungle Quest Instruction Manual

Model: 61731198 | Brand: Evenflo

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions before assembly and use of the Evenflo ExerSaucer Jump and Learn Jumper. Keep these instructions for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **Age and Weight Limits:** This product is intended for infants approximately 4 months of age and older, who can hold their head up unassisted. Maximum weight recommendation is 26 pounds (11.8 kg). Maximum height is 36 inches (91 cm).
- **Supervision:** Never leave child unattended. Always keep child in view while in the ExerSaucer.
- **Fall Hazard:** Prevent falls. Do not use near stairs, steps, or uneven surfaces. Ensure the product is placed on a flat, level surface.
- **Choking Hazard:** Regularly inspect all toys and components for damage. Discard or replace any broken parts immediately.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before each use.
- **Battery Safety:** Electronic toys require batteries. Follow battery installation instructions carefully. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries during long periods of non-use.

## 2. WHAT'S IN THE BOX

---

The Evenflo ExerSaucer Jump and Learn Jumper, Jungle Quest includes the following components:

- 1 Activity Center (main frame, seat, and activity tray)
- Various attachable toys and accessories (e.g., elephant toy, ABC flip book, monkey toy, giraffe toy, bird toy, hippo toy)

### 3. SETUP INSTRUCTIONS

---

Follow these steps to assemble your Evenflo ExerSaucer Jump and Learn Jumper:

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components listed in Section 2 are present.
2. **Assemble Base:** Connect the base frame components according to the diagrams in your included manual. Ensure all locking mechanisms click into place.
3. **Attach Upright Supports:** Securely attach the upright support columns to the base. Verify they are firmly seated and locked.
4. **Install Activity Tray:** Place the activity tray onto the upright supports, ensuring it locks into position.
5. **Insert Seat:** Carefully insert the fabric seat into the designated opening in the activity tray. Ensure all straps and fasteners are correctly attached and secure.
6. **Attach Toys:** Attach the various interactive toys to the activity tray and overhead arches. Many toys are designed to be removable and interchangeable.
7. **Battery Installation:** Install the required AAA batteries (not included) into the electronic toys as per their individual instructions.

A Phillips head screwdriver is required for assembly.



Image: A baby happily playing in the Evenflo ExerSaucer Jump and Learn Jumper, Jungle Quest edition. The jumper features various colorful animal-themed toys and a zebra-patterned seat.

## 4. OPERATING INSTRUCTIONS

---

The Evenflo ExerSaucer Jump and Learn Jumper provides a secure and engaging environment for your child's development.

### 4.1 Interactive Toys

The activity center features over 17 activities designed to stimulate your child's senses and promote developmental milestones. These include:

- **Elephant Toy:** Features lights and animal sounds.
- **ABC Flip Book:** Lights up when pages are turned, introducing letters and animals.
- **Monkey Toy:** A soft, removable monkey that can be taken with baby.
- **Giraffe Toy:** Features rings for grasping and manipulation.
- **Bird Toy:** Offers spinning and tactile engagement.
- **Hippo Toy:** Contains beads for rattling and visual stimulation.

- **Mirror:** Encourages self-discovery and interaction.



Image: A close-up view of the elephant toy on the activity tray, showing its light-up and sound features.



Image: A close-up view of the ABC flip book toy on the activity tray, demonstrating its light-up feature when pages are turned.

#### **4.2 360-Degree Seat Rotation**

The seat rotates 360 degrees, allowing your child to access all the surrounding toys and activities, promoting exploration and engagement.

#### **4.3 Bounce Base**

The unique balance base provides a soft landing pad and encourages bouncing, which helps develop your baby's leg muscles and gross motor skills.



Image: A close-up view of the bounce base, showing the textured surface designed for baby's feet to push off and bounce.

## 5. ADJUSTMENTS

---

### 5.1 Height Adjustment

The ExerSaucer features three height settings to grow with your child. To adjust the height:

1. Locate the height adjustment mechanism on the upright support columns.
2. Press the release button or lever (refer to your specific model's diagram for exact location).
3. Slide the activity tray and seat assembly up or down to the desired height setting.
4. Ensure the mechanism locks securely into place at the new height.



Image: A hand demonstrating how to adjust the height of the ExerSaucer by pressing a button and sliding the seat assembly up or down.

## 6. MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and hygiene of your ExerSaucer.

- **Seat Cushion:** The seat cushion is machine-washable. Remove it from the activity center and wash on a gentle cycle with mild detergent. Air dry or tumble dry on low heat.
- **Toys and Tray:** Wipe down plastic toys and the activity tray with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not immerse electronic toys in water.
- **Frame:** Wipe the frame with a damp cloth as needed.



Image: A split image showing a seat cushion being placed into a washing machine on the left, and a hand wiping down a plastic toy with a cloth on the right, illustrating cleaning instructions.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Evenflo ExerSaucer, please refer to the following common solutions:

- **Electronic Toys Not Working:** Check if batteries are correctly installed and not depleted. Replace with fresh batteries if necessary. Ensure the on/off switch is in the 'on' position.
- **Seat Not Rotating Smoothly:** Ensure the seat is correctly installed and not obstructed by any debris.
- **Product Feels Unstable:** Verify that all assembly steps were followed correctly and all locking mechanisms are engaged. Ensure the product is on a flat, level surface.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	Evenflo

Feature	Detail
Model Number	61731198
Age Range Description	4 Months and up (child must be able to hold head up unassisted)
Maximum Weight Recommendation	26 Pounds (11.8 kg)
Maximum Height	36 Inches (91 cm)
Item Dimensions (L x W x H)	35"L x 35"W x 39"H (89 cm x 89 cm x 99 cm)
Item Weight	8.2 Kilograms
Material	100% Polyester (seat cushion), Plastic
Included Components	1 Activity Center

## 9. WARRANTY INFORMATION

---

For a period of 90 days from the original purchase of this Product, Evenflo warrants to the original end user (Purchaser) this Product (including any accessories) against defects in material or workmanship. Evenflo's sole obligation under this express limited warranty shall be, at Evenflo's option, to repair or replace any Product that is determined to be defective by Evenflo and determined to be covered by this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the Purchaser. Proof of purchase in the form of a receipted invoice or bill of sale evidencing that the Product is within the warranty period must be presented to obtain warranty service. This express limited warranty is extended by Evenflo ONLY to the original Purchaser of the Product and is not assignable or transferable to subsequent purchasers or end users of the Product.

## 10. SUPPORT

---

For warranty service or any questions regarding your Evenflo ExerSaucer Jump and Learn Jumper, please contact Evenflo's ParentLink Consumer Resource Center. Refer to the contact information provided in your product packaging or visit the official Evenflo website for assistance.