

[Manuals.plus](#) /

› [Westclox](#) /

› Westclox Travel Alarm Clock with Nap Timer – Model# 72001 (Non Foldable) User Manual

Westclox 72001

Westclox Travel Alarm Clock with Nap Timer – Model# 72001 User Manual

Model: 72001

PRODUCT OVERVIEW

The Westclox Travel Alarm Clock, Model 72001, is a compact and feature-rich device designed for both travel and home use. It boasts a large, easy-to-read LCD that displays the current time, day, date, alarm time, and temperature. For low-light conditions, an ultra-bright blue backlight can be activated on demand. The clock includes a super-loud alarm with adjustable volume and a dedicated nap alarm function for convenient short rests.

Key Features

- Large LCD Display
- Super Loud Alarm with Hi/Lo Volume Control
- Separate Nap Alarm Function
- Bright Blue Backlight on Demand
- Displays Day, Date, Alarm Time, and Temperature

Package Contents

- Westclox Travel Alarm Clock (Model 72001)
- User Manual (This document)

Note: Two AAA batteries are required for operation and are not included.

GETTING STARTED

Battery Installation

The Westclox Travel Alarm Clock requires two AAA batteries for power. Please ensure you have new batteries available before proceeding.

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, carefully observing the correct polarity (+ and -) as indicated inside the compartment.

Incorrect installation will prevent the clock from functioning.

4. Replace the battery compartment cover by sliding it upwards until it securely clicks into place.



Image: Back of the Westclox Travel Alarm Clock with the battery compartment visible. This is where two AAA batteries are inserted for power.

CONTROLS AND DISPLAY

To effectively use your Westclox Travel Alarm Clock, it is important to understand the function of each button and switch, as well as the information presented on the display.



Image: Front view of the Westclox Travel Alarm Clock. The large LCD displays the current time, day, date, alarm time, and temperature. Buttons for C/F, Hour/Month, Min/Date, 12/24 Year, and Nap are located below the screen.



Image: Side view of the Westclox Travel Alarm Clock, highlighting the ALARM HI/LO/OFF switch and the TIME/DATE/RUN switch for setting adjustments.



Image: Top view of the Westclox Travel Alarm Clock, featuring the large SNOOZE LIGHT button. Pressing this button activates the blue backlight and snoozes the alarm.

Front Panel Buttons

- **C/F:** Toggles the temperature display between Celsius and Fahrenheit.
- **HOUR/MONTH:** Used to adjust the hour or month during time/date setting.
- **MIN/DATE:** Used to adjust the minute or date during time/date setting.
- **12/24 YEAR:** Toggles between 12-hour and 24-hour time format; also used to set the year.
- **NAP:** Activates and sets the duration for the nap timer.

Side Switches

- **ALARM HI/LO/OFF:** Controls the alarm volume (High, Low) or turns the alarm off completely.
- **TIME/DATE/RUN:** Selects the mode for setting time, date, or normal operation.

Top Button

- **SNOOZE LIGHT:** Activates the blue backlight for a few seconds; also functions as the snooze button when the alarm sounds.

OPERATING INSTRUCTIONS

Setting the Time and Date

1. Slide the **TIME/DATE/RUN** switch on the side of the clock to the **TIME** position.
2. Press the **HOUR/MONTH** button repeatedly to set the current hour. Observe the AM/PM indicator for 12-hour format.
3. Press the **MIN/DATE** button repeatedly to set the current minute.
4. Press the **12/24 YEAR** button to toggle between 12-hour and 24-hour time formats.
5. To set the date, while in TIME setting mode, press **HOUR/MONTH** to set the month, then **MIN/DATE** to set the day,

and **12/24 YEAR** to set the year.

6. Once the time and date are correctly set, slide the **TIME/DATE/RUN** switch back to the **RUN** position for normal operation.

Setting the Alarm

1. Slide the **TIME/DATE/RUN** switch on the side of the clock to the **ALARM** position.
2. Press the **HOUR/MONTH** button repeatedly to set the desired alarm hour. Note the AM/PM indicator.
3. Press the **MIN/DATE** button repeatedly to set the desired alarm minute.
4. Slide the **TIME/DATE/RUN** switch back to the **RUN** position.
5. To activate the alarm, slide the **ALARM HI/LO/OFF** switch to either **HI** (high volume) or **LO** (low volume). An alarm icon will appear on the display, indicating the alarm is armed.

Using the Nap Timer

The nap timer provides a convenient way to set a short, independent alarm without altering your main alarm setting.

1. Press the **NAP** button on the front panel. The nap timer will activate, typically starting from 10 minutes.
2. Continue pressing the **NAP** button to cycle through desired nap durations (e.g., 10, 20, 30, 40, 50, 60 minutes).
3. The nap timer will count down and sound an alarm when it reaches zero.
4. To cancel the nap timer before it sounds, press the **NAP** button repeatedly until the display shows "00" or the nap icon disappears.

Using the Backlight

To illuminate the display for easy viewing in dark environments, press the large **SNOOZE LIGHT** button located on top of the clock. The blue backlight will activate for a few seconds and then automatically turn off.

Snooze Function

When the alarm sounds, press the **SNOOZE LIGHT** button on top of the clock to temporarily silence the alarm. The alarm will sound again after approximately 9 minutes.

Turning Off the Alarm

To turn off the alarm completely and prevent it from sounding again, slide the **ALARM HI/LO/OFF** switch to the **OFF** position. The alarm icon will disappear from the display.

MAINTENANCE

Cleaning

To clean your Westclox Travel Alarm Clock, use a soft, dry cloth. Do not use abrasive cleaners, chemical solvents, or strong detergents, as these may damage the clock's finish, display, or internal components.

Battery Replacement

When the display dims, the backlight becomes weak, or the alarm sound weakens, it is an indication that the batteries need to be replaced. Follow the battery installation steps outlined in the "Getting Started" section. Always replace both batteries at the same time with new AAA batteries to ensure optimal performance.

Storage

If the clock will not be used for an extended period, it is recommended to remove the batteries to prevent potential leakage and damage to the unit. Store the clock in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank or dim.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Alarm does not sound.	Alarm is not set, alarm volume is off, or nap timer is active.	Ensure alarm time is set and alarm icon is visible. Slide ALARM HI/LO/OFF switch to HI or LO . Check if nap timer is active and cancel if necessary.
Alarm is too quiet.	Alarm volume is set to low.	Slide the ALARM HI/LO/OFF switch to HI .
Time is incorrect.	Time was not set correctly or batteries were removed.	Reset the time following the "Setting the Time and Date" instructions.
Backlight does not work.	Batteries are low or dead.	Replace batteries.

SPECIFICATIONS

Feature	Detail
Model Number	72001
Brand	Westclox
Display Type	Digital LCD
Power Source	Battery Powered
Batteries Required	2 x AAA (Not Included)
Product Dimensions (L x W x H)	1.96 x 1.5 x 7.8 inches
Item Weight	3.87 ounces
Features	Large LCD Display, Super Loud Alarm, Separate Nap Alarm, Bright Blue Backlight on Demand, Day/Date, Alarm Time, Temperature Display (C/F)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Westclox Travel Alarm Clock Model 72001, please refer to the official Westclox website or contact their customer service directly. While specific warranty details are not provided in this manual, Westclox typically offers a limited warranty on their products covering manufacturing defects. Please retain your purchase receipt as proof of purchase.

For further assistance, you may visit the [Westclox Store on Amazon](#) or search for Westclox customer support online.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question