

[Manuals.plus](#) /

› [Snow Peak](#) /

› Snow Peak Landbreeze Duo Tent SD-210 Instruction Manual

Snow Peak SD-210

Snow Peak Landbreeze Duo Tent SD-210 Instruction Manual

Model: SD-210 | Brand: Snow Peak

1. INTRODUCTION

This 2-person dome tent features a unique frame structure. Designed for lightweight performance, the flysheet is made from 30D nylon ripstop fabric, which is very light yet reinforced with a grid-like ripstop pattern for enhanced tear strength. Its low weight makes it ideal for touring camps or solo camping where ample space is desired.

The most distinctive feature is its freestanding capability with just the frame and ground sheet. Even without the inner tent, covering it with the flysheet creates a compact and charming mini-shelter. It is sure to be useful in various scenarios, such as day camps, outdoor festivals when shade is needed, or beach outings. An all-rounder you'll find yourself choosing repeatedly.



Image: The Snow Peak Landbreeze Duo Tent, representing the brand's tent heritage.

2. PACKAGE CONTENTS

Verify that all the following components are included in your package:

- Main unit (Flysheets / Inner Tent)
- Main Frame
- Center Frame
- Ropes (1.5m x 6)
- Duralumin Y-pegs (x15)
- Frame Case
- Peg Case
- Repair Pipe
- Seam Grip Agent
- Carry Bag
- Instruction Manual

3. SAFETY INFORMATION

- **Fire Hazard:** Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material.
- **Ventilation:** Ensure adequate ventilation to prevent suffocation and condensation. Do not use fuel-burning appliances inside the tent without proper ventilation.
- **Weather Conditions:** Do not set up the tent in extreme weather conditions such as strong winds, heavy rain, or lightning.
- **Sharp Objects:** Keep sharp objects away from the tent fabric and poles to prevent damage.
- **Children:** Keep children away from the tent during setup and takedown. Do not allow children to play unsupervised inside the tent.

4. SETUP INSTRUCTIONS

Follow these steps to properly set up your Landbreeze Duo Tent:

1. **Prepare the Site:** Choose a flat, clear area free of sharp objects. Lay out the inner tent or ground sheet.
2. **Assemble the Poles:** Connect the sections of the main frame and center frame poles.
3. **Attach Poles to Inner Tent:** Insert the ends of the main frame poles into the grommets on the inner tent. Secure the poles to the inner tent clips.



Image: Inner tent with poles partially assembled.

4. **Attach Flysheet:** Drape the flysheet over the inner tent, aligning the doors and vents. Secure the flysheet to the poles using the buckles and straps.



Image: Fully assembled tent with flysheet.

5. **Secure with Pegs and Ropes:** Stake down all peg points around the base of the tent. Attach the ropes to the designated loops on the flysheet and stake them out to provide stability, especially in windy conditions.



Image: Detail of grommet fixing for tent poles.

6. **Freestanding Shelter Mode:** For a lightweight shelter without the inner tent, assemble the frame and ground sheet, then attach only the flysheet.



Image: Tent configured as a shelter, without the inner tent.

5. OPERATING INSTRUCTIONS

- **Ventilation:** The tent features mesh panels and vents to ensure airflow and reduce condensation. Open the mesh panels on the inner tent and adjust the flysheet vents as needed.



Image: Detail of the tent's mesh panel for ventilation.

- **Entry and Exit:** Use the zippers on the inner tent and flysheet doors for entry and exit. Always close zippers completely to prevent insects or weather from entering.
- **Internal Storage:** Utilize the mesh pockets inside the inner tent for storing small personal items.



Image: Convenient mesh pocket inside the inner tent.

- **Lantern Hanging:** A loop is provided inside the tent for hanging a lantern or small light source.



Image: Loop for hanging a lantern inside the tent.

6. MAINTENANCE

- **Cleaning:** Clean the tent with a soft brush or sponge and mild soap. Hand wash only. Do not use harsh detergents or put in a washing machine. Rinse thoroughly with water.
- **Drying:** Ensure the tent is completely dry before packing it away. Storing a damp tent can lead to mildew and fabric degradation. Air dry in a shaded, well-ventilated area.
- **Storage:** Fold the tent neatly and store it in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Seam Sealing:** Periodically inspect the seams. If necessary, apply the provided seam grip agent to maintain waterproofing.

7. TROUBLESHOOTING

- **Condensation:** Condensation is natural in tents. To minimize it, ensure proper ventilation by opening mesh panels and vents. Avoid cooking or bringing wet items inside.
- **Pole Damage:** If a tent pole breaks or splinters, use the included repair pipe to temporarily fix it. Slide the repair pipe over the broken section and secure it with tape.
- **Leaking:** Check for any tears or holes in the fabric. Ensure all seams are properly sealed. Reapply seam grip agent if necessary.
- **Difficulty Setting Up:** Ensure poles are correctly assembled and inserted into the designated grommets and clips. Refer to the setup instructions and diagrams.

8. SPECIFICATIONS

Brand	Snow Peak
Model Number	SD-210
Product Weight	2.5 kg (including frame, pegs, ropes)
Recommended Use	Camping & Hiking
Shape	Dome
Occupancy	2 people
Season	4-season
Water Resistance Technology	Flysheet: 30D nylon ripstop PU coating (min. 1,500mm water pressure resistance), Teflon water repellent finish. Bottom: 40D nylon ripstop PU coating (min. 1,800mm water pressure resistance). Seam grip agent included.
Special Features	UV protection, Freestanding design
Closure Type	Zipper
Number of Rooms	1
Color	Beige
Material	Nylon, Polyurethane
Product Care Instructions	Hand wash
Pole Material Type	Super duralumin A7071 (diameter 8.5mm)
Tent Floor Material	40D Nylon ripstop (PU coating)
Rainfly Material	30D Nylon ripstop
Storage Case Size	Diameter 15 x 57 cm

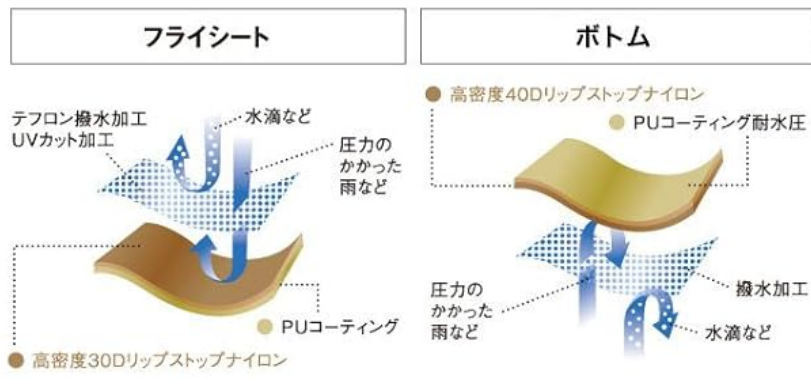


Image: Overview of tent materials.

9. WARRANTY AND SUPPORT

Snow Peak products are designed to function reliably in the field and to be used for a long time. We do not include any warranty cards with our products because we believe it is natural for a manufacturer to take responsibility for the quality of its own products.

If the functionality of your purchased product is compromised, please contact Snow Peak User Service or bring it to a dealer. If the cause is a manufacturing defect, we will repair or replace it free of charge. In other cases, we will repair it at a reasonable cost.

Please note that in cases of material deterioration due to age or severe damage from use, which constitute the product's lifespan, repair may not be possible. Always read the instruction manual before using the product. If you have any further questions, product malfunctions during use, or any doubts, please feel free to consult Snow Peak User Service or your dealer.

For support, please visit the official Snow Peak website or contact their customer service directly.