



[Manuals.plus](#) /

> [Conair](#) /

> Conair Satiny Smooth Ladies Twin Foil Shaver User Manual

Conair LWD1RN

Conair Satiny Smooth Ladies Twin Foil Shaver User Manual

Model: LWD1RN

PRODUCT OVERVIEW

The Conair Satiny Smooth Ladies Twin Foil Shaver with Pop-Up Trimmer is a versatile and portable electric shaver designed for effective hair removal. It features a dual foil system and a pop-up trimmer for precise grooming. This battery-operated shaver can be used safely for both wet and dry shaving.



Image: Front view of the Conair Satiny Smooth Ladies Twin Foil Shaver, highlighting its white and pink design with the dual foil head.



Image: Graphic illustrating key features of the Twin Foil Shaver: Wet/Dry capability, Nick-Free shaving, and Conveniently Cordless operation.

SETUP

Battery Installation

The shaver operates on 2 AAA batteries (not included). To install the batteries:

1. Ensure the shaver is turned off.
2. Locate the battery compartment cover, usually at the bottom of the shaver.
3. Open the cover by twisting or sliding it according to the indicator.
4. Insert 2 AAA batteries, ensuring correct polarity (+/-) as marked inside the compartment.
5. Close the battery compartment cover securely.

For optimal performance, use fresh alkaline batteries. Remove batteries if the shaver will not be used for an extended period.

OPERATING INSTRUCTIONS

General Shaving

The dual foil system is designed for a close and comfortable shave on various body areas, including legs, underarms, and bikini lines. It can be used on dry skin or in the shower for wet shaving.

1. Turn on the shaver by sliding the power switch.
2. Hold the shaver at a right angle to your skin.
3. Gently glide the shaver against the direction of hair growth.
4. For best results, stretch the skin taut with your free hand.

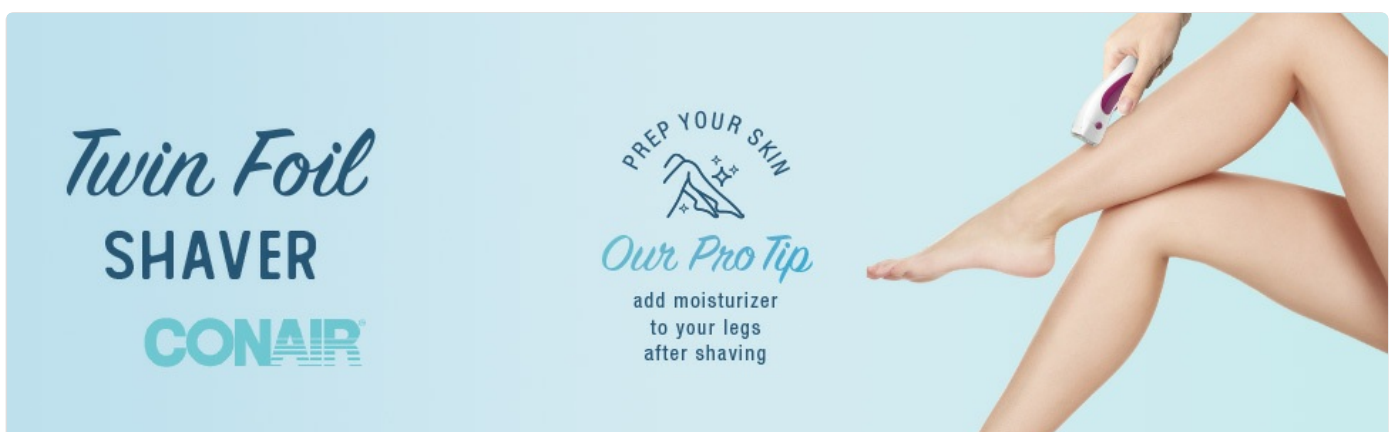


Image: A person using the Conair Twin Foil Shaver on their leg, demonstrating proper usage for smooth skin. A tip suggests applying moisturizer after shaving.

Using the Pop-Up Trimmer

The pop-up trimmer is ideal for precise trimming of longer hairs or delicate areas like the bikini line or for shaping eyebrows.

1. Locate the pop-up trimmer switch, typically on the side of the shaver.
2. Slide the switch to extend the trimmer blade.
3. Use the trimmer to carefully shape or trim longer hairs before using the main foil shaver for a closer finish.
4. After use, slide the switch back to retract the trimmer.



Image: Illustration of the shaver's features, including the two floating blades for a complete shaving experience and the rinseable head for easy cleaning.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and remove the foil head by pressing the release buttons on the sides.
2. Rinse the foil head under running water to remove hair clippings. The rinseable head makes cleaning simple.
3. Use the small cleaning brush (if included) to brush away any remaining hair from the cutting blades and inside the shaver body.
4. Allow all parts to air dry completely before reattaching the foil head and storing the shaver.



Image: Demonstrates the ease of cleaning the shaver by rinsing the head under water, and its compact size suitable for travel.

Storage

Store the shaver in a dry place, away from direct sunlight and extreme temperatures. Ensure the shaver is clean and dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Poor shaving performance.	Foil head or blades are clogged with hair or worn out.	Clean the foil head and blades thoroughly. Consider replacing the foil and cutter assembly if performance does not improve.
Shaver pulls hair.	Hair is too long for the foil shaver, or blades are dull.	Use the pop-up trimmer to shorten longer hairs before using the foil shaver. Replace the foil and cutter assembly if blades are dull.

SPECIFICATIONS

Model Name: LWD1RN

Power Source: Battery Powered (2 x AAA batteries, not included)

Features: Dual Foil Shaver, Pop-up Trimmer, Nick-free cutting system, Easy-to-use, Skin friendly, Safe on all areas, Wet/Dry use, Portable, Rinseable head

Dimensions: 2 x 7.5 x 4 inches

Weight: 5.6 ounces

Manufacturer: Conair

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual provided by Conair. A digital version of the user manual can often be found on the manufacturer's website or through the product's listing page.

You can access the official user manual [here](#).

For further assistance, please contact Conair customer service.