

Timeguard TPT88

Timeguard TPT88 Multi-Programmable Thermostat User Manual

Model: TPT88 | Brand: Timeguard

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, setup, operation, and maintenance of your Timeguard TPT88 Multi-Programmable Thermostat. Please read this manual thoroughly before installation and use to ensure safe and efficient operation of the device. Keep this manual for future reference.



Image 1.1: Front view of the Timeguard TPT88 Multi-Programmable Thermostat, showing its digital display and control buttons.

2. SAFETY INFORMATION

WARNING: Electrical installation should only be carried out by a qualified electrician in accordance with national wiring regulations.

- Always disconnect the power supply before installation or maintenance.
- Do not expose the thermostat to water or extreme humidity.
- Ensure all wiring connections are secure and correct to prevent electrical hazards.
- This device is designed for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Timeguard TPT88 Multi-Programmable Thermostat Unit
- Mounting Screws and Wall Plugs
- User Manual (this document)

4. SETUP AND INSTALLATION

The TPT88 thermostat is designed for easy installation, but professional installation is recommended for safety and optimal performance.

4.1 Mounting Location

Choose a central location on an interior wall, away from direct sunlight, drafts, and heat sources (e.g., radiators, lamps). The ideal height is approximately 1.5 meters (5 feet) from the floor.

4.2 Wiring Instructions

1. **Disconnect Power:** Before starting, ensure the main power supply to your heating system is turned off at the circuit breaker.
2. **Remove Old Thermostat:** Carefully remove your existing thermostat, noting the wiring connections. Take a photo if necessary.
3. **Prepare Wiring:** Strip approximately 10mm of insulation from the ends of the wires.
4. **Connect Wires:** Refer to the wiring diagram provided with your heating system and connect the wires to the corresponding terminals on the TPT88. The TPT88 operates at 24 Volts. Ensure correct polarity.
5. **Mount Thermostat:** Secure the thermostat base to the wall using the provided screws and wall plugs. Attach the front panel to the base.
6. **Restore Power:** Once all connections are secure and the thermostat is mounted, restore power to your heating system.

For detailed wiring diagrams specific to your heating system, consult your heating system's manual or a qualified electrician.

5. OPERATING INSTRUCTIONS

The TPT88 features a clear digital display and intuitive controls.

5.1 Initial Power-Up

Upon first power-up, the thermostat will typically display the current room temperature. You may need to set the current time and day.

5.2 Basic Controls

- **Temperature Adjustment:** Use the **Up** and **Down** buttons to manually adjust the desired temperature.
- **Mode Selection:** Press the **Mode** button (if present) to cycle through operating modes such as Heat, Cool, Auto, or Off.
- **Program/Manual:** A dedicated button may switch between programmed schedule operation and manual override.

6. PROGRAMMING YOUR THERMOSTAT

The TPT88 allows for multi-programmable schedules to optimize energy usage and comfort.

6.1 Setting Time and Day

1. Press the **SET** button (or similar) to enter the time/day setting mode.
2. Use the **Up/Down** buttons to adjust the hour, then minute, then day of the week.
3. Press **SET** again to confirm each setting and move to the next, or **EXIT** to save and exit.

6.2 Creating a Program Schedule

The TPT88 typically supports multiple time periods per day (e.g., Wake, Leave, Return, Sleep) with different temperature settings.

1. Press the **PROG** button to enter programming mode.
2. Select the day or group of days (e.g., Mon-Fri, Sat-Sun) you wish to program.
3. For each time period, set the desired start time and temperature using the **Up/Down** buttons.
4. Repeat for all desired time periods and days.
5. Save and exit programming mode (usually by pressing **PROG** or **EXIT**).

Refer to the on-screen prompts and specific button labels on your device for precise navigation.

7. MAINTENANCE

The Timeguard TPT88 thermostat requires minimal maintenance.

- **Cleaning:** Wipe the thermostat's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** (If applicable, for models with battery backup) If the display indicates low battery, replace the batteries promptly to avoid loss of settings. Refer to the battery compartment for battery type (e.g., AA, AAA).

8. TROUBLESHOOTING

If you encounter issues with your TPT88 thermostat, try the following solutions:

Problem	Possible Cause	Solution
Display is blank	No power supply; loose wiring; dead batteries (if applicable).	Check circuit breaker; verify wiring connections; replace batteries.
Heating/Cooling not turning on	Incorrect mode selected; temperature setting too high/low; wiring issue.	Ensure correct mode (Heat/Cool); adjust set temperature; check wiring.
Thermostat not responding to commands	Temporary software glitch; low batteries.	Try resetting the thermostat (refer to specific reset procedure in full manual if available); replace batteries.
Inaccurate temperature reading	Thermostat located near heat/cold source; sensor malfunction.	Relocate thermostat if possible; contact support if issue persists.

If the problem persists after attempting these solutions, please contact Timeguard customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	TPT88
Brand	Timeguard
Voltage	24 Volts
Backlight	Yes
Product Weight	260 g
Package Dimensions	18.4 x 17.8 x 4 cm

10. WARRANTY AND SUPPORT



For warranty information and customer support, please refer to the warranty card included with your product or visit the official Timeguard website. Keep your proof of purchase for warranty claims.



Timeguard Customer Service: Please consult the contact details provided on the Timeguard official website or product packaging for technical assistance and support.




© 2024 Timeguard. All rights reserved.
This manual is subject to change without notice.

Related Documents

	<p>Timeguard LEDPROSLB & LEDPROSLWH Dedicated PIR Professional Installation & Operating Instructions</p> <p>Comprehensive guide for installing and operating the Timeguard LEDPROSLB and LEDPROSLWH Dedicated PIR Professional motion detectors, covering safety, specifications, setup, and troubleshooting.</p>
	<p>TIMEGUARD WiFi 2 Gang Smart Wall Socket with USB Port Installation and Operating Instructions</p> <p>Comprehensive installation and operating instructions for the TIMEGUARD WFTWSUSB WiFi 2 Gang Smart Wall Socket with USB port. Learn about safety, technical specifications, system requirements, app download, device pairing, and smart home assistant integration.</p>

	<p>Timeguard ZV700B 7-Day Digital Light Switch Installation and Operating Instructions</p> <p>Comprehensive installation and operating instructions for the Timeguard ZV700B 7-day digital light switch with optional dusk start, covering setup, programming, operating modes, specifications, and guarantee information.</p>
	<p>Timeguard IP65 Time Delay Switch DS3HDN Installation and Operating Instructions</p> <p>Comprehensive installation and operating guide for the Timeguard DS3HDN IP65 Time Delay Switch, detailing specifications, safety precautions, wiring, operation, and guarantee information.</p>

Documents - Timeguard – TPT88

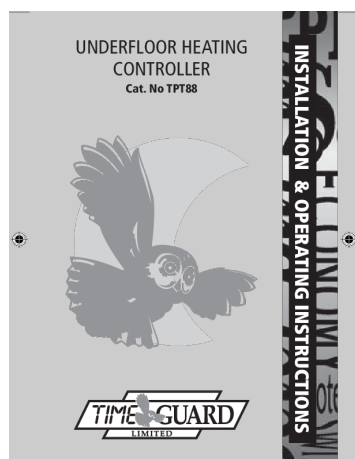

[\[pdf\]](#) User Manual Instructions

Provided by ManualsAndMore Download User Manual Time Gaurd TPT88 Installation Operating Instructions manualsandmore |||

INSTALLATION OPERATING INSTRUCTIONS UNDERFLOOR HEATING CONTROLLER Cat. No **TPT88** Continuously OFF indicator Normal operating timed mode Probe failure indicator Output to underfloor heating ON Continuous control of comfort temperature Day indicator day 1 = Monday Programme number 24 hour ...
lang:en score:53 filesize: 655.81 K page_count: 12 document date: 2019-07-23

[\[pdf\]](#) Instructions

TPT88 Instructs Art TG 1 5 indd paul UNDERFLOOR HEATING CONTROLLER Timeguard Introduction The is a combined temperature and time controller for electric underfl oor heating It rated at 16A 3 68kW unit controls to fully adjustable comfort during underfloor tpt88 timeguard media 317 instructions s 0000 0101 Instructions |||

INSTALLATION OPERATING INSTRUCTIONS UNDERFLOOR HEATING CONTROLLER Cat. No **TPT88** Continuously OFF indicator Normal operating timed mode Probe failure indicator Output to underfloor heating ON Continuous control of comfort temperature Day indicator day 1 = Monday Programme number 24 hour ...
lang:en score:50 filesize: 640.47 K page_count: 12 document date: 2006-09-19






[\[pdf\]](#) User Manual Guide Catalog

Catalogue Timeguard Product Light ON times adjustable from 5 seconds to minutes □ Adjustable light level control Manual OFF switching override Quick and easy installation An optional dusk start feature turns lights at a programmed time attractive infra red switch with remote for quick dimming and All kits come detailed guide please ask an advance copy the helpline on timeguard catalogue 2014 media 1805 Product Catalogue issue fourteen 2 w w w.timeguard.com time light safety climate Timeguard, y ... ions are minimised. Typical Flexi-Fast mat system installation Thermostatic Controlled Programmer **TPT88** illustrated Conservatories To give your conservatory a warm welcome under foot, fit Thermola...

lang:en score:35 filesize: 15.46 M page_count: 100 document date: 2014-02-24

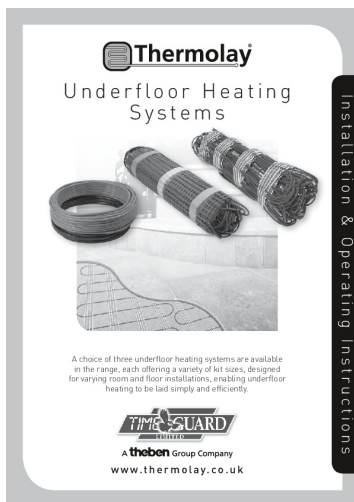

[\[pdf\]](#) Instructions

Underfloor Heating Systems Timeguard Thermolay is an underfloor electric heating system which installed immediately under the finished surface of tiles or stone slabs It renders floor warm to touch and supplements other Cable Gives best flexibility layout W m2 power per unit area but requires additional work when laying Three kit sizes cover areas Updated Instructs timeguard media 987 80 Installation Operating Instructions Underfloor Heating Systems A choice of three underfloor heati ... le thermostat with a 24 hour clock face which controls both underfloor and room temperature. TPT1 **TPT88** 24 Hour/7 Day Multi-Programmable Thermostat Stylish 7 day programmable thermostat with large d...

lang:en score:32 filesize: 1.72 M page_count: 4 document date: 2012-03-29



[\[pdf\]](#) User Manual Catalog

Catalogue Timeguard Light ON times adjustable from 5 seconds to minutes □ Adjustable light level control Manual OFF switching override Quick easy installation timeguard catalogue 2013 media 1562 Product Catalogue issue fourteen w w w.timeguard.com time light safety climate Timeguard, your ... ions are minimised. Typical Flexi-Fast mat system installation Thermostatic Controlled Programmer **TPT88** illustrated Conservatories To give your conservatory a warm welcome under foot, fit Thermola...

lang:en score:30 filesize: 21.9 M page_count: 51 document date: 2013-07-04



[\[pdf\]](#) Specifications Guide Catalog

Product I 96 quick set segments for up to 48 ON OFF programmes Special 'Traffic Light' ■ Mode buttons allow easy programming including an optional dusk start turning lights. Get your comparison guide now!

The essential tool selection and replacement of 2015 TG Catalogue Spreads timeguard media 2248

issue fifteen Product Catalogue www.timeguard.com time light safety climate

Welcome to another n ... 12483000601 27 50S12u4r8g3e00P9r5o6t7ectio8n2 ZV700

68 5012483007280 26 SPS10G 5012483008522 68 **TPT88** 5012483009574 82

ZV700B 5012483012628 26 SUL 180 a 4003468183311 16 TR 608 top2 S

40034686...

lang:en score:30 filesize: 18.57 M page_count: 53 document date: 2015-06-15



[\[pdf\]](#) Borchure

09 Thermolay Brochure timeguard s 0000 0476

Underfloor Heating Systems UFH Solutions Underfloor Heating Systems Introduction

See page 5 for ... Installations Benefits Typical Flexi-Mat system installation

Thermostatic Controlled Programmer **TPT88** illustrated Plastic conduit or trunking not supplied Power cable from RCD spur to programme...

lang:en score:29 filesize: 3.03 M page_count: 7 document date: 2009-07-07



[\[pdf\]](#)

New Look MAY07 12pp 1 6 indd steve switched on may 2007 timeguard s 0000 0153

MAY 2007 THE OFFICIAL TIMEGUARD NEWSLETTER Who's There Timeguard's new range of Audio and Video Door Entry Systems available in single and twin channel versions. See inside for details.

Contractor Promotion Have you claimed your FREE **TPT88** There's still time Simply complete the coupon previously sent to you or at your nearest The...

lang:en score:25 filesize: 1.91 M page_count: 12 document date: 2007-04-11