

## Oreck Steam100LRH

# Oreck Steam-It Steam Mop (Model Steam100LRH) User Manual

Model: Steam100LRH | Brand: Oreck

[Overview](#)   [Setup](#)   [Operation](#)   [Safety Information](#)   [Product](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## INTRODUCTION

Thank you for choosing the Oreck Steam-It Steam Mop, Model Steam100LRH. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your steam mop. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

## IMPORTANT SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not direct steam at people, animals, or electrical outlets.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup and extend the life of the appliance.
- Do not immerse the appliance in water or other liquids.
- Always unplug the power cord from the electrical outlet when not in use and before performing any maintenance or cleaning.
- Keep the appliance out of reach of children.
- Do not use the appliance on unsealed hardwood floors, as steam can cause damage.
- Ensure the steam mop is assembled correctly before use.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Oreck Steam-It Steam Mop.





Figure 1: Oreck Steam-It Steam Mop, Model Steam100LRH. This image displays the upright steam mop with its white and black body, yellow control buttons, and foot pedals. The Oreck logo is prominently featured on the main body.

Key components include the handle with fingertip controls, water tank, main body, and mop head with cleaning pads.

## SETUP INSTRUCTIONS

1. **Unpack the Appliance:** Carefully remove all components from the packaging. Ensure all parts are present and undamaged.
2. **Assemble the Handle:** Insert the handle into the main body of the steam mop until it clicks securely into place.
3. **Attach Cleaning Pad:** Secure a clean microfiber cleaning pad to the bottom of the mop head. The pads typically attach with hook-and-loop fasteners.
4. **Fill the Water Tank:**
  - Locate the water tank cap, usually on the front or side of the main body.
  - Unscrew or open the cap.
  - Fill the tank with distilled or demineralized water. Do not overfill.
  - Securely close the water tank cap.
5. **Plug In:** Insert the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

1. **Power On:** Press the power button, typically located on the handle or main body. The indicator light will illuminate, signaling that the unit is heating up.
2. **Heating Time:** The Oreck Steam-It heats up in less than 30 seconds. Wait for the indicator light to change or stop flashing, indicating it is ready to produce steam.
3. **Steam Activation:** Use the fingertip controls on the handle to activate and control the steam output. Some models may require holding a trigger or pressing a button continuously for steam.
4. **Floor Cleaning:**
  - Move the steam mop slowly and steadily across the floor surface.
  - For heavily soiled areas, hold the mop over the spot for a few seconds to allow the steam to penetrate and loosen dirt.
  - Ensure the floor surface is suitable for steam cleaning (e.g., sealed hard floors, tile, linoleum). Avoid unsealed wood or delicate surfaces.
5. **Above-Floor Cleaning:** The Oreck Steam-It is designed to work upside down without spillage, allowing for above-floor cleaning.
  - Detach the main mop head if necessary, or use the handheld functionality if available.
  - Direct steam to sanitize countertops, grout, or other surfaces. Always test on an inconspicuous area first.
6. **Finishing:** When finished, release the steam trigger, turn off the power, and unplug the appliance. Allow the unit to cool before emptying any remaining water or storing.

## CARE AND MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam mop.

- **Empty Water Tank:** After each use, allow the unit to cool, then empty any remaining water from the tank.
- **Clean Cleaning Pads:** Remove and wash the microfiber cleaning pads after each use. They are typically machine

washable.

- **Wipe Down Exterior:** Use a soft, damp cloth to wipe the exterior of the steam mop. Do not use harsh chemicals or abrasive cleaners.
- **Descaling (Mineral Buildup Prevention):** If you notice reduced steam output or mineral residue, descaling may be necessary.
  - *Note:* Using distilled water significantly reduces the need for descaling.
  - Consult the manufacturer's guidelines for specific descaling procedures. Generally, this involves running a solution of water and white vinegar through the system, followed by clear water rinses.
- **Storage:** Store the steam mop in a cool, dry place. Ensure the power cord is neatly wrapped.

## TROUBLESHOOTING GUIDE

| Problem                          | Possible Cause                                                                                                          | Solution                                                                                                                                                                           |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No steam or low steam output.    | Water tank is empty.<br>Unit not heated sufficiently.<br>Mineral buildup in the system.<br>Steam trigger not activated. | Refill water tank.<br>Wait for the indicator light to signal readiness.<br>Perform descaling procedure (refer to Maintenance section).<br>Ensure steam trigger is pressed or held. |
| Water leaking from the unit.     | Water tank cap not securely closed.<br>Overfilled water tank.<br>Damaged seal.                                          | Ensure water tank cap is tightly sealed.<br>Do not overfill the water tank.<br>Contact customer support if seals appear damaged.                                                   |
| Mop leaves streaks on the floor. | Cleaning pad is dirty.<br>Too much steam being used.<br>Floor not swept/vacuumed before steaming.                       | Replace or wash the cleaning pad.<br>Reduce steam output or move the mop faster.<br>Always sweep or vacuum floors thoroughly before steam cleaning.                                |

If the problem persists after attempting these solutions, please contact Oreck customer support.

## PRODUCT SPECIFICATIONS

- **Model Name:** Steam-It Steam Mop
- **Model Number:** Steam100LRH
- **Brand:** Oreck
- **Special Features:** Fingertip controls, Pressurized super dry steam, Upside down cleaning, Lightweight
- **Surface Recommendation:** Floor
- **Item Weight:** 1 pounds
- **Product Dimensions:** 45.5 x 10.3 x 4.6 inches
- **Power Source:** AC/DC
- **Color:** White (with black and yellow accents)
- **Manufacturer:** Oreck Commercial

## WARRANTY AND CUSTOMER SUPPORT

### Warranty Information

The Oreck Steam-It Steam Mop is covered by a manufacturer's warranty. Please refer to the warranty card included with

your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

## Customer Support

For technical assistance, replacement parts, or warranty inquiries, please contact Oreck customer support. Contact information can typically be found on the Oreck official website or on the product packaging.

© 2023 Oreck. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question