



Manuals.plus /

- › Home Accents Holiday /
- › Home Accents Holiday 80195 Universal Shingle/Gutter Clip Instruction Manual

Home Accents Holiday 80195

Home Accents Holiday 80195 Universal Shingle/Gutter Clip Instruction Manual

Model: 80195


INTRODUCTION

The Home Accents Holiday Universal Shingle/Gutter Clips are designed to simplify the process of attaching holiday lights to your home's exterior. These clips provide a secure and non-damaging method for displaying various types of string lights on shingles or gutters, ensuring a professional and uniform appearance.

PRODUCT OVERVIEW

This product includes 75 universal shingle/gutter clips. Key features include:

- Designed for easy attachment to gutters or shingles.
- Compatible with mini, rope, C7, and C9 lights.
- Helps achieve a professional lighting look with uniform spacing.
- Suitable for outdoor use with various string and tube lights.
- Will not damage the structure of your home.

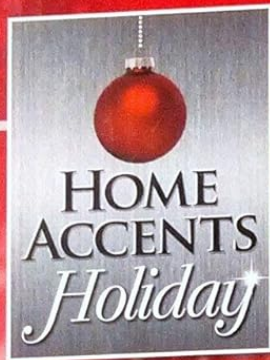

75

All-Purpose Light Clips

- Holds Mini, Rope, LED, Icicle, C-7, and C-9 Lights
- For Use on Shingles or Gutters

75 Clips de
uso general
para luces

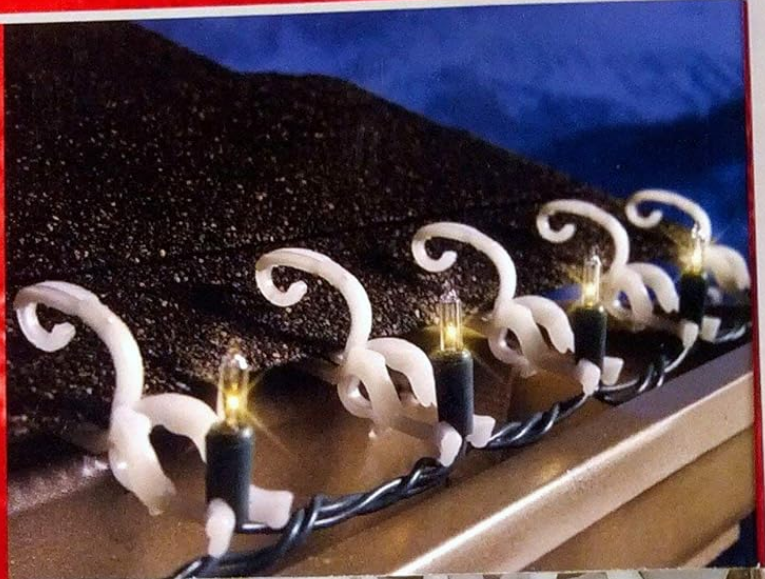 


Figure 1: Product packaging showing the 75-count clips and examples of clips installed on a shingle and gutter with lights.

SETUP AND INSTALLATION

1. **Inspect Clips:** Before installation, ensure all clips are intact and free from damage.
2. **Determine Placement:** Plan the desired layout for your lights. For a professional and evenly spaced appearance, place clips approximately 6 to 8 inches apart along your roofline or gutters.
3. **Attach to Shingles:**
 - Gently slide the shingle-grip portion of the clip under the edge of a shingle.
 - Ensure the clip is securely seated and does not easily dislodge.

4. Attach to Gutters:

- Hook the gutter-grip portion of the clip over the front edge of your gutter.
- Verify that the clip is firmly attached to the gutter.

5. **Insert Lights:** Once clips are in place, insert your chosen lights (mini, rope, C7, or C9) into the designated slots on the clips. Ensure the light bulbs or rope light are securely held by the clip.

SKU 233 682



C-7, C-9 Lights / Luces



Mini Lights / Miniluces



Rope Lights / Luces en serie



Actual Item May Vary Slightly from Photo.
IMPORTANT – Keep in compliance with manufacturers' recommendations: Do not mix C-7 and C-9 lights, or miniature lights with rope lights within the same end to end run of lights. For seasonal use only.

Este artículo puede variar un poco de la fotografía.
IMPORTANTE – Cumpla con las recomendaciones del fabricante: No mezcle las luces C-7 y C-9, o luces miniatura, con luces en serie conectadas extremo a extremo en el mismo circuito. Para uso propio de la estación.

Model No. / Modelo N° 80195

MADE IN CHINA
HECHO EN CHINA

DISTRIBUTED BY:
DISTRIBUIDO POR:
HOME DEPOT
2455 PACES FERRY RD., N.W.
ATLANTA, GA 30339

HOMEACCENTSHOLIDAY.COM



0510201X 233682

Figure 2: Illustration of how C7/C9 lights, mini lights, and rope lights are inserted into the clips. This image also shows the back of the packaging with compatibility details.

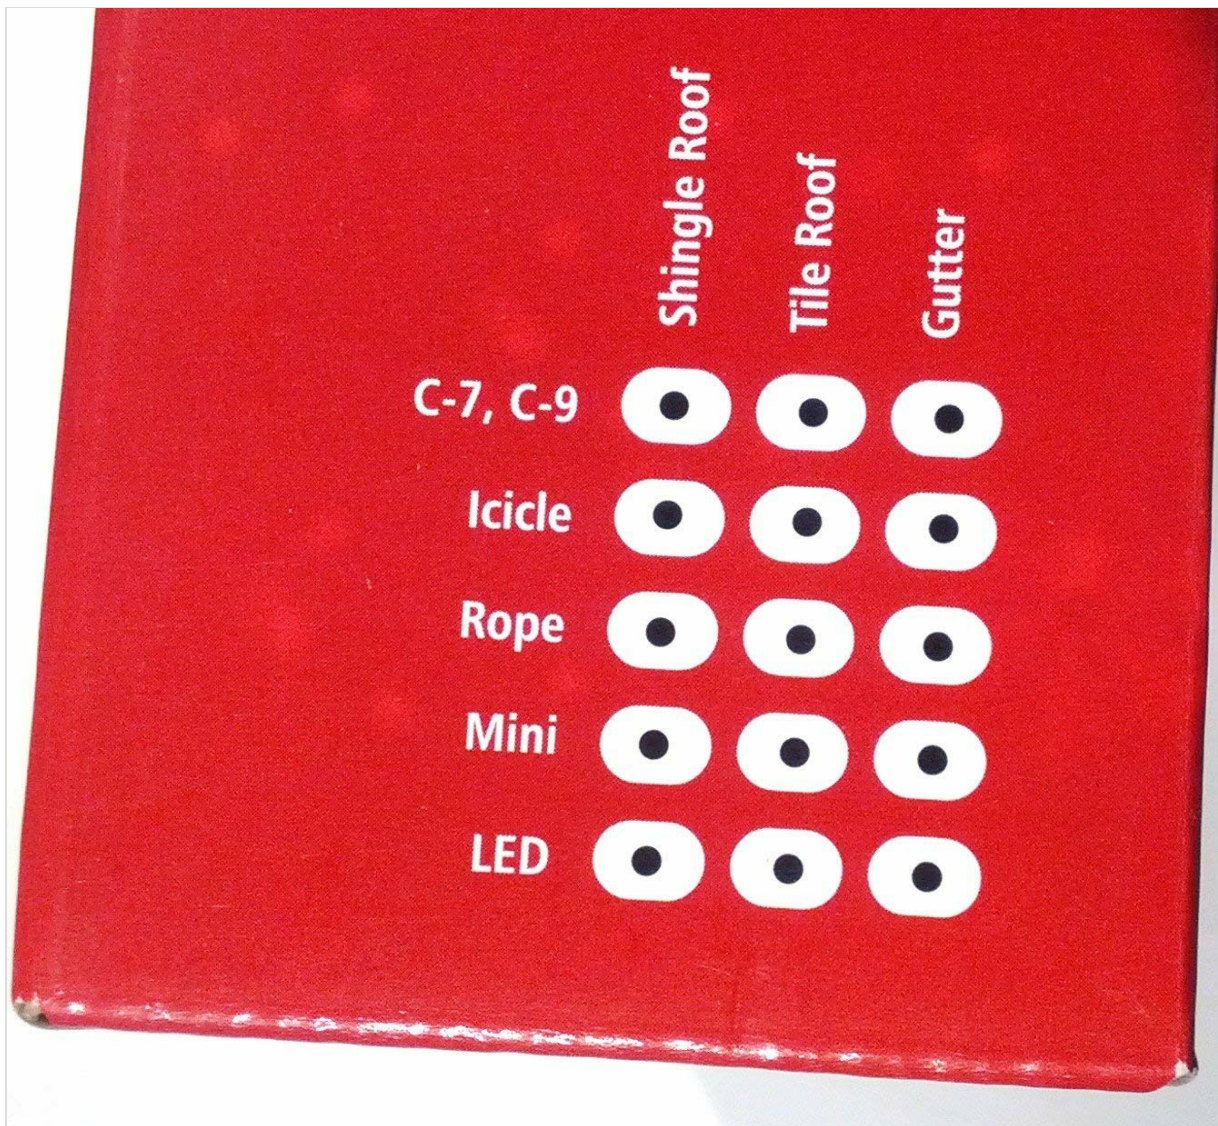 


Figure 3: Detailed compatibility chart indicating which light types (C-7, C-9, Icicle, Rope, Mini, LED) are suitable for Shingle Roof, Tile Roof, and Gutter installations.

OPERATING INSTRUCTIONS

These clips are designed for straightforward operation. Once installed, they securely hold your lights in place. No further operational steps are required beyond initial setup.

- Ensure lights are properly seated in the clips to prevent them from falling.
- Regularly check the clips for secure attachment, especially after strong winds or heavy precipitation.
- For optimal aesthetic results, maintain consistent spacing between clips as recommended (6-8 inches).

MAINTENANCE

Proper maintenance ensures the longevity and reusability of your clips.

- **Cleaning:** If clips become dirty, wipe them with a damp cloth. Avoid harsh chemicals that may degrade the plastic.
- **Storage:** After seasonal use, remove clips from your home. Store them in a cool, dry place away from direct sunlight to prevent material degradation and prolong their lifespan.
- **Inspection:** Before each use, inspect clips for any signs of cracking, brittleness, or damage. Replace any damaged clips to ensure secure light attachment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights are falling out of clips.	Incorrect light type for the clip slot, or lights not fully inserted.	Ensure the light type matches the clip's design (refer to Figure 2 and 3). Push lights firmly into the clip until secure.
Clips are not staying attached to shingles/gutters.	Improper installation, or clip is damaged/worn.	Re-attach the clip, ensuring it is firmly seated under the shingle or over the gutter edge. Inspect the clip for damage; replace if necessary.
Lights appear unevenly spaced.	Inconsistent spacing during clip installation.	Adjust clip placement to maintain a consistent 6-8 inch interval between clips.

SPECIFICATIONS

- **Model Number:** 80195
- **Brand:** Home Accents Holiday
- **Quantity:** 75 clips per pack
- **Compatibility:** Mini, Rope, C7, C9, Icicle, LED lights
- **Installation Surfaces:** Shingles, Gutters, Tile Roofs
- **Color:** White
- **Package Dimensions:** 10.94 x 9.72 x 2.4 inches
- **Item Weight:** 8 ounces
- **Manufacturer:** Home Accents Holiday
- **Date First Available:** January 8, 2012

WARRANTY AND SUPPORT

Specific warranty information for the Home Accents Holiday 80195 Universal Shingle/Gutter Clips is not provided in this manual. For warranty details, product support, or to address any concerns not covered here, please contact the manufacturer, Home Accents Holiday, directly or refer to their official website.

Manufacturer: Home Accents Holiday