

[Manuals.plus](#) /

› [Rowenta](#) /

› Rowenta IS6200 Compact Valet Full Size Garment and Fabric Steamer User Manual

## Rowenta IS6200

# Rowenta IS6200 Compact Valet Garment Steamer User Manual

Model: IS6200

## PRODUCT OVERVIEW

---

The Rowenta IS6200 Compact Valet Full Size Garment and Fabric Steamer is designed for efficient and convenient garment care. This 1500-watt steamer offers a powerful steam output to quickly remove wrinkles from various fabrics, making it an ideal solution for maintaining your wardrobe and household textiles.



Figure 1: Fully assembled Rowenta IS6200 Compact Valet Garment Steamer.

Key features include a foot-operated on/off switch, a large removable water tank for extended steaming sessions, and a telescopic pole for adjustable height and compact storage. The steamer also comes with a range of accessories to enhance its versatility.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the product.
- Use the appliance only for its intended use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let the appliance cool completely before putting away.
- Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged.
- Close supervision is necessary for any appliance being used by or near children.
- Do not leave the appliance unattended while connected.
- Burns could occur from touching hot metal parts, hot water, or steam. Use caution when turning the steamer upside down – there may be hot water in the reservoir.
- Always ensure the water tank is securely in place before operating.

## COMPONENTS AND ACCESSORIES

---

Familiarize yourself with the various parts of your Rowenta IS6200 steamer and its included accessories:

- **Main Unit:** Contains the water tank, heating element, and foot-operated switch.
- **Telescopic Pole:** Adjustable height pole for hanging garments.
- **Integrated Hanger:** Features garment clips and a hanger hook for secure garment placement.
- **Steam Head:** The part from which steam is emitted.
- **Flexible Hose:** Connects the steam head to the main unit.
- **Removable Water Tank:** Extra-large capacity (81 oz) for prolonged use.
- **Fabric Brush:** Helps to open fabric weave for better steam penetration and removes lint.
- **Crease Attachment:** For creating crisp pleats and creases.
- **Lint Pad:** For removing lint and pet hair from garments.



Figure 2: The steamer head with the fabric brush attachment, useful for various fabrics.



Figure 3: The integrated hanger with garment clips, designed to hold clothing securely during steaming.

## SETUP GUIDE

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Pole:** Insert the telescopic pole into the main unit base. Ensure it clicks securely into place.
3. **Attach Hanger:** Slide the integrated hanger onto the top of the telescopic pole.
4. **Connect Hose:** Securely attach the flexible hose to the steam outlet on the main unit.
5. **Fill Water Tank:** Remove the water tank from the main unit. Unscrew the cap and fill the tank with clean tap water. Do not overfill. Replace the cap tightly.



Figure 4: The removable water tank, easily filled with tap water for convenience.

6. **Insert Water Tank:** Place the filled water tank back into the main unit, ensuring it is seated correctly.
7. **Choose Attachment:** Select the desired attachment (fabric brush, crease attachment, or lint pad) and securely attach it to the steam head.

## OPERATING INSTRUCTIONS

---

1. **Power On:** Plug the steamer into a standard electrical outlet. Press the foot-operated on/off switch to turn the unit on. The indicator light will illuminate.



Figure 5: The convenient foot-operated on/off switch located at the base of the steamer.

2. **Heat Up:** Allow approximately 60 seconds for the steamer to heat up and produce a steady flow of steam.
3. **Prepare Garment:** Hang the garment on the integrated hanger. Use the garment clips to hold pants or skirts in place.
4. **Steaming Technique:**
  - Hold the steam head close to the fabric, moving it in a vertical motion from top to bottom.
  - For stubborn wrinkles, gently pull the fabric taut with your free hand while steaming.
  - Use the fabric brush for heavier fabrics or to remove lint.
  - The crease attachment can be used to create sharp creases on trousers or sleeves.



Figure 6: Demonstrating the use of the fabric brush attachment to steam a shirt.



Figure 7: A suit jacket hanging on the steamer, ready for wrinkle removal.

5. **Refilling:** If the water tank runs dry during use, the steamer will stop producing steam. Turn off the unit, unplug it, and refill the water tank as described in the Setup Guide.
6. **Power Off:** When finished steaming, press the foot-operated on/off switch to turn off the unit and unplug it from the electrical outlet.

## Product Demonstration Video

Your browser does not support the video tag.

Video 1: An official demonstration of the Rowenta Garment Steamer, showcasing its features and accessories for optimized results and perfect creases. This video highlights the ease of use and effectiveness of the steamer for various garments.

## MAINTENANCE

---

### Cleaning

- Always unplug the steamer and allow it to cool completely before cleaning.
- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the steam head regularly to prevent mineral buildup. Use a cotton swab or small brush to clear any clogged steam holes.

### Descaling (Recommended Monthly)

To maintain optimal performance and extend the life of your steamer, regular descaling is essential, especially if you use hard water.

1. Ensure the steamer is unplugged and cool.
2. Remove the water tank and empty any remaining water.
3. Fill the water tank with a mixture of 50% white vinegar and 50% water.
4. Place the tank back into the unit.
5. Plug in the steamer and turn it on. Allow it to steam until about half of the solution has been used.
6. Turn off the steamer, unplug it, and let it cool for at least 30 minutes.
7. Empty the remaining solution from the tank and rinse thoroughly with clean water.
8. Refill the tank with clean water and run the steamer for a few minutes to flush out any residual vinegar smell.

### Storage

After each use, empty any remaining water from the tank. Allow the steamer to cool completely before disassembling the telescopic pole for compact storage. Store the steamer and its accessories in a dry place.



Figure 8: The steamer's "tilt and roll" feature allows for easy transport and compact storage.

## TROUBLESHOOTING

---

## Troubleshooting Guide

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup.	Refill water tank. Allow 60 seconds for heating. Perform descaling procedure.
Water leaking from steam head.	Condensation in hose. Water tank cap not secured. Overfilling water tank.	Hold steam head higher than hose. Ensure water tank cap is tightly closed. Do not fill past MAX line.
Steamer not turning on.	Not plugged in. Power outlet issue. Foot switch not pressed firmly.	Ensure plug is fully inserted. Test outlet with another appliance. Press the foot switch firmly until indicator light illuminates.
Garments still wrinkled after steaming.	Improper technique. Fabric type.	Steam slowly, pulling fabric taut. Use appropriate attachment. Some fabrics may require more passes or different techniques.

## SPECIFICATIONS

- **Model:** IS6200
- **Power:** 1500 Watts
- **Voltage:** 120 Volts
- **Water Tank Capacity:** 81 ounces (approx. 2.4 liters)
- **Continuous Steam Time:** Up to 2.5 hours
- **Heat-up Time:** Approximately 60 seconds
- **Product Dimensions:** 15.75 x 12.76 x 16.77 inches
- **Item Weight:** 16 ounces (1 pound)
- **Included Accessories:** Fabric brush, Crease attachment, Lint pad

## WARRANTY AND SUPPORT

The Rowenta IS6200 Compact Valet Garment Steamer comes with a 1-year limited warranty. For detailed warranty information, claims, or technical support, please refer to the official Rowenta website or contact their customer service directly.

**Official User Manual (PDF):** For a downloadable version of the user manual, please visit: [Rowenta IS6200 User Manual PDF](#)

**Rowenta Official Website:** [www.rowenta.com](http://www.rowenta.com)

