

[manuals.plus](#) /

› [CUCKOO](#) /

› [Cuckoo CRP-HN1059F Pressure Rice Cooker User Manual](#)

CUCKOO CRP-HN1059F

Cuckoo CRP-HN1059F Pressure Rice Cooker User Manual

Model: CRP-HN1059F

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cuckoo CRP-HN1059F 10-Cup Pressure Rice Cooker. This advanced appliance utilizes Induction Heating (IH) technology to ensure optimal rice texture and shine. It features a durable X-Wall Diamond Coating on the inner pot for enhanced longevity and ease of cleaning. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1.1: Front view of the Cuckoo CRP-HN1059F Pressure Rice Cooker, showcasing its black and silver design with digital display.

2. PRODUCT OVERVIEW

2.1 Key Features

- Induction Heating (IH) System:** Utilizes a magnetic field for rapid and thorough heating, ensuring even cooking.
- X-Wall Diamond Coating Inner Pot:** A special five-layer inner pot structure (Stainless-Aluminum-Primer-Gold Marble Coating-PFA Coating) designed for exceptional durability against pressure, overheating, salt, and impact. It resists scratches from metal utensils.
- 10-Cup Capacity:** Suitable for preparing rice for up to 10 people.
- Versatile Menu Settings:** Includes options for white rice, brown rice, grain mixed rice, GABA brown rice, rice cake, steamed stew, and meat.

- **Made in Korea:** High-quality manufacturing.

2.2 Components

The Cuckoo CRP-HN1059F Pressure Rice Cooker typically includes the following components:

- Main Unit
- Inner Pot (with X-Wall Diamond Coating)
- Inner Lid (removable for cleaning)
- Rice Scoop
- Measuring Cup
- Instruction Manual (this document)



Figure 2.1: Included accessories for the Cuckoo CRP-HN1059F, showing the inner pot, rice scoop, measuring cup, and instruction manual.



Figure 2.2: The rice cooker with its lid open, revealing the removable inner lid and the inner pot.



Figure 2.3: A detailed view of the removable stainless steel inner lid, designed for easy cleaning.



Figure 2.4: The inner pot, featuring the durable X-Wall Diamond Coating for non-stick performance and longevity.

3. SETUP

3.1 Unpacking and Initial Cleaning

1. Carefully remove all packaging materials from the rice cooker and its accessories.
2. Wash the inner pot, inner lid, rice scoop, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water.

3.2 Placement

- Place the rice cooker on a stable, flat, and heat-resistant surface.
- Ensure there is adequate ventilation around the unit. Do not place it near heat sources or in direct sunlight.
- Keep the unit away from walls or cabinets to allow steam to escape freely.

3.3 Power Connection

- Ensure the voltage of your power outlet matches the rice cooker's requirement (110V).
- Plug the power cord firmly into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Basic Rice Cooking

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the inner pot.
3. Add water according to the markings inside the inner pot for the type of rice being cooked (e.g., white rice, brown rice). For best results, refer to the specific water level guidelines in the full instruction manual.
4. Place the inner pot into the main unit, ensuring it is seated correctly.
5. Close the lid securely until it clicks into place.
6. Select the desired cooking mode (e.g., "White Rice," "Brown Rice") using the control panel.
7. Press the "Cook" or "Start" button to begin the cooking process. The cooker will automatically switch to "Keep Warm" mode once cooking is complete.

4.2 Special Cooking Modes

The CRP-HN1059F offers various specialized cooking functions:

- **GABA Brown Rice:** This mode activates brown rice by soaking it at 104°F (40°C) for approximately 2 hours before cooking, which increases naturally occurring gamma-aminobutyric acid (GABA).
- **Grain Mixed Rice:** Optimized for cooking various mixed grains.
- **Rice Cake:** For preparing traditional rice cakes.
- **Steamed Stew/Meat:** Allows for steaming various dishes.

Note: This model features Korean voice navigation only. Please refer to the full instruction manual for detailed button functions and menu navigation if you require translation assistance.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

5.1 Inner Pot Cleaning

- Always allow the inner pot to cool completely before cleaning.
- Wash the inner pot by hand with warm, soapy water and a soft sponge.
- Do not use abrasive cleaners, metal scrubbers, or sharp objects, as these can damage the X-Wall Diamond Coating.
- Rinse thoroughly and dry completely before storing or next use.

5.2 Inner Lid Cleaning

- The inner lid is removable for easy cleaning. Detach it from the main lid assembly.

- Wash with warm, soapy water and a soft sponge.
- Rinse and dry thoroughly before reattaching. Ensure it is properly secured before closing the main lid.

5.3 Exterior Cleaning

- Wipe the exterior of the main unit with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials.
- Ensure no water enters the internal components.

6. TROUBLESHOOTING

If you encounter issues with your rice cooker, please refer to the following common solutions:

Problem	Possible Cause	Solution
Rice is undercooked or too hard.	Insufficient water; incorrect cooking mode selected; old rice.	Ensure correct water-to-rice ratio. Select appropriate cooking mode. Use fresh rice.
Rice is overcooked or too soft.	Too much water; incorrect cooking mode selected.	Reduce water slightly. Select appropriate cooking mode.
"Korean Voice Navigation Only" is an issue.	The model is designed with Korean voice prompts.	This model does not support English voice navigation. Refer to the detailed instruction manual for visual cues and button functions.
Inner pot coating is peeling/rusty.	Improper cleaning (abrasive materials); prolonged use; manufacturing defect.	Ensure only soft sponges are used for cleaning. Avoid metal utensils. If under warranty, contact customer support for a replacement.

If the problem persists after attempting these solutions, please contact Cuckoo customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	CUCKOO
Model Number	CRP-HN1059F
Colour	Black
Product Dimensions	30.23 x 40.39 x 28.96 cm
Capacity	10 Cups
Voltage	110 Volts
Material	Steel
Special Features	Programmable
Item Weight	7.48 kg (16.5 Pounds)

Attribute	Detail
Lid Material	Stainless Steel
Power Source	Corded Electric
Product Care Instructions	Hand Wash
Included Components	Inner Pot, Instruction Manual

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Cuckoo website or contact Cuckoo customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Cuckoo

Place of Business: LOS ANGELES, CA, 90033 US

© 2024 CUCKOO. All rights reserved.