

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BMW](#) /

› [Instruction Manual, Manuel D'Instructions, Manual De Instrucciones](#)

BMW B006YSVRSG

BMW Vehicle Owner's Manual

Comprehensive Guide for Your BMW Vehicle

[Introduction](#) [Safety](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty](#) [Support](#)

1. INTRODUCTION

This owner's manual provides essential information for the safe and efficient operation of your BMW vehicle. It covers various aspects from basic controls to advanced features, maintenance schedules, and troubleshooting tips. Please read this manual thoroughly to familiarize yourself with your vehicle's capabilities and ensure a safe driving experience. Keep this manual in your vehicle for quick reference. For any questions not covered here, please contact an authorized BMW service center.



Image 1.1: The physical instruction manual for a BMW vehicle, shown in a display stand. This manual contains all the information detailed within this digital guide.

2. SAFETY INFORMATION

Your safety and the safety of your passengers are paramount. Always adhere to the following safety guidelines:

- **Seat Belts:** Always wear your seat belt and ensure all passengers are properly buckled.
- **Airbags:** Do not place objects over or near airbag deployment areas.
- **Child Safety:** Use appropriate child restraint systems for children as per local regulations.
- **Driving Conditions:** Adjust your driving style to suit road, weather, and traffic conditions.
- **Maintenance:** Regular maintenance is crucial for vehicle safety. Follow the recommended service intervals.

Warning: Failure to follow safety instructions can result in serious injury or death.

3. GETTING STARTED AND INITIAL SETUP

3.1. Key and Ignition

To start your BMW, insert the key into the ignition slot or place the Comfort Access key fob inside the vehicle. Press the brake pedal and then press the START/STOP ENGINE button.

3.2. Seat and Mirror Adjustment

Adjust your seat for optimal driving position using the controls located on the side of the seat. Adjust the side mirrors and rearview mirror to ensure clear visibility of the road behind and to the sides of the vehicle.

3.3. Infotainment System Initial Setup

Upon first use, the iDrive infotainment system may prompt you to set up language, time zone, and connect your mobile device via Bluetooth. Follow the on-screen instructions to complete these initial configurations.

4. OPERATING INSTRUCTIONS

4.1. Driving Modes

Your BMW offers various driving modes (e.g., ECO PRO, COMFORT, SPORT) that adjust engine, transmission, and steering characteristics. Select the desired mode using the Driving Experience Control switch near the gear selector.

4.2. Climate Control

Use the climate control panel to set desired temperature, fan speed, and air distribution. The automatic climate control system maintains the set temperature efficiently.

4.3. Navigation System

To use the navigation system, access it via the iDrive controller. Enter your destination using the rotary controller, voice commands, or the touch screen (if equipped). The system provides turn-by-turn directions and real-time traffic information.

5. MAINTENANCE AND CARE

Regular maintenance is vital for the longevity and performance of your BMW. Adhere to the service intervals outlined below:

Service Item	Interval	Notes
Engine Oil Change	Every 10,000 miles or 1 year	Use BMW approved synthetic oil.
Brake Fluid Change	Every 2 years	Important for brake system performance.

Service Item	Interval	Notes
Cabin Air Filter	Every 20,000 miles or 2 years	Ensures clean cabin air.
Tire Rotation	Every 5,000-7,500 miles	Promotes even tire wear.

For detailed instructions on checking fluid levels, tire pressure, and other routine checks, refer to the relevant sections in this manual or consult your authorized BMW service center.

6. TROUBLESHOOTING COMMON ISSUES

This section addresses common issues you might encounter with your BMW. For more complex problems, always consult an authorized BMW service technician.

6.1. Engine Warning Light Illuminated

Possible Causes: Loose fuel cap, sensor malfunction, emissions system issue.

Solution: Check fuel cap is tightened. If light persists, have the vehicle inspected by a BMW service center immediately.

6.2. Flat Tire

Possible Causes: Puncture, low tire pressure.

Solution: If equipped with run-flat tires, drive cautiously to the nearest service center. If not, use the tire repair kit or call roadside assistance.

6.3. Infotainment System Not Responding

Possible Causes: Software glitch, temporary system freeze.

Solution: Try restarting the iDrive system by holding down the volume knob for approximately 30 seconds until the screen goes blank and restarts.

7. TECHNICAL SPECIFICATIONS

This section provides general technical specifications for BMW vehicles. Specific details may vary by model and year.

- Engine Type:** Varies by model (e.g., Inline 4-cylinder, Inline 6-cylinder, V8)
- Fuel Type:** Premium Unleaded Gasoline (minimum 91 RON)
- Transmission:** Automatic (8-speed Steptronic) or Manual (6-speed)
- Fuel Tank Capacity:** Varies by model (e.g., 50-70 liters)
- Tire Pressure:** Refer to the label on the driver's side door jamb for specific pressures.
- Weight:** Varies significantly by model and configuration.

Note: For precise specifications for your specific BMW model, please consult the vehicle's data sticker or an authorized BMW dealership.

8. WARRANTY INFORMATION

BMW vehicles typically come with a comprehensive limited warranty covering defects in materials or workmanship. The standard warranty period is generally 4 years or 50,000 miles, whichever comes first, from the original in-service date. Specific warranty coverage, including emissions, rust perforation, and roadside assistance, may vary by region and model year. Please refer to your separate BMW Warranty Information booklet for complete details, terms, and conditions.

Important: Unauthorized modifications or improper maintenance may void your warranty. Always use genuine BMW parts

and authorized service centers for repairs and maintenance.

9. CUSTOMER SUPPORT

For further assistance, technical support, or to schedule service, please contact BMW Customer Relations or your nearest authorized BMW dealership.

BMW Customer Relations: [1-800-831-1117](tel:1-800-831-1117) (USA, example)

BMW Roadside Assistance: [1-800-332-4269](tel:1-800-332-4269) (USA, example)

Find a Dealer: Visit the official BMW website for a dealer locator: www.bmw.com/en/dealer-locator.html

When contacting support, please have your vehicle's Vehicle Identification Number (VIN) readily available.

© 2024 BMW AG. All rights reserved. Information subject to change without notice.

Related Documents - B006YSVRSG

	<p><u>Guide d'installation du tapis de coffre BMW Série 3 F34 (2016-2020)</u></p> <p>Instructions détaillées pour l'installation ou la fixation du tapis de coffre d'une BMW Série 3 F34 (modèles 2016-2020), expliquant l'utilisation de tournevis pour manipuler des vis.</p>
	<p><u>Manual de Instrucciones BMW R nineT Racer</u></p> <p>Guía completa de instrucciones para la motocicleta BMW R nineT Racer, cubriendo manejo seguro, mantenimiento, especificaciones técnicas y consejos de uso.</p>
	<p><u>BMW R 1250 GS: Manual de Instrucciones</u></p> <p>Manual de instrucciones detallado para la motocicleta BMW R 1250 GS, cubriendo operación, mantenimiento, y especificaciones técnicas.</p>
	<p><u>BMW N20/N26 Timing and Oil Pump Drive Chain Diagnosis and Repair Class Action Settlement</u></p> <p>Information regarding the BMW N20/N26 class action settlement for timing and oil pump drive chain diagnosis and repair, including eligible vehicles, procedures, and claim information.</p>



THE BMW X5.
OWNER'S MANUAL

BMW EfficientDynamics

BMW Group

Online Edition for Petrol (D1 X5) 515105 - 09/16

[BMW X5 Owner's Manual: Comprehensive Guide to Your Vehicle](#)

Explore the BMW X5 Owner's Manual for detailed information on vehicle operation, features, maintenance, and safety. This guide covers everything from basic controls to advanced systems, ensuring a safe and enjoyable driving experience.