

[Manuals.plus](#) /

› [BM Premium](#) /

› BM Premium CGA-S007 Battery and Charger User Manual

BM Premium CGAS007

BM Premium CGA-S007 Battery and Charger User Manual

For Panasonic Lumix DMC-TZ Series Digital Cameras

INTRODUCTION

Thank you for choosing the BM Premium CGA-S007 Battery and Charger kit. This product is designed to provide reliable power for your compatible Panasonic Lumix digital cameras. This manual contains important information regarding the safe and efficient use of your new batteries and charger. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the product or injury to yourself:

- **DO NOT SHORT CIRCUIT:** Avoid contact between metal objects and battery terminals.
- **DO NOT DISPOSE INTO FIRE:** Batteries may explode or leak if disposed of in fire.
- **CHARGE ONLY WITH SPECIFIED CHARGER:** Use only the BM Premium charger provided or a compatible charger designed for CGA-S007 batteries.
- **DO NOT DISASSEMBLE UNIT:** The battery and charger contain no user-serviceable parts. Disassembly voids the warranty and may cause damage or injury.
- **DRY LOCATION USE ONLY:** The charger is designed for indoor, dry environments. Avoid exposure to moisture or liquids.
- Keep batteries and charger out of reach of children.
- If the battery or charger shows signs of damage, discontinue use immediately.

PACKAGE CONTENTS

Your BM Premium CGA-S007 Battery and Charger kit includes:

- 2 x BM Premium CGA-S007 Lithium-ion Batteries
- 1 x BM Premium Battery Charger (with foldable AC plug)
- 1 x AC Adapter (for wall outlets)
- 1 x Car Adapter (for vehicle power outlets)
- 1 x Europe Adapter (for European outlets)

SETUP: CHARGING THE BATTERY

Before first use, fully charge the batteries. The charger is designed for universal use with AC100V~240V input.

1. Prepare the Charger:



HOW TO CHARGE



Red light
indicates
battery is
charging



Green light
indicates
battery is
fully
charged

This image illustrates the BM Premium travel charger with its foldable AC prongs extended, ready to be plugged into a wall outlet. It demonstrates the compact design for portability.

Flip out the foldable AC prongs on the charger. If using a car or European outlet, attach the appropriate adapter to the charger.

2. Insert the Battery:

NEVER MISS A PHOTO OPPORTUNITY




Perfect to keep your batteries charged anywhere.




AC100V~240V INPUT


AC ADAPTER

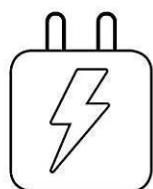

CAR ADAPTER

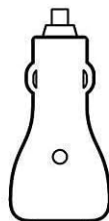

EUROPE ADAPTER

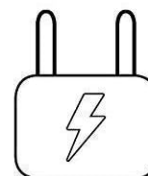

The image shows the BM Premium battery charger with a CGA-S007 battery securely placed inside. The charger is labeled with 'AC100V~240V INPUT', indicating its compatibility with various power outlets worldwide. It also highlights the included AC, car, and Europe adapters.

Slide the CGA-S007 battery into the charger slot, ensuring the positive (+) and negative (-) contacts on the battery align with those on the charger. The battery should fit securely.

3. Connect to Power:



STAY READY.

Make sure you never miss another once-in-a-lifetime moment by always having a battery ready with BM Premium's Wall Charger




The charger is shown with a CGA-S007 battery inserted, and a red LED light is illuminated, indicating that the battery is currently charging.

Plug the charger into a wall outlet, car power outlet, or appropriate power source. The LED indicator on the charger will illuminate **RED** to signify that charging is in progress.

4. Charging Complete:

DON'T BE AFRAID TO PHOTOGRAPH THE UNKNOWN.

BM Premium's
battery has you covered.

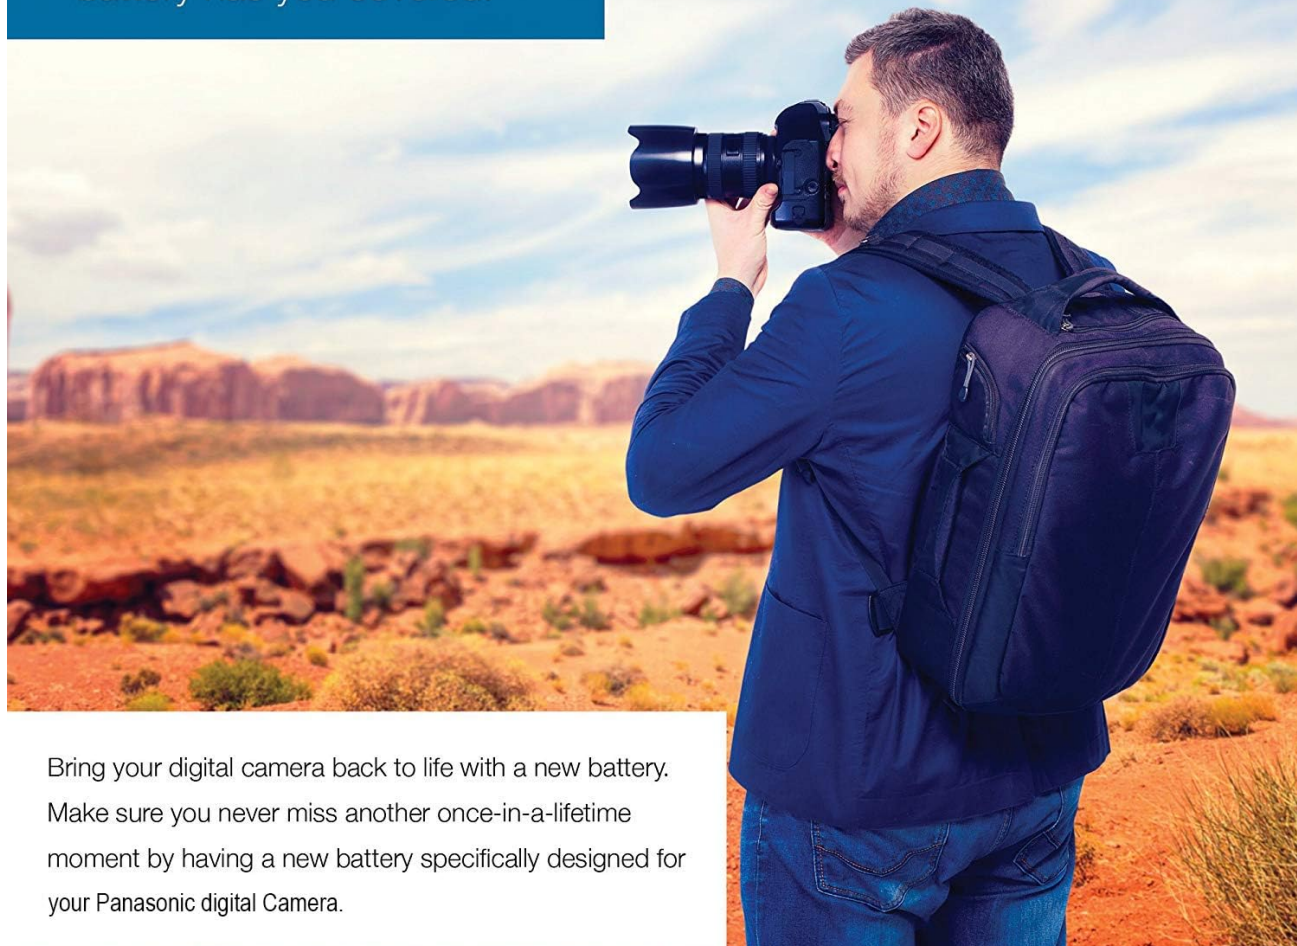

Bring your digital camera back to life with a new battery. Make sure you never miss another once-in-a-lifetime moment by having a new battery specifically designed for your Panasonic digital Camera.

This image shows the BM Premium charger with a CGA-S007 battery, where a green LED light is illuminated, indicating that the battery has reached full charge.

Once the battery is fully charged, the LED indicator will turn **GREEN**. Disconnect the charger from the power source and remove the battery.

OPERATING: USING THE BATTERY

After charging, the battery is ready for use in your compatible Panasonic Lumix digital camera.

1. **Insert Battery into Camera:** Refer to your camera's instruction manual for specific steps on how to open the battery compartment and insert the CGA-S007 battery. Ensure the battery is inserted with the correct orientation and clicks into place.
2. **Power On Camera:** Close the battery compartment door and power on your camera. The camera should recognize the battery and display its charge level.
3. **Compatibility:** These batteries are compatible with Panasonic Lumix models including DMC-TZ1, DMC-TZ2, DMC-TZ3, DMC-TZ4, DMC-TZ5, DMC-TZ11, DMC-TZ15, and DMC-TZ50.

MAINTENANCE: BATTERY CARE

Proper care extends the life and performance of your batteries.

- **Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to store batteries with a partial charge (around 50%).
- **Charging:** The batteries feature no memory effect, allowing you to charge them at any time without reducing their capacity.
- **Cleaning:** Keep battery contacts clean using a dry, soft cloth.
- **Safety Features:** The batteries are built with multiple circuit protections, including over-charging, short-circuit, high-temperature, and surge protection, ensuring safe operation.

TROUBLESHOOTING

If you encounter issues with your BM Premium batteries or charger, consider the following:

- **Battery Not Charging:**
 - Ensure the charger is properly plugged into a working power outlet.
 - Verify the battery is correctly inserted into the charger with contacts aligned.
 - Check for any visible damage to the charger or battery.
- **Camera Not Powering On with Charged Battery:**
 - Ensure the battery is fully charged (green LED on charger).
 - Verify the battery is correctly inserted into the camera's battery compartment.
 - Clean the battery contacts on both the battery and camera.
- **Short Battery Life:**
 - Ensure the battery has been fully charged.
 - Battery performance can be affected by extreme temperatures.
 - Over time, all rechargeable batteries experience a gradual decrease in capacity.

SPECIFICATIONS

Feature	Specification
Model Number	CGAS007
Battery Type	Lithium-ion
Battery Capacity	1300 mAh
Battery Voltage	3.7 Volts
Battery Energy (Wh)	4.8 Wh
Battery Weight	25 g
Charger Input	AC 100V-240V ~ 50/60Hz, Max 150mA
Charger Output	DC 4.2V, 600mA
Compatible Camera Models	Panasonic Lumix DMC-TZ1, DMC-TZ2, DMC-TZ3, DMC-TZ4, DMC-TZ5, DMC-TZ11, DMC-TZ15, DMC-TZ50

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

BM Premium products are designed for reliability and performance.

- **Warranty:** This product includes a **FULL ONE YEAR WARRANTY** from the date of purchase. This warranty covers manufacturing defects and ensures your product meets specified performance standards.
- **Customer Support:** For technical assistance, warranty claims, or any questions regarding your BM Premium product, please contact our support team.

Support Contact: (718)677-0239

Please have your product model number (CGAS007) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question