

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony GB-A/SR127/SR128 Series Magnescale Instructions Manual](#)

Sony GB-A, SR127, SR128

Sony GB-A/SR127/SR128 Series Magnescale Instructions Manual

Model: GB-A, SR127, SR128

1. INTRODUCTION

This manual provides detailed instructions for the Sony GB-A/SR127/SR128 Series Magnescale. It covers essential information for proper installation, operation, and maintenance of the device.

2. GENERAL PRECAUTIONS AND WARNINGS

Before using the Magnescale, carefully read and understand all notices and warnings to ensure safe and correct operation. Adhere to all general precautions to prevent damage to the unit or injury to personnel.

3. PARTS CONFIGURATION

Understand the various components that constitute the Sony GB-A/SR127/SR128 Series Magnescale system. This section details the individual parts and their arrangement.

4. SYSTEM CONFIGURATION

This section outlines how the different parts of the Magnescale system are interconnected and function together as a complete unit. Refer to this for an overview of the system architecture.

5. NAME AND FUNCTION OF EACH PART

Detailed descriptions of each component, including the Scale Unit and Connection Cable, are provided here. Learn about their specific names and operational functions within the Magnescale system.

5.1 Scale Unit

Information regarding the Scale Unit, its characteristics, and operational principles.

5.2 Connection Cable

Details about the connection cable, its types, and proper handling.

6. SETUP AND INSTALLATION

6.1 Mounting Method

Instructions for securely mounting the Magnescale components. Follow these steps to ensure stable and accurate operation.

6.2 Electrical Adjustment of the Connection Cable Circuit

Guidance on performing necessary electrical adjustments for the connection cable circuit to optimize performance and ensure proper signal transmission.

7. OPERATING INSTRUCTIONS

This section provides general guidelines for operating the Sony Magnescale. Refer to specific system documentation for detailed operational procedures.

8. MAINTENANCE

Regular maintenance is crucial for the longevity and accuracy of your Magnescale. This section outlines general maintenance practices.

9. SPECIFICATIONS

Detailed technical specifications for the Sony GB-A/SR127/SR128 Series Magnescale, including performance parameters and environmental requirements.

- **Publisher:** Sony
- **Publication Date:** January 1, 2001
- **Language:** English
- **Print Length:** 110 pages
- **ASIN:** B0070Q8FR2

10. TROUBLE INFORMATION

This section provides guidance on identifying and resolving common issues that may arise during the operation of the Magnescale. Refer to these troubleshooting tips before seeking professional assistance.

11. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Sony documentation or contact your authorized dealer. Specific warranty terms may vary by region.



