

[manuals.plus](#) /› [Marantec](#) /› [Marantec Funk-Codetaster COMMAND 231 Wireless Keypad Instruction Manual - 868 MHz](#)

Marantec COMMAND 231

Marantec Funk-Codetaster COMMAND 231 Wireless Keypad Instruction Manual

Model: COMMAND 231 (Part No. 69533)

1. INTRODUCTION

Thank you for choosing the Marantec Funk-Codetaster COMMAND 231. This wireless keypad provides convenient and secure access to your garage door operator without the need for a remote control or key. It operates on an 868 MHz frequency, ensuring reliable communication with compatible Marantec garage door systems. Please read this manual thoroughly before installation and operation to ensure proper function and safety.

2. SAFETY INSTRUCTIONS

- Always keep the keypad out of reach of children.
- Do not allow children to operate the garage door opener or play with the keypad.
- Ensure the garage door area is clear of people and objects before operating the door.
- Only use the keypad with compatible Marantec garage door operators (868 MHz frequency). Incompatibility can lead to malfunction.
- Do not attempt to repair or modify the keypad yourself. Refer to qualified personnel for service.
- Dispose of batteries according to local regulations.

3. PACKAGE CONTENTS

Upon unpacking, please verify that the following items are included:

- Marantec Funk-Codetaster COMMAND 231 Wireless Keypad
- Mounting hardware (screws, wall plugs)
- This instruction manual

Batteries are required but not included in the package.

4. SETUP AND INSTALLATION

4.1. Battery Installation

The COMMAND 231 keypad requires batteries for operation. Open the battery compartment, typically located on the back or inside the keypad cover. Insert the required batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

4.2. Mounting the Keypad

Select a suitable location for mounting the keypad, typically near your garage door entrance, at a convenient height. Ensure the location is protected from direct heavy rain and extreme weather conditions. Use the provided mounting hardware to securely attach the keypad to a solid surface.





Image 1: Marantec Funk-Codetaster COMMAND 231. This image displays the Marantec Funk-Codetaster COMMAND 231 wireless keypad. The protective cover is open, revealing the numeric keypad from 0 to 9, an 'Enter' button, and a button for illumination. The keypad is gray with white numbers and symbols.

4.3. Programming the Keypad

The COMMAND 231 must be programmed to communicate with your Marantec garage door operator. The exact programming steps may vary slightly depending on your specific garage door operator model. Always refer to your garage door operator's instruction manual for detailed pairing instructions. Generally, the process involves:

1. Activating the programming mode on your garage door operator (e.g., pressing a 'Learn' or 'Program' button).
2. Entering a desired personal identification number (PIN) on the COMMAND 231 keypad.
3. Confirming the PIN and transmitting the signal to the operator (e.g., by pressing 'Enter' on the keypad).
4. The operator will typically indicate successful pairing (e.g., by flashing lights or a sound).

Important: Ensure your garage door operator is compatible with 868 MHz frequency devices. The COMMAND 231 is not compatible with Marantec 868 bi-linked systems.



Image 2: Compatibility Overview. This image illustrates the compatibility of the COMMAND 231 keypad. It is compatible with Marantec 868 MHz remote controls (shown with two gray remotes and a green thumbs-up icon) but not compatible with Marantec 868 bi-linked remote controls (shown with two white remotes and a red thumbs-down icon). This highlights the importance of checking the frequency and system type for proper operation.

5. OPERATING INSTRUCTIONS

5.1. Opening/Closing the Garage Door

To operate your garage door:

1. Open the protective cover of the keypad.
2. Enter your programmed 4-digit (or longer, depending on setup) PIN code.
3. Press the 'Enter' button.

The garage door will activate (open or close). If the door is already in motion, entering the code again will stop or reverse its direction, depending on your operator's settings.

5.2. Keypad Illumination

The keypad features illumination for use in low-light conditions. Press the light bulb symbol button to activate the backlight. The illumination will typically stay on for a few seconds to allow you to enter your code.



Image 3: Illuminated Keypad. This image shows the Marantec Funk-Codetaster COMMAND 231 keypad with its keys illuminated, suggesting a backlight feature for use in low-light conditions. The keypad is seen from an elevated angle, highlighting its design and functionality.

6. MAINTENANCE

6.1. Cleaning

Clean the keypad surface with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the plastic and electronic components.

6.2. Battery Replacement

When the keypad's range decreases or the illumination becomes dim, it is likely time to replace the batteries. Follow the battery installation steps in Section 4.1. Always replace all batteries at the same time with new ones of the same type.

7. TROUBLESHOOTING

- **Keypad not responding:** Check if the batteries are correctly inserted and have sufficient charge. Replace batteries if necessary.
- **Garage door not activating:** Ensure you are entering the correct PIN. Verify that the keypad is within range of the garage door operator. Re-check compatibility (868 MHz, not bi-linked). Re-program the keypad if necessary, following your operator's instructions.
- **Reduced range:** This often indicates low battery power. Replace the batteries. Obstructions between the keypad and the operator can also reduce range.
- **Illumination not working:** Check batteries. If new batteries do not resolve the issue, contact support.

8. SPECIFICATIONS

Brand	Marantec
Model	COMMAND 231
Part Number	69533
ASIN	B00718ZER8

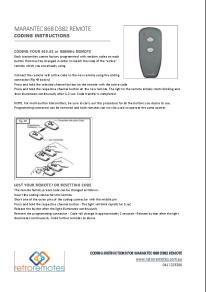
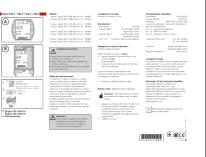
Frequency	868 MHz
Dimensions (L x W x H)	11 x 7.01 x 4.8 cm
Weight	260 Grams
Material	Plastic, Electronics
Color	Gray
Batteries Required	Yes (not included)
Mounting Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Marantec website. If you encounter any issues that cannot be resolved using this manual, please contact Marantec customer support or your authorized dealer for assistance.

© 2023 Marantec. All rights reserved.

Related Documents - COMMAND 231

	<p><u>Marantec 868 D382 Remote Coding Instructions</u></p> <p>Step-by-step guide for coding and resetting Marantec 868 D382 remote controls, including instructions for 433.92MHz and 868MHz frequencies.</p>
	<p><u>Marantec Digital 339.2/340.2/343.2/344.2 Universal Receiver User Manual</u></p> <p>User manual for the Marantec Digital 339.2, 340.2, 343.2, and 344.2 universal receivers, detailing installation, operation, and technical specifications.</p>
	<p><u>Marantec Digital 371 Receiver: Installation and Operation Guide</u></p> <p>This guide provides instructions for installing and operating the Marantec Digital 371 receiver, a plug-in receiver for impulse control of garage door operators, swing gates, and sliding gates. It covers safety instructions, functions, mounting, commissioning, technical specifications, and EU declaration of conformity.</p>

	<p>Marantec Synergy 260, 270, 280 Garage Door Operator Owner's Manual</p> <p>Comprehensive owner's manual for Marantec Synergy 260, 270, and 280 residential garage door operator systems, covering installation, operation, maintenance, safety, and warranty information.</p>
	<p>Manual del Propietario Marantec Q-7500 y Q-7700</p> <p>Guía completa de instalación, operación, mantenimiento y solución de problemas para los sistemas de operador automático de garaje Marantec Q-7500 y Q-7700.</p>
	<p>How to Programme Marantec Comfort 270/280 Opener</p> <p>Step-by-step guide on how to program the Marantec Comfort 270 and Comfort 280 garage door openers, including setting open/closed positions and programming remote controls.</p>