

[Manuals.plus](#) /

› [Verve](#) /

› Steadfast Audio CD User Manual

Verve 24715325

Steadfast Audio CD User Manual

Model: 24715325

Brand: Verve

INTRODUCTION

The **Steadfast** Audio CD, by acclaimed artist Clay Aiken, is a compilation featuring selected tracks from his 2010 release *Tried and True*, alongside new recordings. This manual provides essential information for the proper use, care, and maintenance of your Audio CD to ensure optimal listening enjoyment.



Image: The album cover for Clay Aiken's "Steadfast" Audio CD. It features a portrait of Clay Aiken in a suit against a dark background, with the album title and artist name prominently displayed.

SETUP AND FIRST USE

To begin enjoying your **Steadfast** Audio CD, follow these simple steps:

1. Ensure your CD player, car stereo, or computer's optical drive is clean and free of dust.
2. Gently remove the Audio CD from its case, holding it by the edges to avoid touching the playing surface.
3. Insert the CD into the disc tray or slot of your playback device with the label side facing up.
4. Close the disc tray or allow the device to automatically load the CD.
5. Select the CD input source on your playback device, if applicable.

OPERATING YOUR AUDIO CD

Once the CD is loaded, you can control playback using your device's standard functions:

- **Play/Pause:** Press the play button to start playback. Press again to pause.
- **Stop:** Press the stop button to end playback and reset to the beginning of the CD.
- **Skip Tracks:** Use the "next track" or "previous track" buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the "next track" or "previous track" buttons to fast forward or rewind within a song.
- **Volume Control:** Adjust the volume using your playback device's volume controls.

For detailed instructions on specific playback features, please refer to the user manual of your CD player or audio system.

CARE AND MAINTENANCE

Proper care will extend the life of your **Steadfast** Audio CD and ensure consistent audio quality:

- **Handling:** Always hold the CD by its outer edges or the center hole. Avoid touching the shiny playing surface.
- **Cleaning:** If the CD becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circular motions. Use a specialized CD cleaning solution if necessary, but avoid harsh chemicals or abrasive materials.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity, which can warp the disc or damage the data layer.
- **Scratches:** While minor scratches may not affect playback, deep scratches can cause skipping or make the CD unplayable. Handle with care to prevent scratches.

TROUBLESHOOTING COMMON ISSUES

If you encounter problems with your **Steadfast** Audio CD, refer to the table below for potential solutions:

Problem	Possible Cause	Solution
CD skips or stutters during playback.	Dust, fingerprints, or minor scratches on the disc surface.	Clean the CD gently with a lint-free cloth. Ensure the CD player lens is clean.
CD does not play or is not recognized.	CD inserted incorrectly, disc is severely damaged, or player malfunction.	Re-insert the CD correctly (label side up). Check for visible damage. Try the CD in another player to rule out player issues.

Problem	Possible Cause	Solution
Audio quality is poor (e.g., muffled, distorted).	Dirty disc, faulty audio cables, or speaker issues.	Clean the CD. Check all audio connections between your player and amplifier/speakers.

If the issue persists after trying these solutions, the CD may be damaged beyond repair, or your playback device may require servicing.

PRODUCT SPECIFICATIONS

- **Title:** Steadfast
- **Artist:** Clay Aiken
- **Format:** Audio CD
- **Number of Discs:** 1
- **Product Dimensions:** 4.88 x 5.55 x 0.47 inches
- **Item Weight:** 3.32 ounces
- **Manufacturer/Label:** Verve
- **Model Number:** 24715325
- **ASIN:** B0071WQ8JW
- **Date First Available:** January 26, 2012

WARRANTY AND SUPPORT INFORMATION

This Audio CD is a media product and typically does not come with a manufacturer's warranty in the same way electronic devices do. If you purchased this CD new and it arrived damaged or defective, please contact the retailer from whom you purchased it within their specified return period for assistance.

For general inquiries about the artist or album, please refer to official artist websites or music information databases. For technical support related to your CD playback device, consult the device's manufacturer or its user manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question