

## Casio LQ-139EMV-7ALDF

# Casio Women's Analog Watch LQ-139EMV-7ALDF Instruction Manual

Model: LQ-139EMV-7ALDF

## 1. INTRODUCTION

---

Thank you for choosing the Casio Women's Analog Watch, Model LQ-139EMV-7ALDF. This manual provides essential information regarding the setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure proper use and longevity of your watch.

## 2. SAFETY INFORMATION

---

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Keep the watch away from strong magnetic fields, as this can affect timekeeping accuracy.
- Avoid contact with gasoline, cleaning solvents, aerosol sprays, adhesives, paints, etc. These chemicals can cause discoloration or damage to the resin case and band.
- **Water Resistance:** This watch is water resistant up to 50 meters. This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Do not operate the crown or buttons while the watch is wet.

## 3. WATCH COMPONENTS

---

Familiarize yourself with the main components of your watch:

- **Crown:** Used for setting the time.
- **Hour Hand:** Indicates the hour.
- **Minute Hand:** Indicates the minute.
- **Second Hand:** Indicates the second.
- **Case:** The main body of the watch.
- **Band:** Secures the watch to your wrist.







Figure 3.1: Front view of the Casio LQ-139EMV-7ALDF watch, showing the white dial, gold-tone hands, and black resin case and band.



Figure 3.2: Side view of the watch, highlighting the crown used for time adjustment.

## 4. SETUP

---

### 4.1 Setting the Time

1. Pull the crown out to the first click position.
2. Turn the crown to move the hour and minute hands to set the correct time.
3. Once the time is set, push the crown back in to its normal position. The second hand will begin to move, indicating the watch is operating.



Figure 4.1: The Casio LQ-139EMV-7ALDF watch worn on a wrist, demonstrating its compact size.

## 5. OPERATING INSTRUCTIONS

---

Your Casio LQ-139EMV-7ALDF watch is designed for simple and reliable timekeeping. Once the time is set, the watch will continuously display the current hour, minute, and second.

- The watch operates on a quartz movement, ensuring accurate timekeeping with a deviation of approximately  $\pm 20$  seconds per month.
- The three hands (hour, minute, second) provide a clear analog display of the time.

## 6. MAINTENANCE

---

### 6.1 Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the watch case and band with a soft, dry cloth regularly to remove dirt and moisture.
- For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent. Wipe thoroughly and then dry completely.
- Do not use volatile agents (like alcohol, benzine, thinner) or strong cleaning agents, as they may damage the resin components.

### 6.2 Battery Replacement

The watch is powered by one SR626SW lithium metal battery, which has an approximate life of 3 years. When the watch stops or the second hand moves erratically, it is an indication that the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.



Figure 6.1: Back view of the watch, showing the stainless steel case back where battery replacement is performed.

## 7. TROUBLESHOOTING

---

- **Watch is not running:** Check if the crown is pushed all the way in. If it is, the battery may be depleted and requires replacement.
- **Time is incorrect:** Reset the time as described in Section 4.1. If the time continues to be inaccurate, the watch may require servicing.
- **Water inside the watch:** If you notice moisture or condensation inside the watch, stop using it immediately and contact a service center. Water ingress can cause significant damage to the internal components.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	LQ-139EMV-7ALDF
<b>Case Dimensions (L x W x H)</b>	31.2 × 25.2 × 7.5 mm
<b>Weight</b>	11 grams
<b>Case Material</b>	Resin
<b>Band Material</b>	Resin
<b>Water Resistance</b>	50 meters

<b>Power Source</b>	SR626SW Battery
<b>Battery Life</b>	Approx. 3 years
<b>Glass Material</b>	Resin Glass
<b>Accuracy</b>	±20 seconds per month
<b>Display Type</b>	Analog (Hour, Minute, Second hands)
<b>Clasp Type</b>	Buckle
<b>Dial Color</b>	White
<b>Band Color</b>	Black
<b>Case Diameter</b>	24 mm
<b>Band Width</b>	20 mm
<b>Case Thickness</b>	7.5 mm

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

This product comes with a 1-year manufacturer's warranty from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.

### 9.2 Customer Support

For warranty claims, service, or any questions regarding your Casio watch, please contact the manufacturer or their authorized service agent. You may also refer to the retailer (e.g., Amazon) for further assistance and contact details.