

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Logitech](#) /
- › [Logitech AC Power Adaptor User Manual for Harmony Remotes](#)

**Logitech Harmony 720, 880, 890, 1000, MX 1000, MX Revolution, diNovo Media Laser, MX 5000, MX 3100, diNovo Edge, Harmony 890 Pro**

# Logitech AC Power Adaptor User Manual

For Harmony 720, 880, 890, 1000, MX 1000, MX Revolution, diNovo Media Laser, MX 5000, MX 3100, diNovo Edge, and Harmony 890 Pro Remotes

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your Logitech AC Power Adaptor. This adaptor is designed to provide power to various Logitech Harmony and MX series remote controls and accessories. Please read this manual thoroughly before use and retain it for future reference.



Image: Logitech AC Power Adaptor. This image shows the compact design of the power adaptor, featuring its main body and the attached power cord with a 2-pin connector at the end, ready for connection to compatible Logitech devices.

## SAFETY INFORMATION

---

- Use only with specified Logitech devices.
- Do not expose to water or excessive moisture.
- Do not disassemble or attempt to repair the adaptor.
- Ensure the power outlet voltage matches the adaptor's specifications (240 Volts).
- Keep out of reach of children.

## SETUP

---

1. **Identify Compatible Device:** Confirm your Logitech device (e.g., Harmony 720, 880, 890, 1000, MX 1000, MX Revolution, diNovo Media Laser, MX 5000, MX 3100, diNovo Edge, Harmony 890 Pro) requires this specific AC power adaptor.
2. **Connect to Device:** Insert the 2-pin connector of the AC power adaptor firmly into the power input port of your Logitech device or its charging cradle.
3. **Connect to Power Outlet:** Plug the AC power adaptor into a standard electrical wall outlet. Ensure the outlet provides 240 Volts as specified for the adaptor.
4. **Verify Connection:** Once connected, your device should begin charging or power on, depending on its design. Refer to your device's specific manual for charging indicators.

## OPERATING INSTRUCTIONS

---

The Logitech AC Power Adaptor functions automatically once connected. It provides a stable power supply for charging or operating your compatible Logitech devices. No user interaction is required for its operation beyond proper connection.

- Always ensure the adaptor is securely plugged into both the device and the wall outlet.
- Disconnect the adaptor from the wall outlet when not in use for extended periods.
- Avoid pulling the cable to disconnect; always grasp the plug itself.

## MAINTENANCE

---

- **Cleaning:** Disconnect the adaptor from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adaptor in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the adaptor body to prevent damage.
- **Inspection:** Periodically inspect the cable and connector for any signs of damage, such as fraying, cuts, or bent pins. Discontinue use if damage is observed.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device not charging/powering on.	Adaptor not properly connected.	Ensure the adaptor is firmly plugged into both the device and the wall outlet.
	Wall outlet is not active.	Test the wall outlet with another device or try a different outlet.

Problem	Possible Cause	Solution
	Adaptor or cable is damaged.	Inspect the adaptor and cable for visible damage. Discontinue use if damaged and replace.
Adaptor feels unusually hot.	Overload or internal fault.	Immediately disconnect the adaptor from the power source and device. Do not use if it continues to overheat.

## SPECIFICATIONS

---

**Brand:** Logitech

**Model Compatibility:** Logitech Harmony 720, 880, 890, 1000 remotes; MX 1000, MX Revolution, diNovo Media Laser, MX 5000, MX 3100, diNovo Edge, Harmony 890 Pro.

**Input Voltage:** 240 Volts

**Wattage:** 45 Watts

**Power Source:** Corded Electric

**Main Power Connector Type:** 2 Pin

**Item Weight:** 3.2 ounces (approximately 0.09 Kilograms)

**Package Dimensions:** 6.6 x 4 x 2 inches

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage and technical support, please refer to the documentation included with your original Logitech device or visit the official Logitech support website. Warranty terms may vary by region and product.

**Logitech Support:** <https://support.logi.com/>