

Fujifilm FX-F770EXR WH

Fujifilm Finepix F770exr Digital Camera User Manual

Model: FX-F770EXR WH

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Fujifilm Finepix F770exr Digital Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference. The Fujifilm Finepix F770exr is a high-definition digital camera designed for ease of operation, capturing high-quality images and videos.

2. PRODUCT OVERVIEW

The Fujifilm Finepix F770exr is a compact digital camera featuring a 16-megapixel CMOS sensor and a powerful 20x optical zoom Fujinon lens. It supports both JPEG and RAW file formats, offering flexibility for various photography needs. The camera is designed for portability and ease of use, making it suitable for everyday photography.

2.1. Camera Components



Figure 2.1: Front View. This image displays the front of the Fujifilm Finepix F770exr camera, highlighting the Fujinon lens, built-in flash, and the Fujifilm logo. The camera is white with silver accents around the lens.



Figure 2.2: Front View with Extended Lens. This image shows the camera from an angled front perspective with the lens extended, demonstrating its operational state and zoom mechanism.



Figure 2.3: Back View. This image presents the rear of the camera, featuring the large LCD screen, navigation buttons, menu button, and mode dial, which are essential for camera operation and settings adjustment.



Figure 2.4: Top View. This image shows the top of the camera, including the power button, shutter button, zoom lever, and the GPS indicator, providing a clear view of the primary controls.

3. SETUP

3.1. Unpacking

Carefully unpack all items from the box. Ensure the following components are present:

- Fujifilm Finepix F770exr Digital Camera Body
- Battery (1 Lithium Ion battery)
- USB Cable (for charging and data transfer)

- Wrist Strap
- User Manual (this document)

If any items are missing or damaged, please contact customer support.

3.2. Charging the Battery

1. Insert the supplied Lithium Ion battery into the camera's battery compartment. Ensure it clicks into place.
2. Connect the camera to a power source using the provided USB cable. The charging indicator light will illuminate.
3. Allow the battery to fully charge before first use. The indicator light will turn off or change color when charging is complete.

3.3. Inserting a Memory Card

The camera requires an SD/SDHC/SDXC memory card (sold separately) to store photos and videos.

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the memory card with the label facing the correct direction (refer to the diagram inside the compartment). Push until it clicks into place.
3. Close the memory card slot cover securely.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

- To power on the camera, press the **ON/OFF** button located on the top of the camera.
- To power off the camera, press the **ON/OFF** button again.

4.2. Taking Photos

1. Turn on the camera.
2. Select your desired shooting mode using the mode dial (e.g., Auto, Program, EXR).
3. Frame your shot using the LCD screen.
4. Use the zoom lever to adjust the optical zoom (up to 20x).
5. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
6. Press the shutter button fully down to take the picture.

Note: The camera supports both JPEG and RAW file formats. RAW files offer greater flexibility for post-processing but are larger in size. JPEG files are ready for immediate use.

4.3. Playback Mode

To view your photos and videos:

- Press the **Playback** button (often indicated by a play icon).
- Use the navigation buttons to scroll through your images.
- Press the **MENU/OK** button to view options for the selected image (e.g., delete, protect).
- Press the **Playback** button again to exit playback mode.

4.4. Menu Navigation

To access camera settings:

- Press the **MENU/OK** button.
 - Use the navigation buttons to move between menu items.
 - Press **MENU/OK** to select an item or confirm a setting.
 - Press the **BACK** or **DISP** button to return to the previous screen or exit the menu.
-

5. MAINTENANCE

5.1. Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water and then wipe dry. Avoid using organic solvents.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a specialized lens cleaning cloth and lens cleaning solution. Do not touch the lens surface with your fingers.
- **LCD Screen:** Gently wipe the screen with a soft, dry cloth. Avoid pressing hard on the screen.

5.2. Storage

- When not in use, store the camera in a cool, dry, and well-ventilated place, away from direct sunlight and high humidity.
 - Remove the battery if the camera will not be used for an extended period.
 - Store the camera in a protective case to prevent scratches and impacts.
-

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Fujifilm Finepix F770exr camera.

6.1. Camera Does Not Turn On

- Ensure the battery is fully charged.
- Check that the battery is inserted correctly.
- If using an AC adapter, ensure it is properly connected.

6.2. "Lens Control Error" Message

- This error can occur if the lens mechanism is obstructed.
- Turn the camera off and then on again.
- Check for any foreign objects (e.g., dust, sand) around the lens barrel. If found, gently remove them with a blower.
- Avoid applying force to the lens when it is extending or retracting.
- If the error persists, contact customer support.

6.3. Pictures Are Blurry

- Ensure the lens is clean and free from smudges.

- Check that the camera is properly focused. Press the shutter button halfway down to confirm focus before fully pressing.
- Use a higher shutter speed in low light conditions or when shooting moving subjects.
- Consider using a tripod for stable shots, especially with high zoom or in low light.

6.4. No Official Product Videos Available

Based on the available product information, there are no official product videos provided by the seller for the Fujifilm Finepix F770exr Digital Camera. Therefore, no videos can be embedded in this manual.

7. SPECIFICATIONS

Feature	Specification
Brand	Fujifilm
Model Name	f (Finepix F770exr)
Item Model Number	FX-F770EXR WH
Photo Sensor Technology	CMOS
Optical Zoom	20x
Image Stabilization	Digital
Supported File Format	JPEG, RAW
Max Shutter Speed	1/2000 seconds
Expanded ISO Minimum	100
Aspect Ratio	4:3
Compatible Mountings	Fujifilm F
Item Weight	8.3 ounces
Package Dimensions	5.63 x 5.59 x 2.05 inches
Batteries Required	1 Lithium Ion battery
Date First Available	August 7, 2012

8. WHAT'S IN THE BOX

The standard package for the Fujifilm Finepix F770exr Digital Camera includes:

- Camera Body Only

Note: Accessories such as batteries, chargers, and memory cards may be sold separately or included depending on the specific retail package. Please check your product packaging for a complete list of contents.

9. WARRANTY AND SUPPORT

9.1. Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or visit the official Fujifilm website. Keep your proof of purchase for warranty claims.

9.2. Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Fujifilm customer support. You can typically find contact information on the Fujifilm website or on the product packaging. For online resources, visit the [Official Fujifilm Store on Amazon](#).

© 2024 Fujifilm. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question