

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Woods](#) /

› [Woods L1313 Rechargeable LED Work Light User Manual](#)

Woods L1313

Woods L1313 Rechargeable LED Work Light

Model: L1313

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

The Woods L1313 Rechargeable LED Work Light is a portable lighting solution designed for various tasks requiring bright, reliable illumination. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your work light.

Important Safety Information

- Read all instructions before use.
- Do not disassemble the unit. Refer servicing to qualified personnel.
- Keep away from flammable materials.
- Do not expose to excessive moisture or immerse in water.
- Use only the provided charger.
- Dispose of batteries according to local regulations.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Woods L1313 Rechargeable LED Work Light (1 unit)
- 12-Volt 500mA Transformer (AC charging adapter)
- 7-Volt 1300mAh Li-ion Rechargeable Batteries (pre-installed)

3. SETUP AND INITIAL CHARGE

Before first use, fully charge the work light. The unit can be charged while in use.

1. **Unpack the Work Light:** Carefully remove the work light and all accessories from the packaging.
2. **Connect the Charger:** Plug the 12-volt 500mA transformer into a standard wall outlet. Connect the other end of the charger cable to the charging port on the work light.

3. **Initial Charge:** Allow approximately 3 hours for a full charge. The charging indicator (if present) will typically change color or turn off when charging is complete.



Figure 1: Woods L1313 Work Light connected to its charger. Ensure the charger is securely plugged into both the light and a power outlet for optimal charging.

4. OPERATING INSTRUCTIONS

Turning On/Off

Locate the weatherproof On/Off switch on the unit. Press the switch to turn the light ON. Press it again to turn the light OFF.

Positioning the Work Light

The work light features an adjustable stand, allowing you to direct the light beam as needed. The unit is designed to remain cool to the touch during operation, making it safe to handle and reposition.

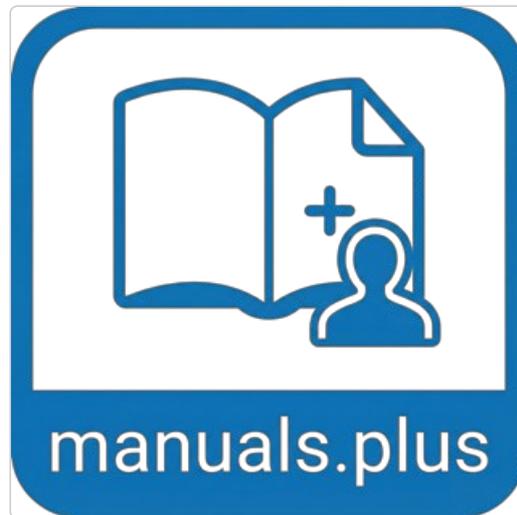


Figure 2: The Woods L1313 Work Light positioned to illuminate a detailed task. Its adjustable design allows for precise light direction.

Battery Life and Charging During Use

A fully charged battery provides approximately 2 hours of continuous operation. For extended use, the work light can operate while simultaneously charging. Simply keep the 12-volt 500mA transformer plugged into both the light and a power source.

5. MAINTENANCE

Cleaning

To clean the work light, ensure it is turned off and unplugged. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto the unit.

Storage

Store the work light in a cool, dry place away from direct sunlight and extreme temperatures. For prolonged storage, it is recommended to fully charge the battery every 3-6 months to maintain battery health.

Battery Replacement

The 7-volt 1300mAh Li-ion rechargeable batteries are designed for long life (rated 50,000 hours for LEDs). If battery performance significantly degrades, contact customer support for replacement options. Do not attempt to replace batteries yourself unless specifically instructed by the manufacturer.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted. Charger not connected properly. Faulty switch.	Charge the battery for at least 3 hours. Ensure charger is securely plugged into both the light and a working outlet. Contact customer support.
Short battery run time.	Battery not fully charged. Battery life degraded.	Ensure a full 3-hour charge. Consider replacing the battery (contact support).
Light flickers or dims.	Low battery charge. Loose connection.	Recharge the unit. Check charger connection. If problem persists, contact support.
Charger not working.	Faulty outlet. Damaged charger.	Test with a different outlet. Inspect charger for damage. Contact customer support for a replacement.

7. SPECIFICATIONS

Feature	Detail
Model Number	L1313
Light Source	108 LED Bulbs
Luminous Flux	350 Lumens
Color Temperature	Approximately 6500K (Daylight)
LED Life Rating	50,000 hours
Power Source	Battery Powered / AC Adapter
Battery Type	7-Volt 1300mAh Li-ion Rechargeable
Battery Run Time	2+ hours
Charge Time	3 hours
Charger Input	120-Volt AC
Charger Output	12-Volt 500mA
Cord Length	6 feet
Material	ABS
Finish	Safety Green Powder Coated
Special Features	Rechargeable, Cool to the touch, Weatherproof On/Off switch, High output mirror reflector with Webb Optics
Dimensions	16 x 14 x 17 inches (Product Dimensions)
Weight	2.8 pounds
Certifications	ETL Listed

8. WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This Woods L1313 Rechargeable LED Work Light comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or to inquire about replacement parts, please contact Woods customer support. Refer to the product packaging or the official Woods website for the most current contact information.

Online Resources: [Visit the Woods Store on Amazon](#)