

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SeKi](#) /

› [SeKi Easy Plus Universal Learning Remote Control \(Model 311154\) - User Manual](#)

## SeKi 311154

# SeKi Easy Plus Universal Learning Remote Control (Model 311154)

User Manual

## INTRODUCTION

The SeKi Easy Plus remote control is designed for simplicity and ease of use, making it ideal for seniors, children, and individuals who prefer a straightforward control experience. This universal learning remote can replace any infrared remote control, allowing you to consolidate multiple remotes into one. Its large, freely assignable buttons ensure comfortable operation, and all programmed settings are retained even when changing batteries.

## PRODUCT FEATURES

- **Universal Learning Function:** Capable of learning commands from any existing infrared remote control.
- **Replaces Multiple Remotes:** Consolidate control for your TV and other IR devices.
- **Freely Assignable Keys:** Customize button functions to your preference.
- **Large, Easy-to-Use Buttons:** Designed for enhanced visibility and tactile feedback.
- **Memory Retention:** Programmed settings are saved even after battery replacement.
- **Compatible Devices:** Primarily designed for televisions, but can learn from other IR devices.
- **Connectivity Technology:** Infrared (IR).
- **Number of Buttons:** 20.
- **Maximum Range:** Up to 10 meters.

## PACKAGE CONTENTS

The SeKi Easy Plus remote control package includes:

- 1x SeKi Easy Plus Universal Learning Remote Control (Silver-Black)
- User Manual (this document)

**Note:** 2x AAA batteries are required for operation and are not included in the package.



SeKi  
Easy Plus



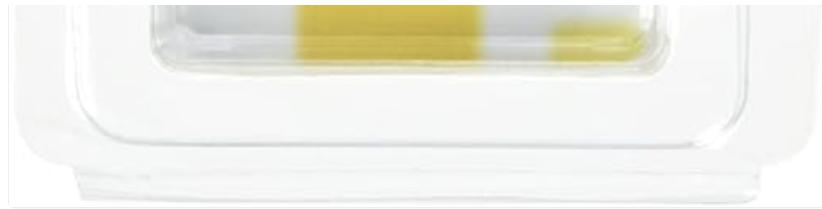



Image: SeKi Easy Plus remote control in its retail packaging, showing the silver-black design and large buttons.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the SeKi Easy Plus remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

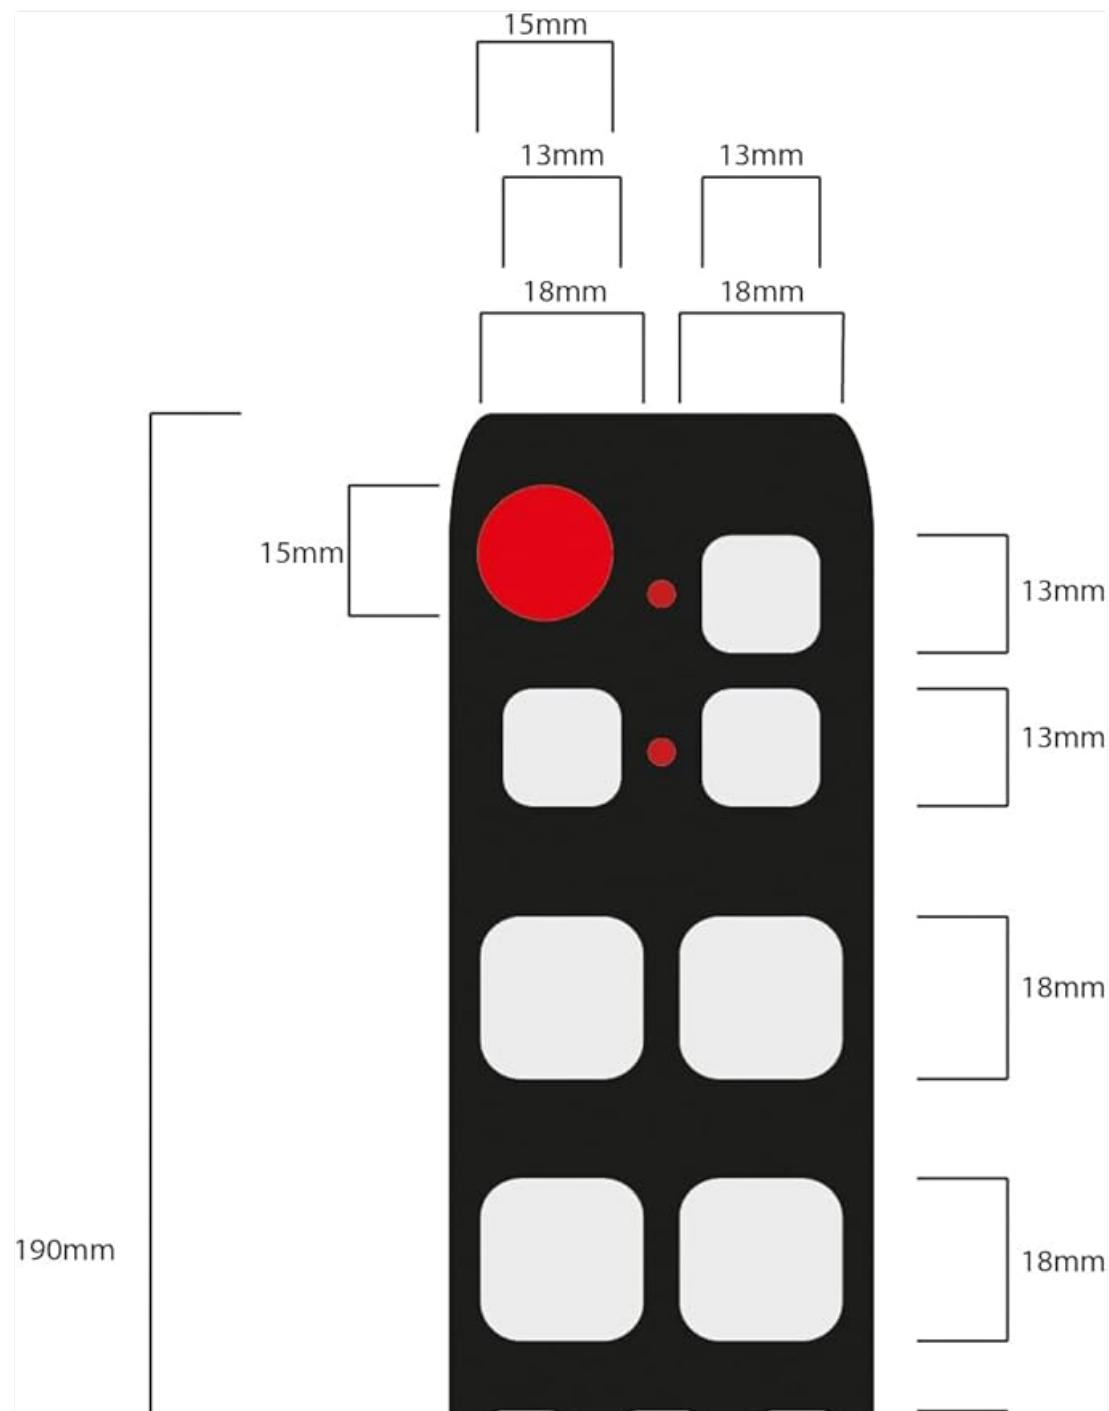

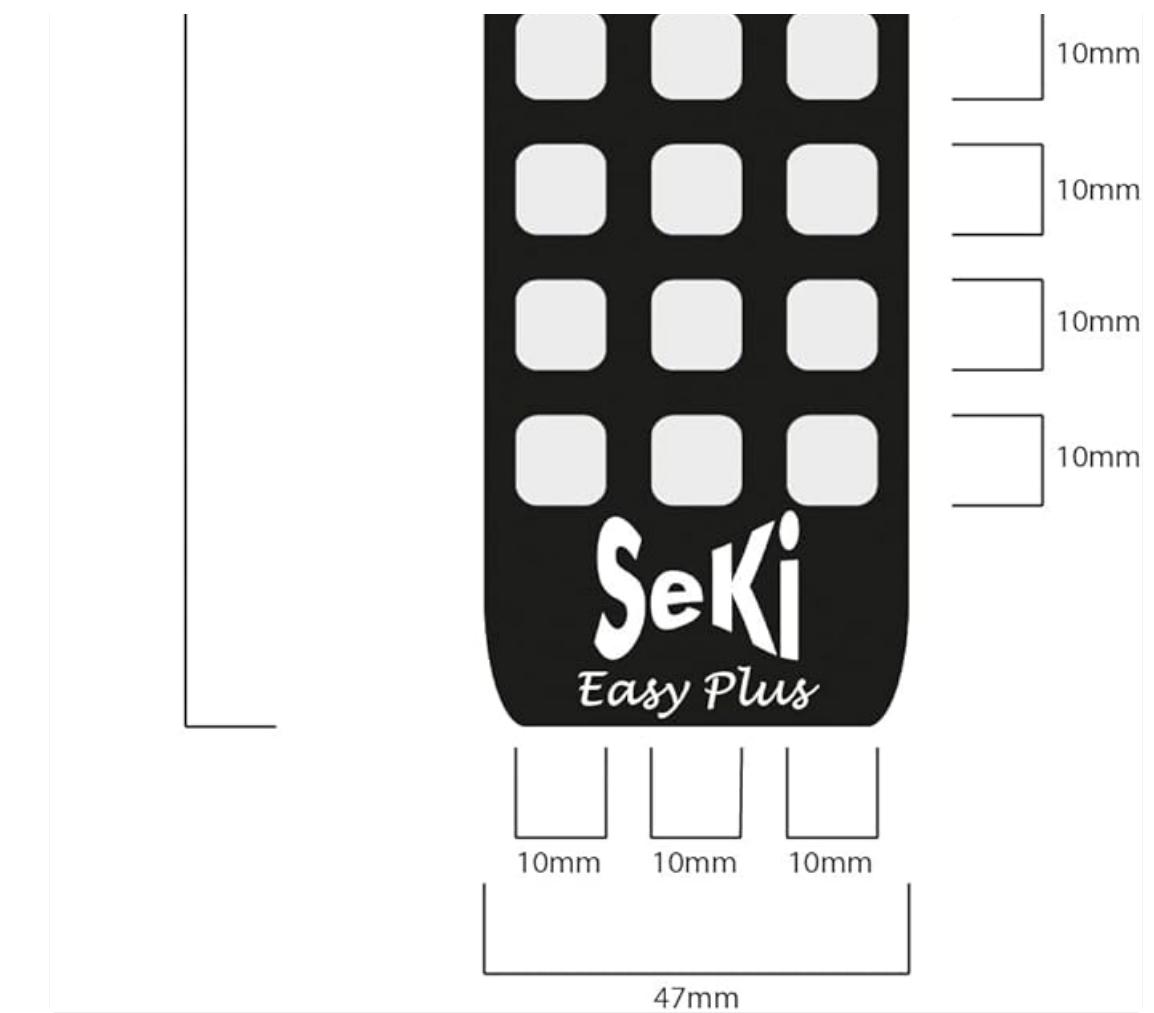


Image: Rear view of the SeKi Easy Plus remote control with the battery cover removed, showing the empty battery slots.



Image: Close-up view of the battery compartment, clearly indicating the requirement for AAA batteries and their correct orientation.

## 2. Initial Power-On

After installing the batteries, the remote is ready for programming. There is no separate power-on button; the

remote will activate when a button is pressed.

## OPERATING INSTRUCTIONS: LEARNING FUNCTION

The SeKi Easy Plus remote control learns commands directly from your original remote. Follow these steps carefully to program each button:

- 1. Prepare Remotes:** Place the SeKi Easy Plus remote and your original remote control on a flat surface, facing each other, with their infrared emitters aligned and approximately 1-3 cm apart. Ensure both remotes have fresh batteries.
- 2. Enter Learning Mode:** Press and hold the **TV Power (red button)** and **AV** buttons simultaneously on the SeKi Easy Plus remote for approximately 3 seconds until the red LED indicator light stays on continuously. This indicates the remote is in learning mode.
- 3. Select Button to Program:** On the SeKi Easy Plus remote, press the button you wish to program (e.g., Volume Up '+'). The red LED will start blinking slowly.
- 4. Transmit Command:** On your original remote control, press and hold the corresponding button (e.g., Volume Up) until the red LED on the SeKi Easy Plus remote blinks rapidly three times and then stays on continuously. This confirms the command has been learned successfully.
- 5. Program More Buttons:** Repeat steps 3 and 4 for all other buttons you wish to program (e.g., Volume Down '-', Channel Up '^', Channel Down 'v', Mute, Number buttons, etc.).
- 6. Exit Learning Mode:** Once all desired buttons are programmed, press the **TV Power (red button)** and **AV** buttons simultaneously again, or wait for approximately 10 seconds without any input. The red LED will turn off, indicating that the remote has exited learning mode and saved the settings.

### Important Notes:

- Perform the programming steps promptly. If there is a long pause between button presses during learning mode, the remote may exit learning mode automatically.
- Ensure a clear line of sight between the two remotes during the learning process.
- If a button does not learn correctly, repeat the process for that specific button.



Image: Technical diagram illustrating the dimensions and button layout of the SeKi Easy Plus remote control, highlighting the large button design.







Image: Side profile of the SeKi Easy Plus remote control, showcasing its ergonomic design and slim form factor.

## MAINTENANCE

### Battery Replacement

When the remote's performance degrades or the LED indicator light does not respond, it's time to replace the batteries. Follow the battery installation steps in the "Setup" section. The SeKi Easy Plus remote retains its programmed settings even when batteries are removed, so reprogramming is not necessary after replacement.

### Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners or immerse the remote in water.

## TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace with fresh AAA batteries if necessary.
- Ensure there is a clear line of sight between the remote and the device (TV).

- **Buttons not working after programming:**

- The learning process might have failed for specific buttons. Repeat the "Operating Instructions: Learning Function" steps for the affected buttons.
- Ensure the original remote's signal is strong and consistent during programming.

- **Learning mode exits prematurely:**

- This can happen if there's too long a pause between steps during the learning process. Try to complete each step more quickly.
- Ensure the original remote is transmitting a clear signal when its button is pressed.

- **Device not responding to learned commands:**

- Verify that the SeKi Easy Plus remote is pointed directly at the device's IR receiver.
- Confirm that the original remote works correctly with the device. If not, the issue might be with the device itself.

## SPECIFICATIONS

<b>Brand</b>	SeKi
<b>Model Name</b>	EASY PLUS
<b>Model Number</b>	311154
<b>Color</b>	Silver-Black

<b>Connectivity Technology</b>	Infrared (IR)
<b>Compatible Devices</b>	Television (and other IR-controlled devices)
<b>Special Features</b>	Universal, Learning Function, Large Buttons, Senior-Friendly, Freely Programmable, Settings retained during battery change
<b>Number of Buttons</b>	20
<b>Maximum Range</b>	10 Meters
<b>Batteries Required</b>	2x AAA (not included)

## WARRANTY AND SUPPORT

The SeKi Easy Plus remote control comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For further assistance, troubleshooting tips, or to view additional product information, please visit the official SeKi website:

[www.my-seki.com](http://www.my-seki.com)



[www.my-seki.com](http://www.my-seki.com)



Matrix Handels GmbH  
Industriestrasse 12 - D-91186 Büchenbach  
WEEE-Reg.-Nr. DE 60722497

- Universal remote control for audio-video devices
  - extra large buttons
  - very easy to handle
- replaces any IR-remote control, programmable with the old remote control
- remote control for the whole family, from grandchildren to grandparents
  - keeps the settings during battery change
  - 2 year warranty
  - batteries not included

If you have further questions or need additional guidance please visit our website [www.my-seki.com](http://www.my-seki.com)

SeKi Easy Plus silber-schwarz



4 260237 197225 >

Image: Back of the product packaging, detailing key features, warranty information, and the official support website.