

[Manuals.plus](#) /

> [TOMY](#) /

> Takara Tomy Tomica No. 80 C11 Steam Locomotive Train Instruction Manual

TOMY No. 80 C11 Steam Locomotive Train

Instruction Manual

Takara Tomy Tomica No. 80 C11 Steam Locomotive Train

Brand: TOMY

PRODUCT OVERVIEW

The Takara Tomy Tomica No. 80 C11 Steam Locomotive Train is a meticulously crafted die-cast model, part of the popular Tomica series. This miniature replica of the C11 steam locomotive is designed for collectors and enthusiasts, offering detailed features in a compact size. It is suitable for display and light play.



Image: The Takara Tomy Tomica No. 80 C11 Steam Locomotive Train, a black die-cast model with gold and silver details, showcasing its realistic design.

SETUP

The Takara Tomy Tomica No. 80 C11 Steam Locomotive Train comes pre-assembled and ready for use. No complex setup or assembly is required.

1. **Unboxing:** Carefully remove the train model from its packaging. Ensure all protective materials are removed.
2. **Inspection:** Before play or display, inspect the model for any visible damage or manufacturing defects.



Image: The compact red and white packaging box for the Tomica No. 80 C11 Steam Locomotive, indicating the model number and brand.

OPERATING INSTRUCTIONS

This Tomica model is a die-cast toy designed for manual play and collection. It does not require batteries or external power.

- **Manual Movement:** The train features rolling wheels, allowing it to be pushed along flat surfaces.
- **Display:** The model can be displayed on shelves, desks, or in display cases as a collector's item.
- **Compatibility:** While part of the Tomica series, this specific model is a die-cast car-sized train and is not designed for

use with larger train tracks like Plarail or other battery-operated train systems.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your Tomica model.

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the train. For stubborn dust, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the model in a cool, dry place away from direct sunlight and extreme temperatures to prevent fading or material degradation.
- **Handling:** Handle the model by its main body to avoid damaging delicate parts such as the wheels or small decorative elements.

TROUBLESHOOTING

The Takara Tomy Tomica No. 80 C11 Steam Locomotive Train is a simple, non-electronic die-cast model, so troubleshooting is minimal.

Problem	Possible Cause	Solution
Wheels do not roll smoothly.	Dust or debris caught in axles; bent axle.	Carefully remove any visible debris. If an axle is bent, gentle straightening may be possible, but avoid excessive force to prevent breakage.
Paint chipping or fading.	Rough handling; prolonged exposure to sunlight.	Handle with care. Store away from direct sunlight. This is normal wear and tear for a toy.

SPECIFICATIONS

Feature	Detail
Product Model	No. 80 C11 Steam Locomotive Train
Brand	TOMY (Takara Tomy)
Product Dimensions	3.19 x 1.57 x 1.1 inches
Item Weight	2.72 ounces
ASIN	B0073CCVX2
Recommended Age	4 years and up
Material	Die-cast metal with plastic parts
Contents	1 x Train Engine

WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or visit the official TOMY website. As a die-cast collectible, specific warranties may vary.

For further assistance, please contact TOMY customer service through their official channels.