

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nikon](#) /
- › [Nikon COOLPIX S6300 Digital Camera Instruction Manual](#)

Nikon S6300

Nikon COOLPIX S6300 Digital Camera Instruction Manual

Model: S6300

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Nikon COOLPIX S6300 digital camera. Please read this manual thoroughly before using your camera and keep it accessible for future reference.



Figure 1: Nikon COOLPIX S6300 Digital Camera (Red)

KEY FEATURES

- 16.0 Megapixel CMOS sensor for high-resolution images.
- 10x Zoom-NIKKOR glass lens (25-250mm equivalent) for versatile shooting.
- 2.7-inch bright LCD for clear viewing.
- Full HD (1080p) movie recording with stereo sound.
- Built-in optical VR Image Stabilization technology to reduce blur.
- Easy Panorama Mode for capturing wide scenes.
- Smart Portrait System with Smile Timer for flattering portraits.

SETUP

1. Battery and Memory Card Installation

The camera uses a rechargeable battery and supports SD/SDHC/SDXC memory cards. Ensure the camera is powered off before opening the battery/card compartment.

1. Locate the battery/memory card compartment cover on the bottom of the camera.

2. Slide the latch to open the cover.
3. Insert the battery with the correct orientation, ensuring it clicks into place.
4. Insert the memory card into the slot until it clicks.
5. Close the compartment cover securely.

2. Setting Time Zone and Date

It is important to set the correct time zone and date for accurate photo metadata. If not set during initial power-on, you can access these settings via the menu.

1. Turn on the camera by pressing the **ON/OFF** button.
2. Press the **MENU** button.
3. Navigate to the **Setup** menu (represented by a wrench icon).
4. Select **Time zone and date** and adjust as needed.

OPERATING THE CAMERA

1. Taking Photos

To take a photo, ensure the camera is in photo mode (indicated by a camera icon on the mode dial or screen).

1. Point the camera at your subject.
2. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
3. Press the shutter button all the way down to take the picture.

2. Using the Zoom

The camera features a 10x optical zoom lens.

- To zoom in, push the zoom lever towards **T** (telephoto).
- To zoom out, push the zoom lever towards **W** (wide-angle).

3. Recording Videos

The COOLPIX S6300 can record Full HD (1080p) videos with stereo sound.

1. Switch the camera to video mode (usually indicated by a video camera icon).
2. Press the movie record button to start recording.
3. Press the movie record button again to stop recording.

Your browser does not support the video tag.

Video 1: Sample video footage captured with the Nikon COOLPIX S6300, demonstrating its video capabilities.

4. Special Features

- **Easy Panorama Mode:** Capture stunning 180° or 360° panoramic images by simply panning the camera.
- **Special Effects:** Apply in-camera effects like Low Key, High Key, Nostalgic Sepia, or Selective Color to add creative touches to your photos and videos.
- **Smart Portrait System:** Utilize features like Smile Timer, which automatically releases the shutter when a smile is detected, for perfect portraits.

5. Adding a Date Stamp to Photos

To include the date and time directly on your captured images:

1. Press the **MENU** button.
2. Navigate to the **Setup** menu (wrench icon).
3. Select **Print date**.
4. Choose either **Date** or **Date and time**.
5. Exit the menu. A "DATE" icon will appear on the screen, indicating the date stamp is active.

MAINTENANCE

1. Formatting Memory Card

Formatting a memory card deletes all data on it. Back up important photos and videos before formatting.

1. Press the **MENU** button.
2. Navigate to the **Setup** menu (wrench icon).
3. Select **Format memory**.
4. Confirm your choice to format the card.

2. Factory Reset

A factory reset restores all camera settings to their default values. This does not delete images from the memory card unless the card is also formatted.

1. Press the **MENU** button.
2. Navigate to the **Setup** menu (wrench icon).
3. Scroll down and select **Reset all**.
4. Confirm your choice to reset all settings.

TROUBLESHOOTING

If you encounter issues with your Nikon COOLPIX S6300, consider the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check for sufficient lighting, ensure the lens is clean, and verify that optical VR Image Stabilization is active.
- **Memory card error:** Reinsert the memory card, try a different card, or format the card (after backing up data).
- **Settings issues:** Perform a factory reset to restore default settings.

For more complex issues, refer to the official Nikon support website or contact customer service.

SPECIFICATIONS

Nikon COOLPIX S6300 Key Specifications

Feature	Specification
Brand	Nikon

Feature	Specification
Model Name	Nikon COOLPIX S6300
Model Number	26335
Photo Sensor Resolution	16 MP
Optical Zoom	10x
Video Resolution	FHD 1080p
Screen Size	2.7 Inches
Image Stabilization	Sensor-shift
Supported File Format	JPEG, RAW
Flash Memory Type	SD/SDHC/SDXC
Connectivity Technology	HDMI, USB
Item Weight	0.35 Pounds

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your camera or visit the official Nikon website. For technical support, product registration, or service inquiries, please contact Nikon customer service directly.

You can visit the official Nikon Store for more information: [Nikon Store](#)