

Manuals.plus /

› Nikon /

› Nikon COOLPIX S4300 Digital Camera Instruction Manual

Nikon COOLPIX S4300

Nikon COOLPIX S4300 Digital Camera Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Nikon COOLPIX S4300 digital camera. The COOLPIX S4300 is a compact point-and-shoot camera featuring a 16.0 Megapixel CCD sensor, a 6x Zoom-NIKKOR glass lens, a 3-inch high-resolution (460,000 Dot) touchscreen LCD, and the capability to record HD (720p) movies. Please read these instructions thoroughly before operating your camera.

1. INITIAL SETUP

1.1 Unpacking Contents

Verify that all the following items are included in your package:

- Nikon COOLPIX S4300 Digital Camera
- Rechargeable Li-ion Battery EN-EL19
- USB Cable
- AV Cable
- Quick Start Guide
- Software CDs (may be included with older models)
- Carrying Case (may be included)
- SD Card (sold separately or included as an accessory)

1.2 Battery Installation and Charging

To install the battery:

1. Locate the battery/memory card compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the EN-EL19 battery into the compartment with the correct orientation, ensuring it clicks into place.
4. Close the compartment cover securely.

To charge the battery:

1. Connect the camera to a computer or a USB AC adapter (not always included) using the supplied USB cable.
2. The charging indicator will light up. Charging is complete when the indicator turns off.



Figure 1: Back view of the Nikon COOLPIX S4300, illustrating the LCD screen and control buttons.

1.3 Memory Card Insertion

The camera uses SD, SDHC, or SDXC memory cards (not always included). To insert a memory card:

1. Open the battery/memory card compartment cover as described above.
2. Insert the memory card into the designated slot next to the battery, ensuring the correct orientation, until it clicks.
3. Close the compartment cover.

2. BASIC OPERATION

2.1 Power On/Off and Zoom

To power on the camera, press the **ON/OFF** button located on the top of the camera. To power off, press the button again.

The camera features a 6x optical Zoom-NIKKOR glass lens. To zoom in or out, use the zoom control lever located around the shutter button on the top of the camera. Push the lever towards **T** to zoom in (telephoto) and towards **W** to zoom out (wide-angle).



Figure 2: Top view of the Nikon COOLPIX S4300, highlighting the ON/OFF button and zoom control.

2.2 Taking Photos

To take a photo:

1. Turn on the camera.
2. Frame your shot using the 3-inch LCD touchscreen.
3. Press the shutter button halfway down to focus. The focus area will turn green when focus is achieved.
4. Press the shutter button all the way down to capture the image.

The camera includes Optical VR Image Stabilization to reduce blur caused by camera shake. Various shooting modes (e.g., Backlighting, Beach, Close Up, Portrait) can be selected via the **SCENE** button or touchscreen menu to optimize settings for different conditions.



Figure 3: Front view of the Nikon COOLPIX S4300, displaying the lens and built-in flash.

2.3 Recording Videos

The COOLPIX S4300 can record HD (720p) movies with sound. To start recording, press the dedicated movie record button on the back of the camera. Press it again to stop recording.

2.4 Playback and Review

To view captured photos and videos, press the playback button (often indicated by a triangle icon) on the back of the camera. Use the touchscreen or directional buttons to navigate through your images and videos.

2.5 Menu Navigation and Settings

The 3-inch touchscreen allows for intuitive navigation of camera settings. Tap on menu options to adjust image mode, white balance, ISO sensitivity, color options, autofocus mode, and other parameters. The physical buttons on the camera also provide quick access to common functions.

3. MEDIA FEATURES

3.1 Sample Video

Watch this sample video to see the Nikon COOLPIX S4300 in action, demonstrating its video recording capabilities.

Your browser does not support the video tag.

Video 1: Nikon COOLPIX S4300 Sample Video. This video demonstrates the camera's video recording quality and capabilities.

4. CONNECTIVITY

4.1 Connecting to a Computer

Use the supplied USB cable to connect your camera to a computer. This allows you to transfer photos and videos for storage, editing, or sharing. Once connected, the camera will typically appear as a removable drive on your computer.

4.2 Connecting to a TV

The camera supports HDMI output. Use an HDMI cable (not included) to connect the camera to an HDTV to view your photos and videos on a larger screen. Ensure your TV is set to the correct HDMI input.

5. CARE AND MAINTENANCE

- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water.
- **Cleaning the Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.
- **Cleaning the LCD Screen:** Use a soft, lint-free cloth. For smudges, a specialized LCD cleaning solution can be used sparingly.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures.
- **Storage:** When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, away from direct sunlight and high humidity.

6. TROUBLESHOOTING

- **Camera does not turn on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check if the lens is clean. Ensure the camera is focusing correctly (press shutter halfway). Use Optical VR Image Stabilization in low light or when hand-holding.
- **Memory card error:** Ensure the memory card is correctly inserted and not full. Try formatting the card (this will erase all data).
- **Flash not firing:** Check flash settings in the menu. Ensure flash mode is set to Auto or Fill Flash.
- **Cannot connect to computer:** Verify the USB cable is securely connected to both the camera and the computer. Try a different USB port.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Nikon COOLPIX S4300
Photo Sensor Resolution	16 MP
Optical Zoom	6x
Screen Size	3 Inches
Display Type	LCD, Touch Screen
Video Resolution	HD 720p
Image Stabilization	Sensor-shift (Optical VR)
Photo Sensor Technology	CCD
Supported File Format	JPEG
Connectivity Technology	USB
Video Output	HDMI
Item Weight	4.96 ounces

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Nikon support website. Keep your proof of purchase for warranty claims.