

Memorex ML310BK

Memorex ML310 Portable Speaker Case User Manual

Model: ML310BK

INTRODUCTION

Welcome to your new Memorex ML310 Portable Speaker Case. This manual provides essential information for setting up, operating, and maintaining your device, ensuring you get the best audio experience while protecting your music player or smartphone.

PRODUCT OVERVIEW

The Memorex ML310 is a portable speaker solution designed to protect your music player or smartphone while delivering quality stereo sound. Its robust design makes it ideal for on-the-go use, providing both audio playback and device protection.

Key Features

- Integrated speaker case compatible with iPhone, iPod, and Android devices.
- Shock-resistant exterior material and soft interior lining for enhanced device protection.
- High-quality stereo sound output for an immersive listening experience.
- Convenient external control buttons for easy volume adjustment.
- Battery-powered for ultimate portability (requires 4 AAA batteries).

Product Image



This image displays the Memorex ML310 Portable Speaker Case. It features two circular speaker grilles on the front, with "memorex" branding above them. Below the speakers, there are two rectangular buttons for volume control, marked with '-' and '+'. The case itself is black, with a zippered closure visible around the edge.

PACKAGE CONTENTS

Please check the package for the following items:

- Memorex ML310 Portable Speaker Case
- Built-in 3.5mm audio cable
- User Manual (this document)

SETUP

Battery Installation

The Memorex ML310 requires 4 AAA batteries for operation. Ensure you have fresh batteries available.

1. Locate the battery compartment on the device.
2. Open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Important Note: Some AAA batteries with shorter positive terminals may not make proper contact. If the unit does not power on, try different brand batteries with standard-sized positive terminals.

Connecting Your Device

The speaker case features a built-in 3.5mm audio cable for easy connection to your media device.

1. Open the main compartment of the speaker case.
2. Place your smartphone or music player inside the protective interior.
3. Connect the built-in 3.5mm audio cable from the speaker case to the headphone jack of your device.
4. Securely close the zipper of the case to protect your device.

OPERATING INSTRUCTIONS

Powering On/Off

The unit powers on automatically when a connected device is playing audio and batteries are installed. There is no dedicated power button.

Volume Control

Use the external '+' and '-' buttons located on the front of the speaker case to adjust the volume.

- Press the '+' button to increase the volume.
- Press the '-' button to decrease the volume.

You may also need to adjust the volume directly on your connected smartphone or music player for optimal sound levels.

Playing Audio

Once your device is connected and the speaker case is powered, simply start playing audio from your device (e.g., music, podcasts, videos). The sound will be routed through the Memorex ML310 speakers.

MAINTENANCE

Cleaning

To clean the exterior of the speaker case, use a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these may damage the finish.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the device. Store the speaker case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Batteries are dead or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity. Try a different brand of AAA batteries if the positive terminal seems too short.
No sound	Audio cable not fully connected.	Ensure the 3.5mm audio cable is securely plugged into your device's headphone jack.
No sound	Device volume is too low or muted.	Increase the volume on your connected smartphone or music player.
Distorted sound	Volume is too high on either the speaker case or the connected device.	Reduce the volume on both the speaker case and your connected device until distortion is eliminated.
External volume buttons unresponsive	Buttons may be stuck or damaged.	Gently press the buttons to ensure they are not stuck. If the issue persists, contact customer support.

If you encounter issues not listed here, please refer to the support section for further assistance.

SPECIFICATIONS

Feature	Detail
Model	ML310BK
Speaker Type	Portable Stereo Speakers
Audio Output Mode	Stereo
Channel Configuration	2.0
Connectivity	Wired (3.5mm audio jack)
Power Source	4 x AAA Batteries (not included)
Compatible Devices	Smartphones, MP3 Players (iPhone, iPod, Android devices)
Control Type	Button (Volume +/-)
Color	Black
Dimensions (L x W x H)	5.72 x 16.51 x 10.8 cm (2.25 x 6.5 x 4.25 inches)
Weight	330 g (0.73 lbs)
Manufacturer	Imation Enterprises Corp

Specifications are subject to change without notice.

SAFETY INFORMATION

- Do not expose the device to water or excessive moisture. It is not waterproof.
- Do not disassemble or attempt to repair the device yourself. This will void the warranty and may cause damage.
- Keep batteries out of reach of children.
- Dispose of used batteries properly according to local regulations.
- Avoid extreme temperatures and direct sunlight, which can damage the device and batteries.
- Do not block the speaker grilles during operation to ensure optimal sound quality and prevent overheating.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your original purchase or visit the official Memorex website. Keep your proof of purchase for any warranty claims.

© 2024 Memorex. All rights reserved.

Memorex and the Memorex logo are trademarks of Memorex.