

Russell Hobbs RCM60

Russell Hobbs RCM60 Drip Coffee Maker Instruction Manual

Model: RCM60 | Brand: Russell Hobbs

1. INTRODUCTION

Thank you for choosing the Russell Hobbs RCM60 Drip Coffee Maker. This manual provides essential information for the correct use, maintenance, and care of your appliance. Please read these instructions thoroughly before first use and keep them for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.

- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Russell Hobbs RCM60 Drip Coffee Maker.



Figure 1: Front view of the Russell Hobbs RCM60 Drip Coffee Maker, showing the main unit, glass carafe, and water level indicator.



Figure 2: Exploded view showing the coffee maker with the lid open, revealing the removable filter basket and permanent mesh filter. A coffee scoop is also visible.

1. **Lid:** Covers the water reservoir and filter basket.
2. **Water Reservoir:** Holds water for brewing.
3. **Water Level Indicator:** Displays the amount of water in the reservoir (marked 2-6 cups).
4. **Filter Basket:** Holds the permanent filter and ground coffee.
5. **Permanent Mesh Filter:** Reusable filter for ground coffee.
6. **Shower Head:** Distributes water over the coffee grounds.
7. **Glass Carafe:** Collects brewed coffee, with a capacity of 600ml (4-6 cups).
8. **Warming Plate:** Keeps the brewed coffee hot.
9. **On/Off Switch:** Illuminates when the coffee maker is operating.
10. **Coffee Scoop:** For measuring coffee grounds.

4. SETUP AND FIRST USE

Before brewing coffee for the first time, it is recommended to clean the appliance.

1. Unpack the coffee maker and remove all packaging materials.

2. Wash the glass carafe, lid, and permanent filter in warm, soapy water. Rinse thoroughly and dry.
3. Place the coffee maker on a flat, stable, heat-resistant surface.
4. Fill the water reservoir with clean water up to the "MAX" level (6 cups) without adding coffee.
5. Place the permanent filter into the filter basket, and close the lid.
6. Place the empty carafe with its lid on the warming plate.
7. Plug the power cord into a suitable electrical outlet.
8. Press the On/Off switch to start the brewing cycle. Allow the water to brew through completely.
9. Once the cycle is complete, turn off the coffee maker and discard the water.
10. Repeat this process 2-3 times to ensure the appliance is thoroughly cleaned.

5. OPERATING INSTRUCTIONS

Follow these steps to brew a fresh pot of coffee:

1. Ensure the coffee maker is unplugged and cooled down if previously used.
2. Open the lid of the water reservoir.
3. Fill the glass carafe with the desired amount of fresh, cold water. Refer to the water level markings on the carafe and the water level indicator on the coffee maker. Do not exceed the "MAX" (6 cups) level.
4. Pour the water from the carafe into the water reservoir.
5. Place the permanent filter into the filter basket.
6. Add the desired amount of ground coffee into the permanent filter. A general guideline is one level scoop (provided) per cup, but adjust to your taste.
7. Close the lid securely.
8. Place the empty glass carafe with its lid onto the warming plate. Ensure it is correctly positioned to activate the anti-drip feature.
9. Plug the power cord into a suitable electrical outlet.
10. Press the On/Off switch. The indicator light will illuminate, and brewing will begin.
11. The anti-drip feature allows you to temporarily remove the carafe during brewing to pour a cup. However, do not remove the carafe for more than 30 seconds to prevent overflow from the filter basket.
12. Once the brewing cycle is complete, the coffee maker will automatically switch to the "keep warm" function. The indicator light will remain on.
13. For optimal taste, consume coffee shortly after brewing. The warming plate will keep coffee hot for a limited time.
14. To turn off the coffee maker, press the On/Off switch again. Unplug the appliance from the wall outlet when not in use.



Figure 3: A hand pouring freshly brewed coffee from the glass carafe into a cup, with the coffee maker and coffee beans in the background.



Figure 4: The Russell Hobbs RCM60 Drip Coffee Maker actively brewing coffee, with steam rising from the carafe, indicating the warming function.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

6.1 Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the glass carafe, its lid, and the permanent filter.
3. Discard used coffee grounds from the permanent filter.
4. Wash the carafe, carafe lid, and permanent filter in warm, soapy water. Rinse thoroughly and dry. These parts are not dishwasher safe.
5. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
6. Do not immerse the coffee maker base, cord, or plug in water or any other liquid.

6.2 Descaling

Mineral deposits (limescale) can build up in your coffee maker over time, affecting its performance. Descaling your coffee maker every 2-4 weeks, depending on water hardness and frequency of use.

1. Prepare a descaling solution: Mix white vinegar and water in equal parts, or use a commercial descaling agent designed for coffee makers, following the product instructions.
2. Pour the descaling solution into the water reservoir up to the "MAX" level.
3. Place the permanent filter (without coffee) into the filter basket and close the lid.
4. Place the empty carafe on the warming plate.
5. Turn on the coffee maker and allow half of the solution to brew through.
6. Turn off the coffee maker and let it stand for 15-20 minutes to allow the solution to work.
7. Turn the coffee maker back on and allow the remaining solution to brew through.
8. Discard the solution from the carafe.
9. Rinse the coffee maker by brewing several cycles with clean, fresh water (without coffee) until the vinegar smell is gone.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Coffee does not brew.	<ul style="list-style-type: none"> Appliance not plugged in. On/Off switch not pressed. No water in reservoir. 	<ul style="list-style-type: none"> Ensure power cord is securely plugged into an outlet. Press the On/Off switch. Fill the water reservoir with water.
Coffee tastes weak.	<ul style="list-style-type: none"> Not enough coffee grounds. Coffee grounds too coarse. 	<ul style="list-style-type: none"> Add more coffee grounds. Use finer ground coffee.
Coffee overflows from filter basket.	<ul style="list-style-type: none"> Too much coffee grounds. Carafe not properly placed on warming plate. Filter basket clogged. Coffee maker needs descaling. 	<ul style="list-style-type: none"> Reduce amount of coffee grounds. Ensure carafe is centered on the warming plate. Clean the permanent filter and filter basket. Perform descaling procedure.
Brewing is slow.	<ul style="list-style-type: none"> Mineral deposits (limescale) buildup. 	<ul style="list-style-type: none"> Perform descaling procedure.

8. SPECIFICATIONS

Technical details for the Russell Hobbs RCM60 Drip Coffee Maker.

- **Model:** RCM60
- **Power:** 600 Watts
- **Capacity:** 600 ml (4-6 cups)
- **Dimensions (approx.):** 17D x 21.5W x 26.5H Centimeters
- **Material:** Plastic body, Glass carafe
- **Special Features:** Automatic Shut-Off, Permanent Filter, Anti-Drip Technology, Warming Plate, Water Level Indicator.

- **Included Components:** 1 Unit Coffee Maker, 1 Unit Glass Carafe, 1 Unit User Manual cum Warranty Card.



Figure 5: Image illustrating the approximate dimensions of the Russell Hobbs RCM60 Drip Coffee Maker: 17cm depth, 21.5cm width, and 26.5cm height.

9. WARRANTY AND SUPPORT

This Russell Hobbs RCM60 Drip Coffee Maker comes with a **2-year manufacturer warranty** from the date of purchase. Please retain your purchase receipt as proof of purchase.

The warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For warranty claims, service, or technical support, please contact Russell Hobbs customer service:

- **Customer Service Number:** 18001020107 (as per manufacturer information)
- **Manufacturer Address:** B1/A6, Mohan Co-operative Industrial Estate, New Delhi - 110044, India.
- **Importer:** Gryphon Appliances Limited, B1/A6, Mohan Co-operative Industrial Estate, New Delhi -

110044, India.

For more information, you may visit the official Russell Hobbs website or contact their authorized service centers.

© 2025 Russell Hobbs. All rights reserved.

Related Documents - RCM60

 22620-56 www.russellhobbs.com	<p>Russell Hobbs 22620-56 Coffee Maker Instructions</p> <p>Comprehensive guide for the Russell Hobbs 22620-56 coffee maker, covering setup, operation, safety precautions, and maintenance. Learn how to brew coffee, set the clock, use the timer function, and care for your appliance.</p>
 26990-56 www.russellhobbs.com	<p>Russell Hobbs 26990-56 Luna Stone Coffee Maker User Manual</p> <p>Comprehensive user manual for the Russell Hobbs 26990-56 Luna Stone coffee maker, covering setup, operation, safety precautions, maintenance, and troubleshooting.</p>
 10968S www.russellhobbs.com	<p>Russell Hobbs 10968S 10-12 Cup Coffee Maker: Instructions & Warranty</p> <p>User manual and warranty details for the Russell Hobbs 10968S 10-12 Cup Stainless Steel Coffee Maker with Digital Timer. Covers setup, operation, safety, maintenance, and warranty information.</p>
 24020-56 www.russellhobbs.com	<p>Russell Hobbs 24020-56 Coffee Maker User Manual</p> <p>Comprehensive user manual for the Russell Hobbs 24020-56 coffee maker, covering safety, operation, maintenance, and recycling information. Learn how to brew perfect coffee with Russell Hobbs.</p>

Russell Hobbs

INSTRUCTIONS AND WARRANTY



MODEL No. 18663-56

FUTURA 1.5L FILTER COFFEE MAKER

Warranty will be extended for another year if you register your product online at <http://www.russellhobbs.com/registration>

[Russell Hobbs Futura 1.5L Filter Coffee Maker: Instructions and Warranty](#)

Comprehensive instructions, features, important safeguards, care, maintenance, and warranty information for the Russell Hobbs Futura 1.5L Filter Coffee Maker (Model No. 18663-56).

Russell Hobbs



20060-56

www.russellhobbs.com

[Russell Hobbs 20060-56 Allure Grind and Brew Coffee Maker User Manual](#)

User manual for the Russell Hobbs 20060-56 Allure Grind and Brew Coffee Maker. Learn how to set up, operate, brew coffee, and perform maintenance with this comprehensive guide.