

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KODAK](#) /

> [Kodak EasyShare Mini M200 10 MP Digital Camera with 3x Optical Zoom and 2.5-Inch LCD \(Aqua Green\) User Manual](#)

KODAK M200

Kodak EasyShare Mini M200 Digital Camera User Manual

Model: M200

INTRODUCTION

This manual provides essential information for the safe and effective use of your Kodak EasyShare Mini M200 Digital Camera. Please read it thoroughly before operating the device and keep it for future reference.



Image: Front view of the Kodak EasyShare Mini M200 Digital Camera in aqua green, featuring the lens, flash, and a red 'Share' button icon. A yellow camera strap is visible at the bottom.

The Kodak EasyShare Mini M200 is a compact 10-megapixel digital camera designed for portability and ease of use. Its credit card-sized styling makes it convenient for travel. Key features include:

- Compact, credit card-sized design for easy portability.
- Built-in mirror on the front for convenient self-portraits and group shots.
- 3x wide-angle optical zoom to capture more in your frame.
- One-button upload functionality for sharing photos to email and social networking sites.
- Ability to capture HD quality pictures in 16:9 format.

WHAT'S IN THE BOX

Upon unboxing your Kodak EasyShare Mini M200, please verify that all components are present:

- Kodak EasyShare Mini M200 Camera Body
- Wide-angle lens (integrated)
- Built-in mirror (integrated)
- Rechargeable Battery
- USB Cable

If any items are missing or damaged, please contact Kodak customer support.

SETUP

1. Charging the Battery:

Insert the rechargeable battery into the camera. Connect the camera to a power source using the supplied USB cable. The charging indicator light will illuminate. Allow the battery to fully charge before first use. A full charge typically takes approximately 2-3 hours.

2. Inserting a Memory Card (Sold Separately):

Locate the memory card slot, typically on the side or bottom of the camera. Insert a compatible SD/SDHC memory card with the metal contacts facing down until it clicks into place. Ensure the card is inserted correctly to avoid damage.

3. Initial Power On:

Press and hold the power button until the LCD screen illuminates. Follow any on-screen prompts to set the date, time, and language.

OPERATING THE CAMERA

Taking Photos

1. **Power On:** Turn on the camera by pressing the power button.
2. **Framing Your Shot:** Use the 2.5-inch LCD screen to compose your image. For self-portraits or group shots, utilize the built-in mirror on the front of the camera to assist with framing.
3. **Zoom:** Use the zoom controls (typically a rocker switch near the shutter button) to adjust the 3x optical zoom.
4. **Focus:** Partially press the shutter button to allow the camera to focus. A green frame or beep usually indicates focus lock.
5. **Capture:** Fully press the shutter button to take the picture.

Reviewing Photos

Press the playback button (often indicated by a triangle icon) to enter playback mode. Use the directional pad to navigate through your captured images. Press the zoom in/out buttons to magnify or view multiple images.

Sharing Photos

The Kodak EasyShare Mini M200 features a dedicated Share button. After taking a photo or while in

playback mode:

1. Select the photo(s) you wish to share.
2. Press the **Share** button.
3. Follow the on-screen instructions to select your desired sharing destination (e.g., email, KODAK PULSE Display, social networking sites). Ensure the camera is connected to a computer with internet access and Kodak EasyShare software installed for full functionality.

MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Cleaning the Lens:** Use a lens brush or a microfiber cloth specifically designed for camera lenses. Gently wipe the lens in a circular motion. Do not use paper towels or clothing, as they can scratch the lens.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. If the camera will not be used for an extended period, remove the battery.
- **Storage:** Store the camera in a protective case or bag to prevent scratches and impacts. Avoid storing in dusty or humid environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or not inserted correctly.	Charge the battery. Ensure the battery is inserted with correct polarity.
Pictures are blurry.	Insufficient light, camera shake, or lens is dirty.	Ensure adequate lighting. Hold the camera steady. Clean the lens.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files. Format the card (this will erase all data). Try a different, compatible memory card.
Cannot upload photos.	USB cable not connected, software not installed, or internet connection issue.	Ensure USB cable is securely connected. Install Kodak EasyShare software. Verify internet connection.

SPECIFICATIONS

Model Name: Kodak EasyShare Mini M200

Brand: KODAK

Resolution: 10 Megapixels

Optical Zoom: 3x

Display: 2.5-inch LCD

Aspect Ratio: 16:9

Image Stabilization: Digital, Optical

Supported File Format: JPEG

Photo Sensor Technology: CMOS

Product Dimensions: 5.75 x 5.75 x 1.25 inches

Item Weight: 12 ounces

First Available: May 10, 2012

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Kodak support website. Warranty terms and conditions may vary by region.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Kodak customer service. Contact information can typically be found on the Kodak website or in the product packaging.

Online Resources: For the latest drivers, software, and FAQs, visit the official Kodak support page: www.kodak.com/go/support