

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Wahl Professional](#) /

› [Wahl Professional 5 Star Series Shaver Shaper Replacement Foil & Cutter Bar Assembly \(Model 7031-100\) Instruction Manual](#)

Wahl Professional 7031-100

Wahl Professional 5 Star Series Shaver Shaper Replacement Foil & Cutter Bar Assembly (Model 7031-100) Instruction Manual

INTRODUCTION


This manual provides essential information for the proper installation, operation, and maintenance of your Wahl Professional 5 Star Series Shaver Shaper Replacement Foil & Cutter Bar Assembly, Model 7031-100. This assembly is designed to restore your shaver's performance, ensuring a super close, irritation-free shave with its hypo-allergenic gold foil.



Image: Wahl Professional logo with a shaver and its replacement foil, highlighting the brand's commitment to quality.

KEY FEATURES

- **Professional Precision:** Engineered specifically for the Wahl 5-Star Series Shaver Shaper.
- **Super Close Shaving:** Delivers the closest shave without causing irritation.
- **Hypo-Allergenic:** Features gold foil that is gentle on sensitive skin, helping to prevent irritation.
- **Complete Replacement:** Includes both the gold foil and the cutter bar assembly for a full refresh.
- **Maintain Performance:** Essential for keeping your shaver in like-new condition and ensuring optimal results.

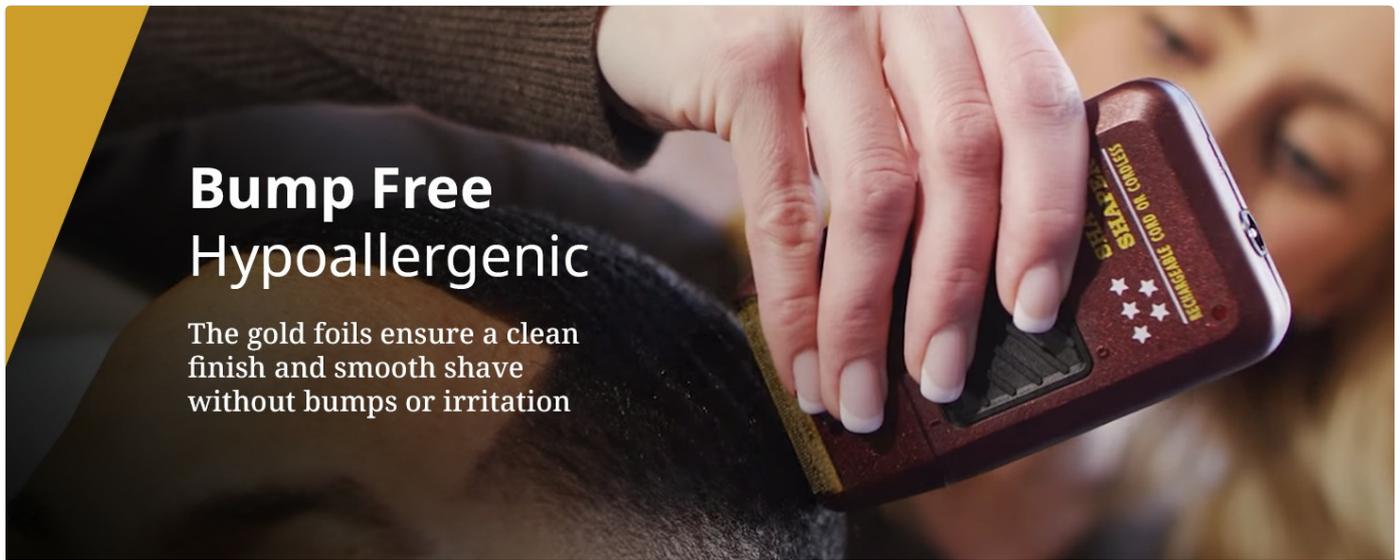

Bump Free Hypoallergenic

The gold foils ensure a clean finish and smooth shave without bumps or irritation

Image: A close-up of the Wahl shaver being used on a person's neck, illustrating the smooth, bump-free finish provided by the hypoallergenic gold foil.

INSTALLATION INSTRUCTIONS

Follow these steps to correctly install the replacement foil and cutter bar assembly:

1. Ensure the shaver is turned off and unplugged from any power source.
2. Locate the release buttons on the sides of the shaver head. Press these buttons to detach and remove the existing foil assembly.
3. Carefully remove the old cutter bars from the shaver.
4. Insert the new cutter bars into their respective slots on the shaver's body. Ensure they are seated correctly.
5. Align the new foil assembly with the shaver body and gently press it down until it clicks securely into place.

Video: A demonstration of how to replace the foil and cutter bar assembly on the Wahl 5 Star Shaver Shaper. This video shows the step-by-step process of removing the old components and installing the new ones.

Video: A demonstration of how to replace the foil and cutter bar assembly on the Wahl 5 Star Shaver Shaper. This video shows the step-by-step process of removing the old components and installing the new ones.

Replacement Foil Fits

5-STAR SHAPER SHAVER
(CORD/CORDLESS)



REPLACEMENT FOIL AND CUTTER BAR ASSEMBLY

07031-100

5-STAR
★★★★
★★
SERIES

Image: The Wahl Shaver Shaper displayed alongside its replacement gold foil and cutter bar assembly, illustrating the components involved in the replacement process.

OPERATING INSTRUCTIONS

For optimal performance and a comfortable shave, adhere to the following guidelines:

- **Hair Length:** The foil is designed for super close cutting and is most effective on hair that is 1/32 inch or shorter.
- **Light Touch:** Allow the shaver to work for you. Do not press hard against the skin, as excessive pressure can cause damage to the foil and skin irritation. The foil needs to glide over the skin.
- **Charging:** For best performance, ensure the shaver is fully charged before first use. The recharging indicator light will turn off once fully charged.
- **Corded/Cordless Use:** The shaver can be operated with or without the cord, provided it is adequately charged.
- **Shaving Technique:** Begin shaving against hair growth using short, gentle strokes. Shave all desired areas to achieve the closest possible finish.

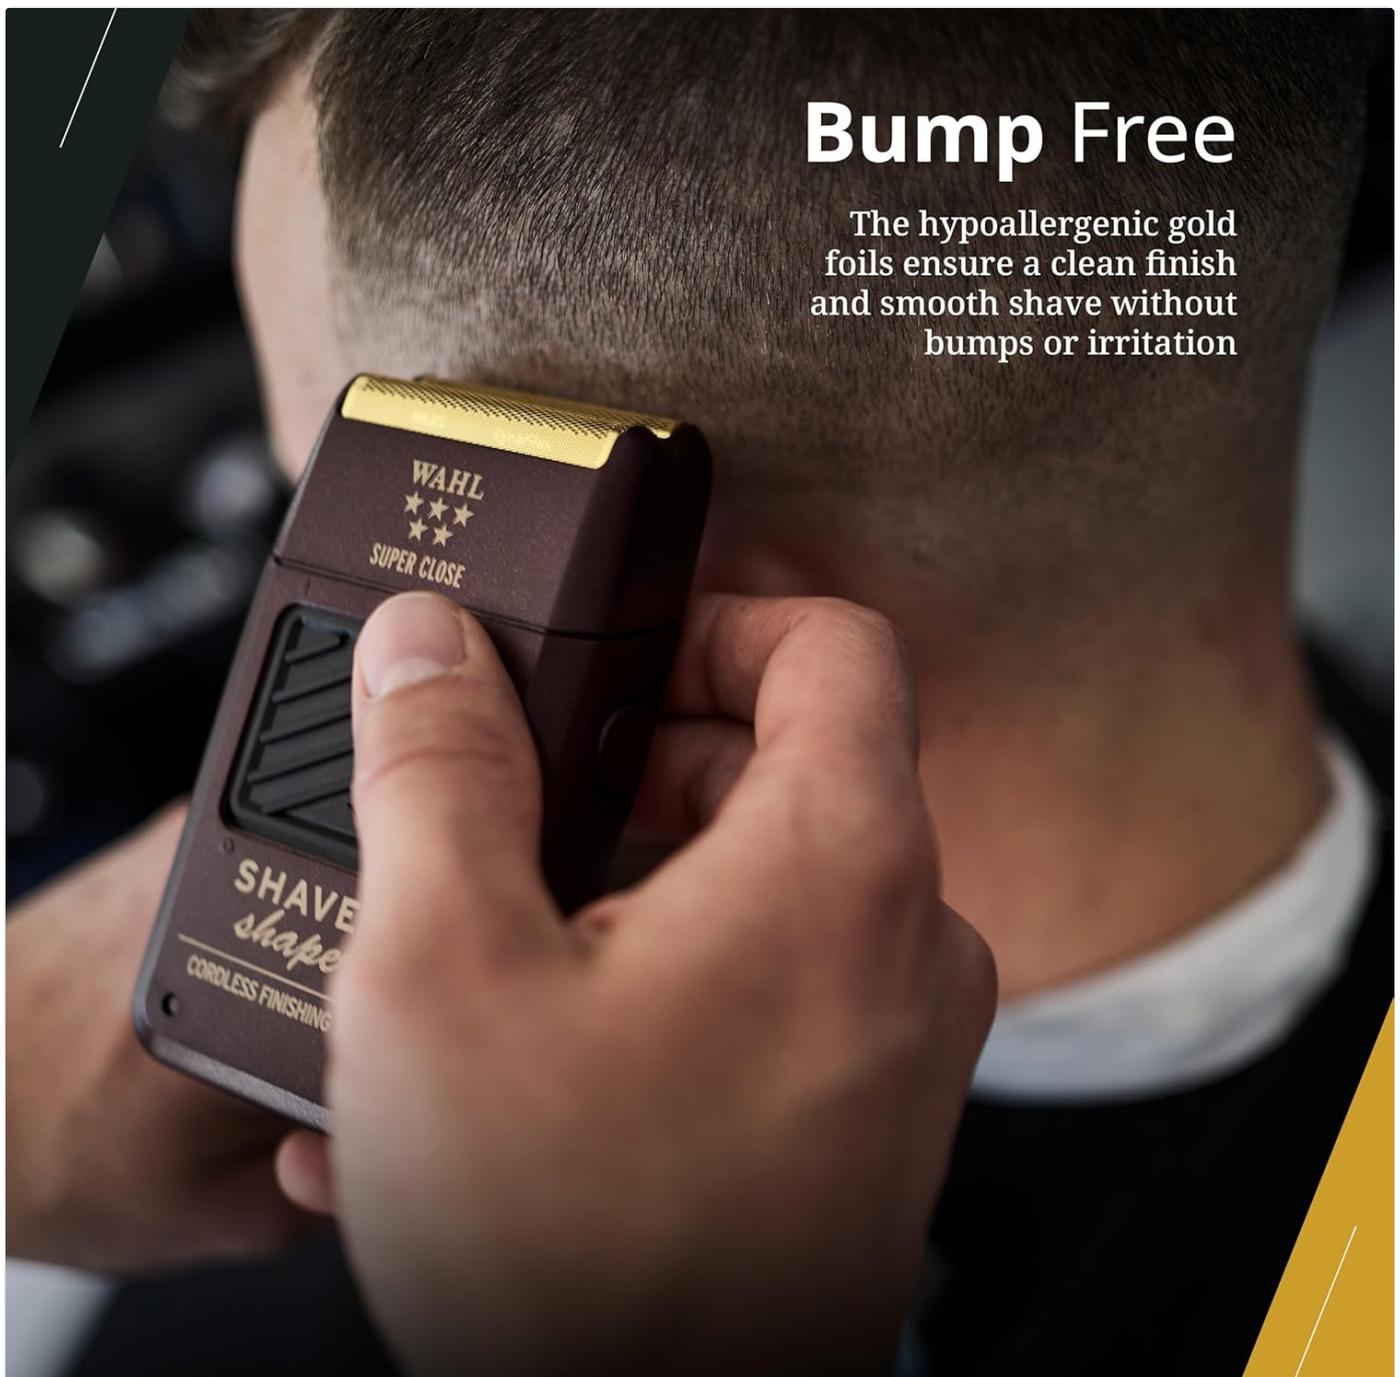


Image: A person using the Wahl Shaver Shaper to meticulously clean up a neckline, demonstrating its precision for finishing touches.

MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your shaver and its replacement parts:

- **Cleaning:** After each use, it is important to clean the shaver. Press the side buttons to pop off the foil and access the cutters. Use the included cleaning brush to remove hair and debris from both the foil and cutter bars.
- **Regular Replacement:** The foil and cutter bar assembly are wear parts. To ensure continued shaving satisfaction, replace them periodically.
- **Foil Inspection:** Inspect the foil regularly for any creases, wear, or breakage. A damaged or broken foil can cause facial injury. Replace immediately if damage is observed.
- **Cutter Bar Inspection:** Check the cutter bar assembly for any damage, such as bent teeth. Damage to the foil can result from using a broken or bent cutter bar.
- **Foil Guard:** Always use the foil guard to protect the delicate dual foil heads when the shaver is not in use.



5-STAR
★ ★ ★
★ ★
SERIES

BUMP FREE SHAVING

Replacement Foil and Cutter Bar Assembly

FOR SHAVER/SHAPER

Your all-in-one replacement package
compatible only with the 5-Star
Shaver/Shaper Model #8061-100



Image: A detailed view of the Wahl Shaver Shaper, showcasing its gold foil and cutter bar assembly, emphasizing the precision components.

TROUBLESHOOTING

Address common issues with your Wahl Shaver Shaper:

- **Shaver Slows Down/Foil Warms Up:** If your shaver slows down or the foil feels warm during use, it indicates wear. This is a sign that the foil and cutter bar assembly needs to be replaced.
- **Skin Irritation/Adjustment Period:** First-time electric shaver users or those switching brands may experience a 2-3 week adjustment period. Your face and beard will adapt to the new foil over time.
- **Black Residue:** During the break-in period of a new cutter bar, black residue may appear on the face. This is a harmless combination of whiskers, skin debris, and minute particles from the cutter bar, which will wash off easily and disappear with continued use.
- **Safety Precautions:** Do not use the shaver while bathing or in a shower. Do not place or store the shaver where it can fall into water or other liquids. Always unplug the shaver immediately after use or charging, and before cleaning.

SPECIFICATIONS

Item Model Number	7031-100
Product Dimensions	2 x 0.1 x 5 inches
Item Weight	0.6 ounces
Manufacturer	Wahl Professional
Head Type	Foil
Unit Count	1 Count
Color	Basic

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase additional replacement parts, please refer to the official Wahl Professional website or contact their customer service directly. Keep your proof of purchase for any warranty claims.