

Exquisit GS 175-1 A++

Exquisit GS 175-1 A++ Freezer Instruction Manual

Model: GS 175-1 A++

1. INTRODUCTION

Thank you for choosing the Exquisit GS 175-1 A++ freestanding freezer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the freezer and keep them for future reference.

The Exquisit GS 175-1 A++ is a 160-liter capacity freezer designed for household use, featuring an A++ energy efficiency rating and 5 convenient freezer drawers. Its freestanding design allows for flexible placement in your home.

2. SAFETY INSTRUCTIONS

To prevent personal injury or damage to the appliance, please observe the following safety precautions:

- Ensure the appliance is properly grounded before use.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- This appliance is intended for household use only.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the freezer for any damage. Report any damage to your retailer immediately. Keep packaging materials out of reach of children.

3.2 Placement

The Exquisit GS 175-1 A++ is a freestanding appliance.

- Place the freezer on a firm, level surface.
- Ensure adequate ventilation around the appliance. Allow sufficient space (at least 10 cm) at the back and sides for proper air circulation to ensure optimal performance and energy efficiency.
- Avoid placing the freezer in direct sunlight or near heat sources such as stoves, radiators, or heaters, as this will increase energy consumption.
- The dimensions of the appliance are approximately 144 cm (height) x 55.4 cm (width) x 55.1 cm (depth).



GS 175-1 A++ we



GS 175-1 A++ Silber

GS 175-1 A++ GS 175-1 A++si

Produktdaten nach (EU) 1060/2010 für Haushaltskühlgeräte

Warenzeichen	Exquisit
Modell	GS175-1A++
Kategorie κ_1	8
Energieeffizienzklasse κ_2	A++
Energieverbrauch [kWh /Jahr] κ_3	177
Nutzhalt Gefrierfach [Liter]	160
Sternkennzeichen/Temp. [$^{\circ}$ C] κ_4	4* / -18
Lagerzeit bei Störung [Std.] κ_5	12
Gefriervermögen [kg/24 Std.]	8
Klimaklasse κ_7	N/T
Geräuschpegel [dB(A) re 1 pW]	43
Stand-/ Unter-/ Einbaugerät	•/—/—

Weitere Angaben

Abtauverfahren Gefrierteil

manuell / automatisch •/—

Bauform

Türanschlag wechselbar •
Vorderfüße höhenverstellbar •
Rollen hinten •
Kompressoren 1
Kühlmittel R 600a •

Ausstattung

Lieferbar in Weiß / Silber •/•
Temperaturregelung •
Schnellgefrieren —
Gefrierschubladen 5

Abmessungen / Gewicht

H x B x T unverpackt [cm] 144,0x55,4x55,1
Tiefe mit Wandabstand [cm] 63
Tiefe bei geöffneter Tür [cm] ¹ 112,5
H x B x T verpackt [cm] 149,5x58,0x58,0
Gewicht unverpackt [kg] 47
Gewicht verpackt [kg] 51

Elektrischer Anschluss

Spannung / Frequenz [V / Hz] 220-240 / 50
Leistungsaufnahme [W] 70
Stromaufnahme [A] 0,5
Sicherheitsbestimmungen CE
EAN Nr. 4016572012460
EAN Nr.: Silber 4016572012477

Artikel-Nr.: 0230079
Artikel-Nr.: Si 0230082
Containermenge [Stk.] 136

¹ incl. Wandabstand

κ_3 Messung nach EN-ISO 15502 mit einem Wandabstand von 7,5cm

Erklärung zu weiteren Endnoten siehe beigefügtes Zusatzblatt im Anhang

3.3 Electrical Connection

Connect the appliance to a properly installed and grounded power outlet. Ensure the voltage and frequency match the specifications on the rating plate of the appliance. Do not use extension cords or multiple socket adapters.

3.4 Door Reversal

The door hinge of your Exquisit GS 175-1 A++ freezer is reversible, allowing you to change the door opening direction to suit your kitchen layout. Refer to the detailed instructions in the supplementary manual (if provided) or consult a qualified technician for this procedure.

3.5 Initial Startup

After positioning and connecting the freezer, allow it to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle. Once plugged in, set the temperature control to the desired setting and allow the freezer to cool for several hours (at least 4-6 hours) before loading it with food.


4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The temperature inside the freezer is controlled manually. Locate the temperature control dial, usually inside the freezer compartment. Turn the dial to adjust the temperature. Higher numbers typically indicate colder temperatures. The recommended operating temperature for freezing food is -18°C (4-star rating).

4.2 Using the Freezer Drawers

Your freezer is equipped with 5 transparent freezer drawers, providing organized storage for various frozen items.

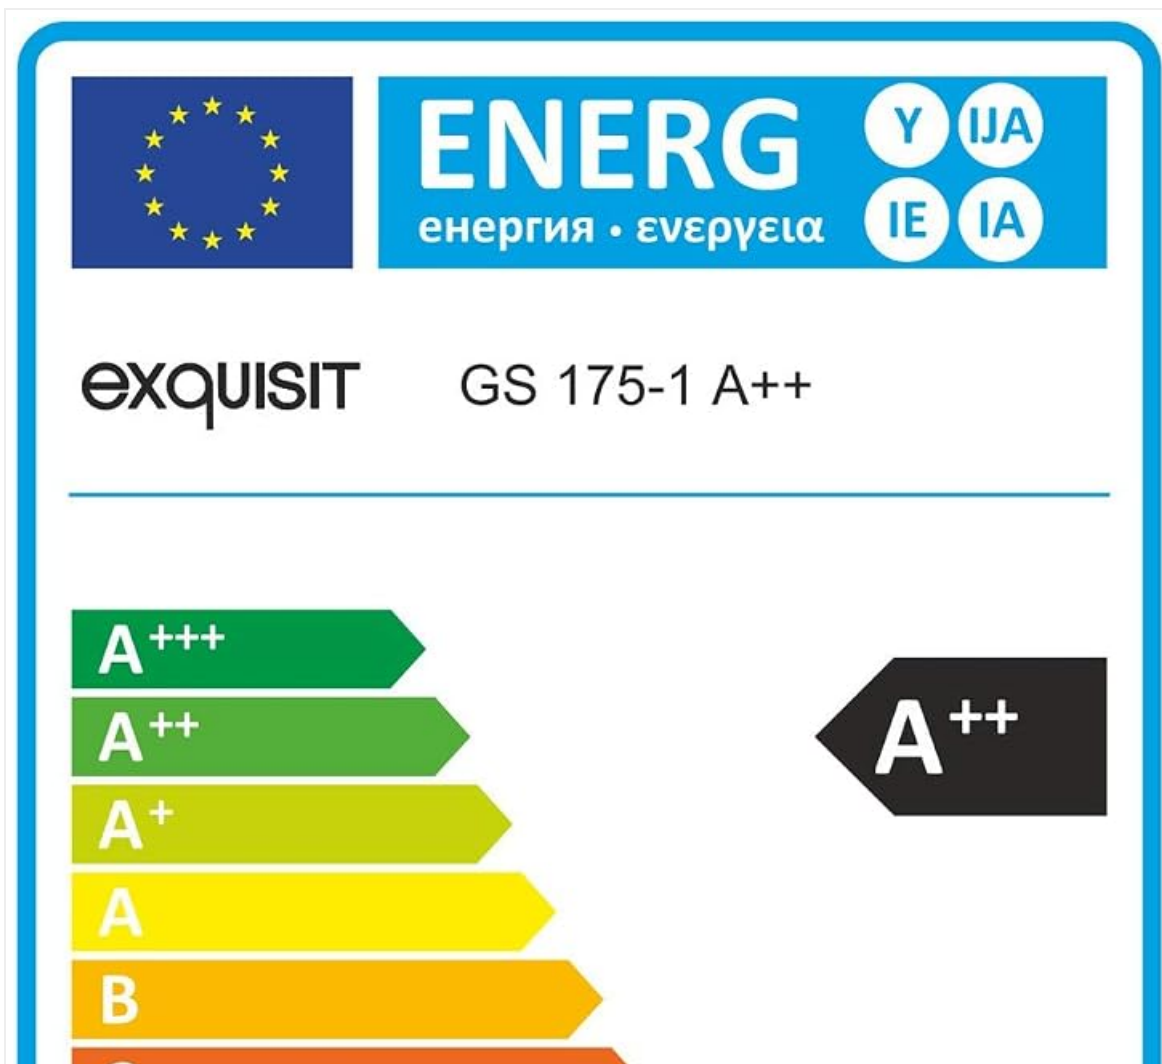

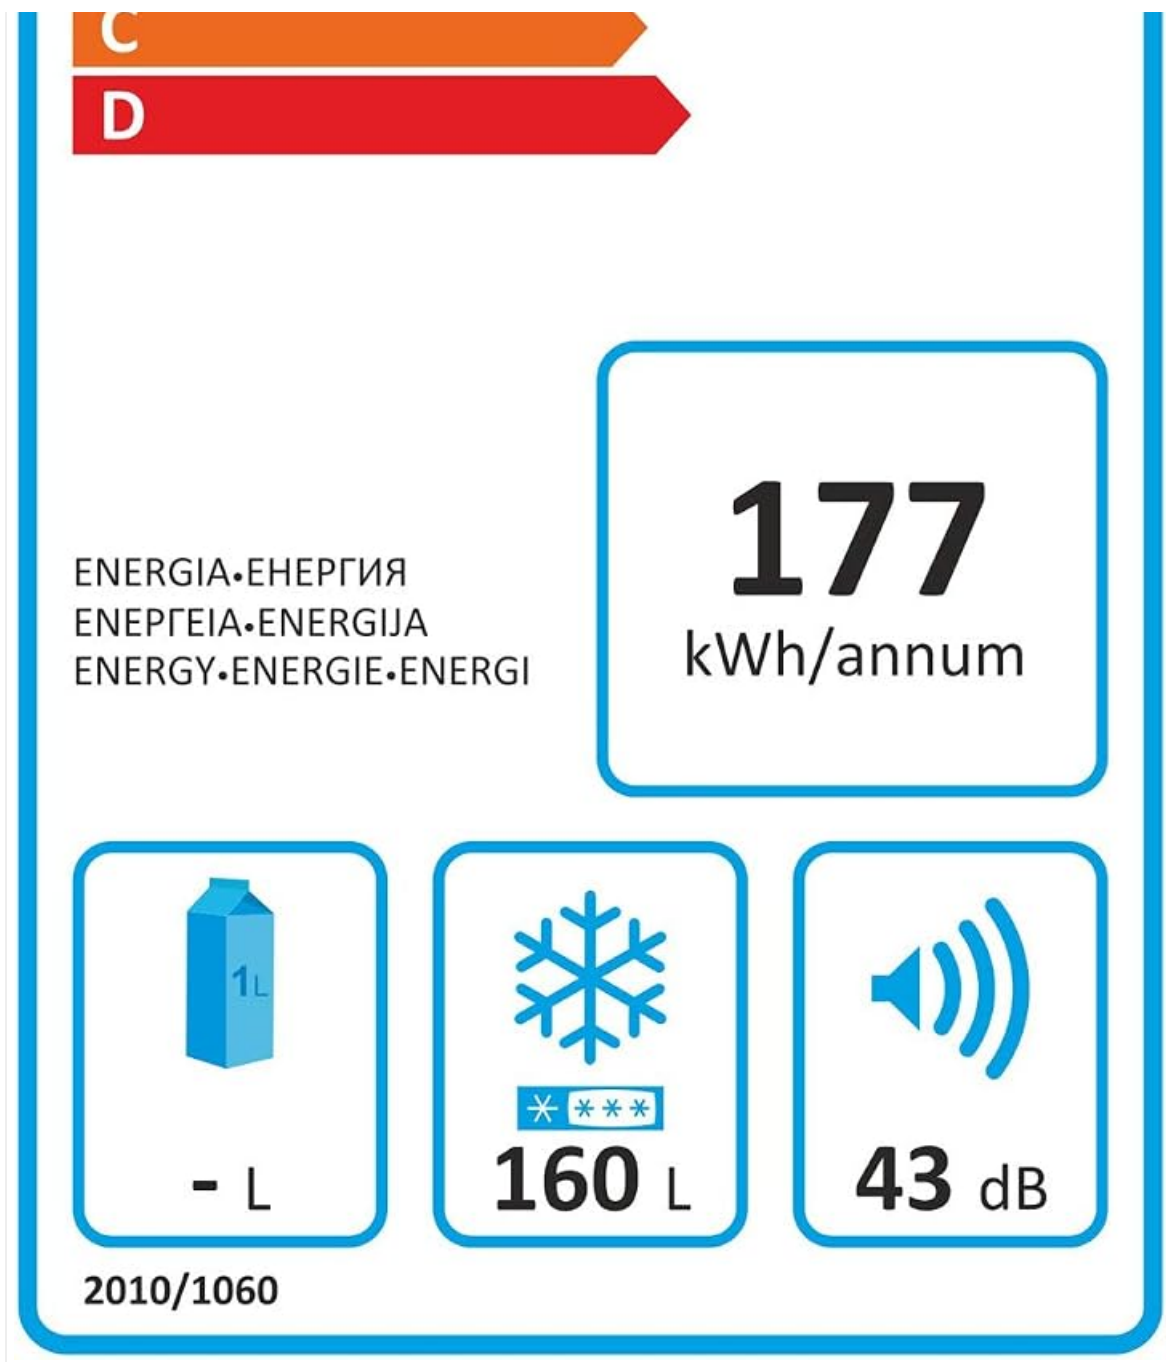


Figure 2: Interior view of the Exquisit GS 175-1 A++ freezer, showing the five transparent storage drawers.

- Arrange food items logically to maximize space and allow for easy access.
- Avoid overloading drawers, as this can impede air circulation and affect freezing efficiency.
- Ensure drawers are fully closed after use to maintain the internal temperature.

4.3 Freezing Fresh Food

To freeze fresh food, place it in appropriate freezer-safe packaging. For optimal freezing, place fresh food in the upper drawers where the temperature is typically coldest. The freezer has a total freezing capacity of 12 kg per 24 hours. Avoid placing large quantities of warm food into the freezer at once, as this can raise the internal temperature and affect already frozen items.

4.4 Storage Times

Refer to food packaging for recommended storage times of frozen products. Generally, most frozen foods can be stored for 3 to 12 months, depending on the type of food.

5. MAINTENANCE

5.1 Defrosting

Over time, frost will accumulate inside the freezer compartment. Excessive frost buildup reduces cooling efficiency and increases energy consumption. Defrost the freezer when the frost layer reaches about 3-5 mm thickness.

1. Unplug the freezer from the power outlet.
2. Remove all frozen food and store it in a cool place (e.g., another freezer, cooler box with ice packs).
3. Leave the freezer door open to allow the frost to melt naturally. Place towels or a shallow tray at the bottom to collect melting water.
4. Do not use sharp objects or heating devices to remove frost, as this can damage the appliance.
5. Once all frost has melted, clean and dry the interior thoroughly.
6. Plug the freezer back in and allow it to cool down before returning food.

5.2 Cleaning

Regularly clean the interior and exterior of your freezer to maintain hygiene and appearance.

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth dampened with a mild detergent solution and warm water. Rinse and dry thoroughly.
- Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- Periodically clean the condenser coils at the back of the appliance (if accessible) with a soft brush or vacuum cleaner to ensure efficient operation.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply. Power cord not properly plugged in. Fuse blown or circuit breaker tripped.	Check if the appliance is plugged in. Check the power outlet. Check the fuse/circuit breaker.
Temperature inside is not cold enough.	Door not closed properly. Frequent door opening. Large amount of warm food placed inside. Temperature control set too high. Appliance near a heat source. Insufficient ventilation.	Ensure door is fully closed. Reduce frequency of door opening. Allow food to cool before placing in freezer. Adjust temperature control to a colder setting. Relocate appliance away from heat sources. Ensure adequate space around the freezer.
Excessive frost buildup.	Door not sealed properly. Frequent or prolonged door opening. High humidity environment.	Check door seal for damage. Minimize door opening. Defrost the appliance as per instructions.
Unusual noises.	Appliance not level. Objects touching the back of the appliance. Normal operating sounds (e.g., refrigerant flow, compressor).	Adjust leveling feet. Move objects away from the appliance. These sounds are normal.

7. SPECIFICATIONS

Below are the key technical specifications for the Exquisit GS 175-1 A++ freezer:

Feature	Value
Brand	Exquisit
Model Name	GS 175-1 A++
Color	White
Capacity (Net)	160 Liters
Energy Efficiency Class	A++
Noise Level	43 dB(A) re 1 pW
Number of Freezer Drawers	5
Dimensions (H x W x D)	144 cm x 55.4 cm x 55.1 cm
Freezing Capacity	12 kg / 24 hours
Temperature Control	Manual
Door Hinge	Reversible

DtGV | Deutsche Gesellschaft
für Verbraucherstudien mbH 

**DEUTSCHER
KUNDEN-
AWARD
2020/21**

DEUTSCHLANDS BESTE DIENSTLEISTER

HERAUSRAGENDES

PREIS-LEISTUNGS-
VERHÄLTNIS

exquisit

Branchenübergreifende Kundenbefragung
Auszeichnung: TOP 20%, 10/2020, dtgv.de

Figure 3: Energy label for the Exquisit GS 175-1 A++ freezer, highlighting its A++ energy efficiency class, annual energy consumption, net capacity, and noise level.



Figure 4: A page from the Exquisit GS 175-1 A++ freezer manual, providing detailed technical specifications and product data.

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This Exquisit GS 175-1 A++ freezer comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

8.2 Customer Support

For technical assistance, warranty claims, or spare parts, please contact Exquisit customer support. Refer to the contact information provided with your purchase documentation or visit the official Exquisit website for the most up-to-date support details. When contacting support, please have your model number (GS 175-1 A++) and serial number (if applicable) ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question