

Manuals.plus /

- › Olympus /
- › Olympus SH-25MR Digital Camera Instruction Manual

Olympus SH-25MR

Olympus SH-25MR Digital Camera Instruction Manual

Model: SH-25MR

INTRODUCTION

This manual provides essential information for the safe and effective use of your Olympus SH-25MR Digital Camera. Please read it thoroughly before using the camera and keep it in a safe place for future reference.



Image: Front view of the Olympus SH-25MR Digital Camera, showcasing its compact design and lens.

SETUP

1. Unpacking and Initial Check

Verify that all components are present in the package:

- Olympus SH-25MR Digital Camera
- Lithium-Ion Battery
- USB Cable
- Strap
- Instruction Manual (this document)

2. Battery Installation and Charging

1. Open the battery cover located on the bottom of the camera.
2. Insert the supplied Lithium-Ion battery, ensuring correct orientation as indicated inside the compartment.
3. Close the battery cover securely.
4. Connect the camera to a power source using the USB cable for charging. The charging indicator will illuminate.

3. Memory Card Insertion

The camera supports SDHC and SDXC memory cards.

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the memory card with the label facing the front of the camera until it clicks into place.
3. Close the memory card slot cover.

4. Initial Power On and Settings

1. Press the **ON/OFF** button located on the top of the camera.
2. Upon first use, the camera will prompt you to set the date, time, and language. Follow the on-screen instructions using the navigation buttons and **OK** button.



Image: Top view of the Olympus SH-25MR Digital Camera, showing the power button, mode dial, and GPS module.

OPERATING THE CAMERA

1. Basic Photography

The SH-25MR features a 16.8-megapixel BSI CMOS sensor and 12.5x optical zoom.

- **Power On:** Press the **ON/OFF** button. The lens will extend.
- **Shooting Modes:** Rotate the mode dial on the top of the camera to select your desired shooting mode (e.g. **AUTO** for automatic settings, **SCN** for scene modes).
- **Zoom:** Use the zoom lever around the shutter button to adjust the 12.5x optical zoom (4.2-52.5mm focal length). Digital zoom up to 4x is also available.
- **Focus:** The camera uses Contrast Detection Autofocus. Half-press the shutter button to focus.
- **Flash:** The built-in flash can be activated or set to auto mode via the camera menu.
- **Image Stabilization:** The camera features both Digital and Optical Image Stabilization to reduce blur.
- **Taking a Photo:** Fully press the shutter button to capture the image.



Image: Front view of the Olympus SH-25MR Digital Camera with its 12.5x optical zoom lens extended.

2. Video Recording

The SH-25MR can record Full HD 1080p video at 30 frames per second in MP4 format.

1. To start recording, press the dedicated **Movie Record** button, typically marked with a red dot, on the back of the camera.
2. Press the button again to stop recording.

3. GPS Functionality

The camera includes a built-in GPS receiver to geotag your photos with location data.

- **Activating GPS:** Enable the GPS function through the camera's menu.
- **Acquiring Signal:** For best results, ensure the camera has a clear view of the sky when acquiring a GPS

signal. This may take a few moments.

- **Geotagging:** Once a signal is acquired, location information will be embedded into the metadata of your photos.

4. Reviewing Images and Videos

1. Press the **Playback** button (often marked with a play icon) to enter playback mode.
2. Use the navigation buttons to scroll through your captured images and videos on the 3-inch LCD screen.
3. Press the **OK** button to view details or play videos.



Image: Rear view of the Olympus SH-25MR Digital Camera, displaying the 3-inch LCD screen and control buttons.

5. Connecting to a Computer

To transfer photos and videos:

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the supplied USB cable.
3. Power on the camera. It should appear as a removable drive on your computer, allowing you to access and transfer files.

MAINTENANCE

1. Cleaning

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution.
- **LCD Screen:** Wipe gently with a soft, dry cloth. Avoid harsh chemicals.
- **Camera Body:** Use a soft, dry cloth to wipe away dust and dirt. Do not use solvents.

2. Storage

- When not in use for extended periods, remove the battery from the camera.
- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use a camera bag or case to protect it from dust and physical damage.

TROUBLESHOOTING

If you encounter issues with your Olympus SH-25MR, refer to the following common solutions:

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted. Try charging the battery again.
- **Images are blurry:** Check that the lens is clean. Ensure the camera has focused correctly before taking the shot (half-press the shutter button). Use image stabilization in low light or when zooming.
- **Battery drains quickly:** Reduce screen brightness. Turn off GPS when not needed. Limit video recording. Ensure the camera is fully powered off when not in use.
- **GPS not acquiring signal:** Move to an open area with a clear view of the sky. Ensure GPS is enabled in the camera settings.
- **Memory card error:** Ensure the memory card is inserted correctly. Try formatting the card (this will erase all data). If the issue persists, try a different memory card.

SPECIFICATIONS

Key technical specifications for the Olympus SH-25MR Digital Camera:

Feature	Specification
Model Name	SH-25MR
Photo Sensor Resolution	16.8 MP
Optical Zoom	12.5x
Digital Zoom	4x
Sensor Type	BSI CMOS
Image Stabilization	Digital, Optical
Video Resolution	1080p
Frame Rate	30 FPS
Screen Size	3 Inches
Connectivity Technology	USB, GPS
Supported File Format	JPEG, RAW
Battery Type	Lithium Ion
Item Weight	208 Grams

WARRANTY AND SUPPORT

Olympus provides a limited warranty for its products. Please refer to the warranty card included with your camera for specific terms and conditions, or visit the official Olympus website for detailed warranty information.

For technical support, service, or additional inquiries, please visit the Olympus Store or contact Olympus customer service directly.