

[Manuals.plus](#) /

> [Amscan](#) /

> Amscan Princess & The Frog Crepe Streamer User Manual

## Amscan Princess & The Frog Crepe Streamer

# Amscan Princess & The Frog Crepe Streamer User Manual

Model: Princess & The Frog Crepe Streamer

## PRODUCT OVERVIEW

The Amscan Princess & The Frog Crepe Streamer is a decorative item designed for party environments. This crepe paper streamer features designs inspired by Disney's The Princess and the Frog, including "Happy Birthday" text, frog motifs, and Princess Tiana imagery. It is intended for single-use decoration to enhance birthday parties and similar celebrations.



Image: The Princess & The Frog Crepe Streamer, displaying its rolled form and a segment of the unrolled streamer with decorative elements.

## SETUP AND PREPARATION

This section provides instructions for preparing the crepe streamer for use.

- 1. Unroll Carefully:** Gently unroll the crepe streamer from its spool. Avoid pulling too quickly or with excessive force to prevent tearing.
- 2. Measure and Cut (Optional):** If you require shorter lengths, use scissors to cut the streamer to your desired size.
- 3. Prepare Hanging Surface:** Ensure the surface where the streamer will be applied is clean and dry.

## USAGE INSTRUCTIONS

Follow these steps to effectively use the crepe streamer for decoration:

- **Hanging:**

- For hanging across rooms or doorways, secure each end of the streamer using adhesive tape (e.g., masking tape, painter's tape) or thumbtacks. Ensure the tape is suitable for your wall surface to avoid damage.
- For a draped effect, allow the streamer to sag slightly between attachment points.
- **Twisting:**
  - To create a twisted effect, gently twist the streamer as you unroll and attach it.
- **Layering:**
  - Combine with other solid color streamers or party supplies to create a layered decorative display.
- **Safety Note:** Keep away from open flames and heat sources. This product is for decorative purposes only and is not a toy.

## MAINTENANCE AND DISPOSAL

---

This crepe streamer is designed for single-event use. No specific maintenance is required.

- **Storage:** If not fully used, store the remaining rolled streamer in a cool, dry place away from direct sunlight to preserve its color and integrity.
- **Disposal:** After use, dispose of the crepe streamer responsibly according to local waste disposal guidelines. Crepe paper is generally recyclable in many areas, but check with your local recycling facility.

## TROUBLESHOOTING

---

While simple to use, here are common considerations:

- **Streamer Tears:** Crepe paper is delicate. If the streamer tears during unrolling or handling, you can often trim the torn section and continue using the remaining length, or use clear tape to mend small tears.
- **Adhesive Not Sticking:** Ensure the surface is clean and dry. For heavier or longer sections, use stronger adhesive tape or multiple attachment points.

## SPECIFICATIONS

---

Feature	Detail
Product Name	Princess & The Frog Crepe Streamer
Brand	Amscan
Model	Princess & The Frog Crepe Streamer
ASIN	B00767O1BO
Length	30 feet (approx. 9.14 meters)
Product Dimensions	6 x 6 x 3 inches (packaged)
Item Weight	0.48 ounces
Department	Kids Party Supplies
Manufacturer	Amscan

## WARRANTY AND SUPPORT

---

Due to the nature of this single-use decorative product, a formal warranty is typically not provided. For any product-related inquiries or concerns, please contact the manufacturer directly.

**Manufacturer Contact:**

- **Brand:** Amscan
- For general inquiries, please visit the official Amscan website or refer to the packaging for specific contact information.

