

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Memorex](#) /

› [Memorex OptiFix Pro Motorized CD/DVD Scratch Repair Kit User Manual](#)

Memorex 08007

Memorex OptiFix Pro Motorized CD/DVD Scratch Repair Kit User Manual

Model: 08007



Image: The Memorex OptiFix Pro device displayed in its retail box, highlighting its purpose as a motorized repair and cleaning system for various disc types.

INTRODUCTION

The Memorex OptiFix Pro is a motorized device designed for repairing and cleaning scratches on various optical discs, including CDs, DVDs, and video game discs. This manual provides essential instructions for the safe and effective use of your OptiFix Pro kit, helping to restore functionality to your damaged media.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Memorex OptiFix Pro Device

- AC Adapter
- OptiFix Repair Solution
- OptiFix Cleaning Solution
- Repair Pads (Purple)
- Cleaning Pads (Yellow)
- Storage Case for Pads/Solutions (often integrated into packaging)



Image: The complete contents of the Memorex OptiFix Pro kit, including the main device, AC adapter, repair and cleaning solutions, and various pads, as they appear within their packaging tray.

SAFETY INFORMATION

- Keep the device and solutions out of reach of children and pets.
- Do not ingest the repair or cleaning solutions. In case of accidental ingestion, seek medical attention immediately.
- Avoid contact of solutions with eyes and skin. Rinse thoroughly with water if contact occurs.
- Use the device only with the provided AC adapter.
- Do not attempt to disassemble or modify the device.
- Ensure the device is placed on a stable, flat surface during operation.
- Always unplug the device when not in use or before cleaning.

SETUP

1. **Unpack the Device:** Carefully remove the Memorex OptiFix Pro device and all accessories from its packaging.
2. **Connect AC Adapter:** Locate the power input port on the OptiFix Pro device and securely plug in the AC adapter. Then, plug the adapter into a standard, easily accessible electrical outlet.
3. **Prepare Solutions and Pads:** Ensure the OptiFix Repair Solution (typically in a tube) and OptiFix Cleaning Solution (typically in a bottle) are readily accessible. Also, have the purple repair pads and yellow cleaning pads nearby.

OPERATING INSTRUCTIONS

Follow these steps to repair or clean your discs using the Memorex OptiFix Pro:

1. Insert Pads: Open the lid of the OptiFix Pro device.

- For repairing discs: Insert the purple repair pads into the designated slots.
- For cleaning discs: Insert the yellow cleaning pads into the designated slots.

2. Apply Solutions:

- For repairing discs: Apply approximately 2 drops of OptiFix Repair Solution evenly onto the purple repair pads.
- For cleaning discs: Apply approximately 2 drops of OptiFix Cleaning Solution evenly onto the yellow cleaning pads.



Image: A detailed view of the Memorex OptiFix Repair Solution tube and Cleaning Solution bottle, illustrating the type of solutions used for disc treatment.

- 3. Insert Disc:** Carefully place the disc into the device with the label side facing up. Ensure the disc is centered and lies flat on the spindle.
- 4. Start Process:** Close the lid of the device firmly. Press the "Repair" or "Clean" button (located on the front of the device, corresponding to the pads inserted). The motor will activate, and the disc will begin to rotate and be treated. The device is designed to automatically shut off once the process is complete.

Important Note: For discs with significant scratches or dirt, it may be necessary to repeat the repair or cleaning process multiple times. Allow the disc to dry completely between treatments, especially when using the repair solution. Always inspect the disc after each cycle.



Image: A visual guide from the product packaging, outlining the four essential steps for operating the Memorex OptiFix Pro to effectively repair and clean optical discs.

MAINTENANCE

- Cleaning the Device:** After each use, or as needed, gently wipe the interior and exterior surfaces of the OptiFix Pro device with a soft, lint-free, dry cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the device in water.
- Pad Replacement:** The repair and cleaning pads are consumable items. Replace them when they show signs of wear, become saturated with debris, or no longer effectively hold the solutions. Replacement pads may be available separately.
- Solution Storage:** Store the OptiFix Repair and Cleaning Solutions in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure all bottle caps and tube lids are securely closed to prevent evaporation or leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	AC adapter not properly connected; power outlet issue; device malfunction.	Ensure the AC adapter is securely plugged into both the device and a known working electrical outlet. Test the outlet with another appliance. If the issue persists, contact support.
Disc does not spin or spins weakly.	Disc not seated correctly; motor obstruction; worn pads; insufficient power.	Open the lid and re-seat the disc, ensuring it is centered. Check for any foreign objects obstructing the motor or pads. Replace worn pads. Verify power connection.

Problem	Possible Cause	Solution
Scratches are not fully removed after one cycle.	Disc has deep scratches; insufficient solution applied; pads are worn.	Repeat the repair process, ensuring adequate solution is applied to fresh pads. For very deep scratches, complete removal may not be possible, but improvement is often observed with multiple treatments.
Lid does not stay closed during operation.	Disc improperly placed; latch mechanism issue; foreign object.	Ensure the disc is perfectly centered and flat on the spindle. Check the lid and latch area for any obstructions. If the latch mechanism appears damaged, contact customer support.

SPECIFICATIONS

- Product Dimensions:** 8.5 x 10.5 x 2.5 inches
- Item Weight:** 1 pounds
- Manufacturer:** DirectForSale
- Model Number:** 08007
- UPC:** [0034707080072](#)

WARRANTY AND SUPPORT

For specific warranty terms, conditions, or technical support inquiries regarding your Memorex OptiFix Pro, please refer to the warranty documentation provided with your original purchase. It is recommended to retain your proof of purchase for any warranty claims. For further assistance, you may contact the manufacturer, DirectForSale.