

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sylvania](#) /

› [Sylvania SMPK4444 4GB Video MP3/MP4 Player User Manual](#)

Sylvania SMPK4444

Sylvania SMPK4444 4GB Video MP3/MP4 Player User Manual

INTRODUCTION

Thank you for choosing the Sylvania SMPK4444 4GB Video MP3/MP4 Player. This device is designed to provide a versatile portable media experience, allowing you to enjoy music, videos, photos, and even capture moments with its built-in camera and camcorder. This manual will guide you through the setup, operation, and maintenance of your new player.



Image: The Sylvania SMPK4444 4GB Video MP3/MP4 Player, featuring a black casing, a color screen displaying abstract art, and a circular control pad with playback and navigation buttons.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Sylvania SMPK4444 4GB Video MP3/MP4 Player
- USB Cable
- Earphones
- User Manual (this document)

INITIAL SETUP

Charging the Device

Before first use, fully charge the player. Connect the small end of the included USB cable to the player's USB port and the larger end to a powered USB port on a computer or a compatible USB wall adapter (not included). The battery indicator on the screen will show charging status. A full charge typically takes a few hours.

Connecting to a Computer

To transfer files, connect the player to your computer using the supplied USB cable. The player will appear as a removable disk drive on your computer. You can then drag and drop files directly to and from the player's storage.

Transferring Files

The Sylvania SMPK4444 supports MP1, MP2, MP3, WMA audio files, AMV video files, JPEG image files, and TXT text files. Simply drag and drop your desired files into the appropriate folders on the player (e.g., 'Music', 'Video', 'Photos'). Ensure files are in compatible formats to avoid playback issues.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the Power/Play/Pause button (usually the center button on the control pad) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power/Play/Pause button again until the device shuts down.

Main Menu Navigation

Use the navigation buttons (up, down, left, right) on the control pad to move between menu options. Press the center Power/Play/Pause button to select an option. The 'M' button typically functions as a Menu/Back button to return to the previous screen or main menu.

Music Playback

1. From the main menu, select 'Music'.
2. Navigate through your folders and files to find the desired song.
3. Press the Power/Play/Pause button to start playback.

4. Use the '+' and '-' buttons for volume control.
5. Use the 'Previous' and 'Next' buttons (left and right arrows on the control pad) to skip tracks.

Video Playback

1. From the main menu, select 'Video'.
2. Browse for your video files (AMV format recommended for optimal performance).
3. Press the Power/Play/Pause button to begin watching.

Photo Viewing

1. From the main menu, select 'Photos' or 'Pictures'.
2. Select a JPEG image file to view it on the 1.8" color screen.

Using the Camera/Camcorder

The device features a built-in camera and camcorder. Access these functions from the main menu. Follow on-screen prompts to switch between photo and video modes and to capture content. Captured media will be saved to the device's internal storage.

Voice Recording

To use the built-in voice recorder:

1. Select 'Voice Recorder' from the main menu.
2. Press the Power/Play/Pause button to start recording.
3. Press it again to stop and save the recording.

MAINTENANCE

Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the screen or casing.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge it to about 50% and store in a cool, dry place.

Storage

Store the player in a clean, dry environment away from extreme temperatures, direct sunlight, and excessive dust.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again.

Problem	Solution
Cannot transfer files to/from computer.	Check USB cable connection. Ensure the player is recognized as a removable disk. Try a different USB port or computer.
Audio/Video files do not play.	Verify that the files are in a supported format (MP3, WMA for audio; AMV for video). Convert files if necessary.
Screen is unresponsive or frozen.	Press and hold the Power/Play/Pause button for an extended period (10-15 seconds) to force a reset.
Poor camera/camcorder quality.	Ensure adequate lighting. Clean the camera lens if it appears smudged.

TECHNICAL SPECIFICATIONS

- **Brand:** Sylvania
- **Model:** SMPK4444
- **Memory Storage Capacity:** 4 GB (stores approximately 1000 songs, 12 hours of video, or 12000 pictures)
- **Screen:** 1.8" Full Color Display
- **Special Features:** Video Playback, Voice Recorder, Built-in Camera/Camcorder
- **Connectivity Technology:** USB 2.0
- **Supported Audio Formats:** MP1, MP2, MP3, WMA
- **Supported Video Formats:** AMV
- **Supported Image Formats:** JPEG
- **Supported Text Formats:** TXT

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Sylvania website. Keep your proof of purchase for any warranty claims.