

Nilfisk 128470040

Nilfisk Telescopic Lance 128470040 Instruction Manual

Model: 128470040

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Nilfisk Telescopic Lance 128470040. This accessory is designed to extend the reach of your Nilfisk pressure washer, enabling cleaning of high or difficult-to-access areas such as roofs, gutters, and tall walls. Please read this manual thoroughly before assembly, operation, or maintenance.

2. SAFETY INFORMATION

Always observe basic safety precautions when using this product to reduce the risk of injury or damage. This telescopic lance is intended for use with compatible Nilfisk pressure washers. High-pressure spray can cause serious injury. Always wear appropriate personal protective equipment, including eye protection, gloves, and sturdy footwear. Ensure stable footing when operating the lance, especially at full extension. Do not direct the spray at people, animals, or electrical equipment. Disconnect the lance from the pressure washer before performing any maintenance or when not in use.

3. PRODUCT OVERVIEW

The Nilfisk Telescopic Lance 128470040 is a versatile accessory for your pressure washer, featuring a multi-section design for adjustable length and a Click&Clean nozzle system for easy attachment of various Nilfisk accessories. It is designed for efficient cleaning of elevated surfaces.



Figure 1: The Nilfisk Telescopic Lance 128470040. This image displays the overall design of the telescopic lance, including its handle, extension sections, and nozzle connection point.



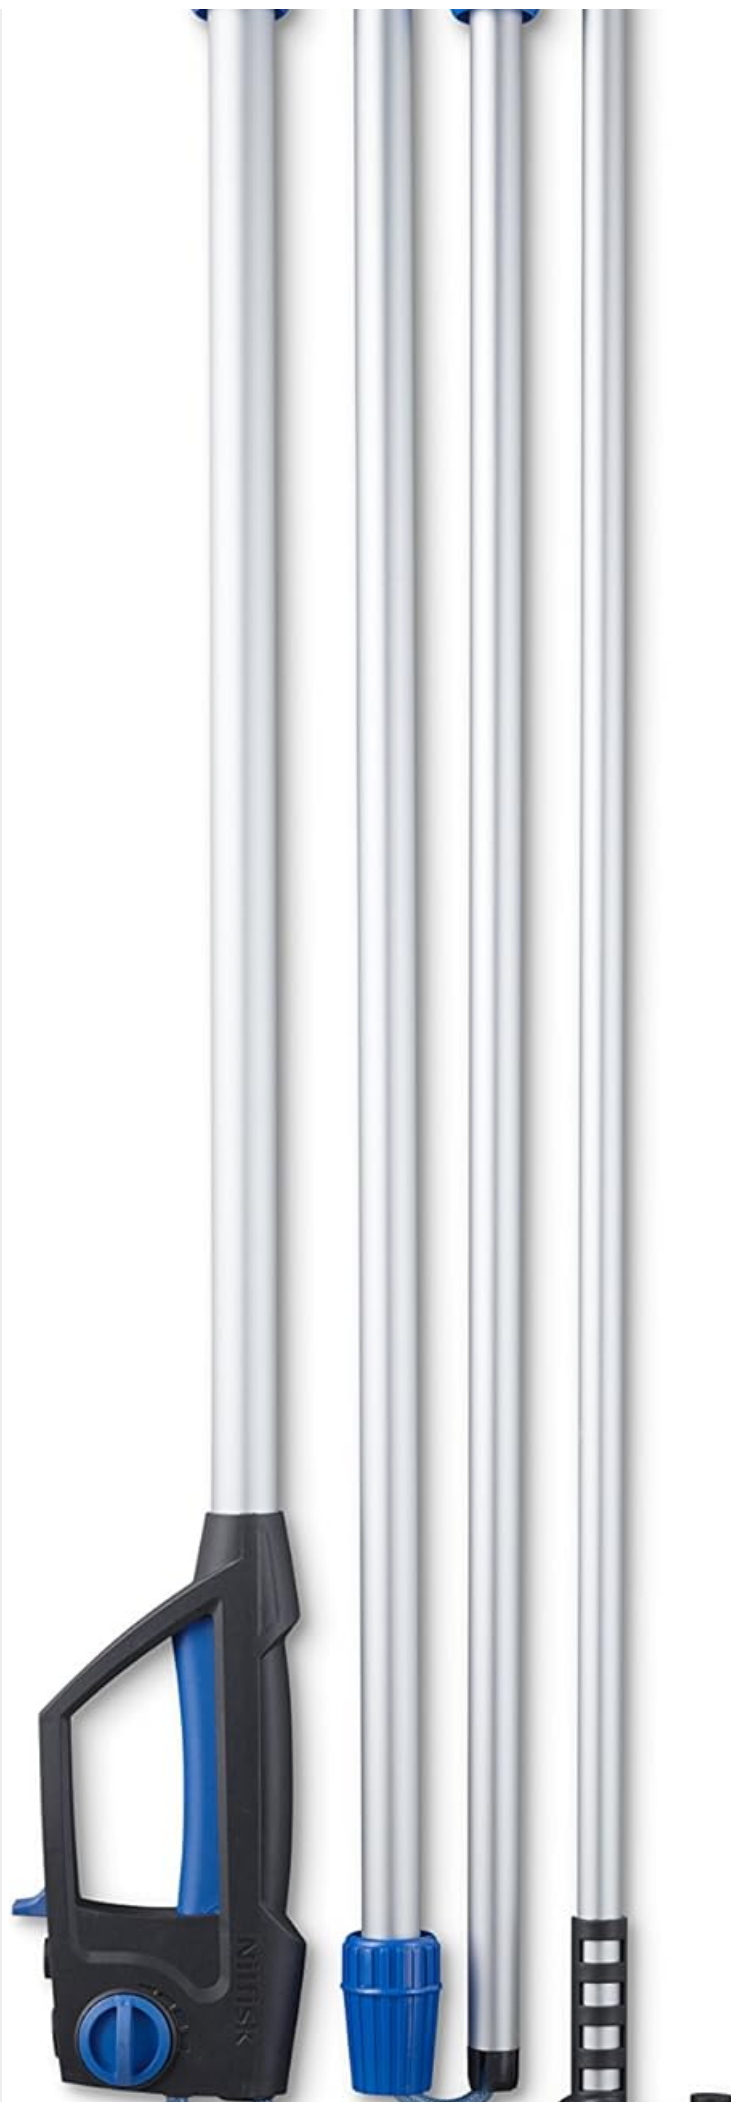




Figure 2: Components of the Nilfisk Telescopic Lance. This image illustrates the lance's modular design, showing its various extendable sections and the handle assembly.

4. SETUP

1. **Assemble Lance Sections:** Connect the telescopic sections of the lance by twisting and locking them into place. Ensure all connections are secure before proceeding.
2. **Attach Nozzle:** Select the appropriate Click&Clean nozzle for your cleaning task. Align the nozzle with the lance's connection point and push firmly until it clicks into place.



Figure 3: Attaching a Click&Clean Nozzle. This image shows hands securely connecting a nozzle to the end of the telescopic lance.

3. **Connect to Pressure Washer:** Attach the hose from your Nilfisk pressure washer to the inlet connection on the handle of the telescopic lance. Ensure a tight, leak-free connection.



Figure 4: Connecting the Pressure Washer Hose. This image demonstrates the proper method for connecting the pressure washer hose to the lance's handle.

5. OPERATING INSTRUCTIONS

1. **Extend the Lance:** Adjust the length of the telescopic lance to suit your cleaning height by releasing the locking mechanisms, extending the sections, and then re-engaging the locks. Ensure the lance is securely locked at the desired length.
2. **Start Pressure Washer:** Follow your pressure washer's instructions to turn it on and pressurize the system.
3. **Begin Cleaning:** Hold the lance firmly with both hands. Maintain a stable stance. Direct the spray towards the surface to be cleaned, keeping a safe distance to avoid damage. Move the nozzle in a consistent pattern for even cleaning.



Figure 5: Operating the Telescopic Lance for Roof Cleaning. This image shows an individual safely using the extended lance to clean a high roof area.



Figure 6: Nozzle in Action. A close-up view of the lance's nozzle effectively spraying water onto a tiled roof surface.

4. **Adjust Spray:** If your nozzle allows, adjust the spray pattern as needed for different cleaning tasks.
5. **Finish Cleaning:** Once cleaning is complete, release the trigger, turn off the pressure washer, and relieve any remaining pressure in the system before disconnecting the lance.

6. MAINTENANCE

- **Cleaning:** After each use, rinse the lance thoroughly with clean water to remove any detergent residue or debris.
- **Inspection:** Regularly inspect the lance, connections, and nozzle for any signs of wear, damage, or blockages. Replace worn parts as necessary.
- **Storage:** Store the telescopic lance in a clean, dry place, away from direct sunlight and extreme temperatures. It is recommended to store it in its collapsed state to prevent accidental damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low pressure from nozzle	Clogged nozzle; Loose connections; Insufficient water supply to pressure washer.	Clean or replace nozzle; Tighten all connections; Ensure adequate water flow to pressure washer.
Water leaking from connections	Loose connections; Worn O-rings or seals.	Tighten connections; Inspect and replace O-rings or seals if damaged.
Lance sections not locking securely	Debris in locking mechanism; Damaged locking mechanism.	Clean locking mechanisms; Contact Nilfisk support if damaged.

8. SPECIFICATIONS

- **Model Number:** 128470040
- **Brand:** Nilfisk
- **Product Type:** Pressure Washer Accessory (Telescopic Lance)
- **Dimensions (Packaged):** Approximately 160 x 12 x 7 cm
- **Item Weight:** 3.25 kg
- **Power Source (Control):** Hand-operated
- **Nozzle System:** Click&Clean compatible

9. WARRANTY AND SUPPORT


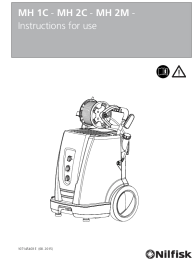
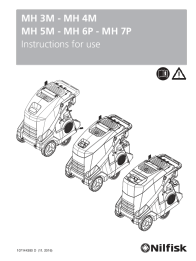
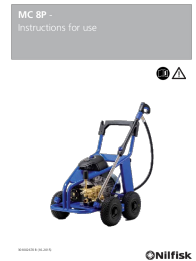
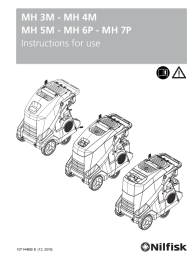
For warranty information, technical support, or to purchase replacement parts, please refer to the documentation provided with your original purchase or visit the official Nilfisk website. Keep your proof of purchase for warranty claims.

Related Documents - 128470040



[Nilfisk High Pressure Washers P-series User Guide](#)

User guide for Nilfisk P-series high pressure washers, including Premium 180, Premium 190, and Premium 190 PLUS models. Provides assembly, operation, and accessory information.

	<p>Nilfisk TITAN X-TRA High Pressure Washer User Guide</p> <p>User guide for the Nilfisk TITAN X-TRA High Pressure Washer, detailing assembly, operation, and maintenance. Includes information on various accessories.</p>
	<p>Nilfisk MH 1C, MH 2C, MH 2M High-Pressure Washer - User Manual</p> <p>Comprehensive user manual for Nilfisk MH 1C, MH 2C, and MH 2M high-pressure washers, covering safety instructions, operation, maintenance, and troubleshooting. Includes technical specifications and company contact information.</p>
	<p>Nilfisk MH Series Professional Hot Water High-Pressure Washer: Instructions for Use and Specifications</p> <p>This document provides comprehensive instructions for use, setup, operation, maintenance, and troubleshooting for the Nilfisk MH 3M, MH 4M, MH 5M, MH 6P, and MH 7P series of professional hot water high-pressure washers. It includes detailed specifications, a multilingual glossary, and global contact information.</p>
	<p>Nilfisk MC 8P High-Pressure Washer - Instructions for Use and Technical Data</p> <p>Comprehensive instructions for use, safety guidelines, maintenance, troubleshooting, and technical specifications for the Nilfisk MC 8P professional high-pressure washer.</p>
	<p>Nilfisk MH Series High-Pressure Cleaners: Operating Instructions and Specifications</p> <p>Comprehensive operating instructions, maintenance guide, troubleshooting tips, and detailed specifications for the Nilfisk MH series of professional high-pressure cleaners.</p>