



Manuals.plus /

› Brentwood /

› Brentwood JC-500 2-Speed 700W Juice Extractor User Manual

Brentwood JC-500

Brentwood JC-500 2-Speed 700W Juice Extractor User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Read all instructions before operating this appliance.

- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is unplugged from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the cover is properly secured before the motor is switched on. Do not open the cover while the juicer is operating.
- Use the food pusher to feed food into the chute. Never use fingers or other utensils.
- This appliance is for household use only.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Brentwood JC-500 Juice Extractor.

- Food Pusher
- Transparent Cover
- Filter Basket (Stainless Steel)
- Juicer Base with Motor
- Pulp Container
- Safety Locking Bar
- Control Knob (0-I-II)
- Juice Spout

- Graduated Juice Jar with Lid and Foam Separator



Figure 2.1: Assembled Brentwood JC-500 Juice Extractor with graduated jar.



Figure 2.2: Graduated juice jar with measurements and foam separator.

3. ASSEMBLY

Before first use, wash all removable parts (transparent cover, filter basket, pulp container, food pusher, juice jar) in warm soapy water, rinse, and dry thoroughly. The motor base should be wiped with a damp cloth.

1. Place the juicer base on a dry, flat, stable surface.
2. Insert the stainless steel filter basket into the juicer base, ensuring it is seated firmly.
3. Place the transparent cover over the filter basket, aligning the juice spout with the opening on the base.
4. Position the pulp container under the pulp ejection chute at the back of the juicer.
5. Lift the safety locking bar and secure it into the grooves on the transparent cover. The juicer will not operate unless the locking bar is correctly engaged.
6. Place the graduated juice jar under the juice spout.

7. Insert the food pusher into the feed chute.



Figure 3.1: Filter basket correctly placed in the juicer base.

4. OPERATION

Follow these steps to operate your juice extractor safely and effectively.

1. Ensure the juicer is properly assembled and the safety locking bar is engaged.
2. Plug the power cord into a standard electrical outlet.
3. Prepare fruits and vegetables: Wash all produce. For larger items, cut them into pieces that fit easily into the feed chute. Remove large seeds (e.g., from peaches, plums) and hard pits. Peeling is generally not necessary for most fruits and vegetables, but citrus fruits should be peeled to avoid bitterness.
4. Place the graduated juice jar under the juice spout.
5. Turn the control knob to the desired speed setting:
 - **Speed I (Low):** Suitable for softer fruits and vegetables like oranges, grapes, tomatoes, and leafy greens.

- **Speed II (High):** Recommended for harder fruits and vegetables such as apples, carrots, celery, and beets.
- With the motor running, gradually feed the prepared produce into the feed chute using the food pusher. Apply gentle, even pressure. Do not force food into the chute.
- The juice will flow into the juice jar, and the pulp will collect in the pulp container.
- When finished juicing, turn the control knob to the '0' (Off) position and unplug the appliance from the outlet.



Figure 4.1: Control knob for selecting speed settings.

Tips for Best Results:

- Juice firm fruits and vegetables immediately after washing.
- For maximum juice extraction, feed produce slowly.
- Do not overload the juicer. If the motor slows down significantly, reduce the amount of produce being fed.
- Empty the pulp container and juice jar before they become too full to prevent blockages.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your juicer.

1. Always unplug the juicer from the power outlet before cleaning.
2. Disassemble the juicer by reversing the assembly steps.
3. All removable parts (food pusher, transparent cover, filter basket, pulp container, juice jar) are dishwasher safe. Alternatively, wash them in warm, soapy water using a brush to clean the filter basket thoroughly. Rinse and dry completely.
4. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
5. Ensure all parts are dry before reassembling or storing the juicer.



Figure 5.1: Stainless steel filter basket, requiring thorough cleaning after use.

6. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Power cord not plugged in; Safety locking bar not engaged; Power outage.	Ensure the power cord is securely plugged in. Check that the safety locking bar is fully engaged. Verify power supply.
Motor stops during operation.	Overheating due to continuous use; Overload from too much produce.	Turn off and unplug the juicer. Allow it to cool down for at least 30 minutes. Reduce the amount of produce fed at one time.
Low juice yield or wet pulp.	Produce fed too quickly; Filter basket clogged.	Feed produce more slowly. Clean the filter basket thoroughly.
Excessive vibration or noise.	Filter basket not properly seated; Juicer not on a stable surface.	Disassemble and reassemble the filter basket, ensuring it is seated correctly. Place the juicer on a flat, stable surface.

7. SPECIFICATIONS

- **Model:** JC-500
- **Power:** 700W
- **Speed Settings:** 2 (Low, High)
- **Material:** Stainless Steel (housing, filter basket)
- **Product Dimensions:** Approximately 18"D x 8.5"W x 15.5"H
- **Removable Parts:** Dishwasher Safe

8. WARRANTY AND SUPPORT

This Brentwood JC-500 Juice Extractor comes with a **1-Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

The warranty does not cover damage resulting from misuse, abuse, accident, alteration, lack of proper care, or normal wear and tear. For warranty claims or technical support, please contact Brentwood customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please refer to the contact information provided with your product packaging or visit the official Brentwood website.

