

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Wahl Professional](#) /
- › [Wahl 5 Star Rapid Fire Clipper Instruction Manual](#)

Wahl Professional 82332

Wahl 5 Star Rapid Fire Clipper Instruction Manual

Model: 82332

INTRODUCTION

The Wahl Professional 5 Star Rapid Fire Clipper is a commercial-grade tool designed for professional use, offering high precision and ergonomic design. This manual provides essential information for the proper use, maintenance, and care of your clipper.



Figure 1: Wahl 5 Star Rapid Fire Clipper and its retail packaging, showcasing the product's design and branding.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock or injury:

- Avoid using near water or with wet hands.
- Be careful when handling sharp blades.
- Consider skin sensitivity when using, especially on infants or people with sensitive skin.
- Unplug the appliance before cleaning or performing maintenance.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged.

PRODUCT COMPONENTS

- Professional variable speed clipper
- #1 Detachable Blade (2mm)
- 4 Steel Blade Extenders (1/8", 1/4", 3/8", 1/2")
- Drive Tips

- Drive Tip Tool
- Pre-shave brush
- Oil
- Cleaning brush
- Operating instructions (DVD and manual)
- Red blade guard



Figure 2: Close-up view of the Wahl 5 Star Rapid Fire Clipper, highlighting the detachable #1 blade for high-precision cutting.

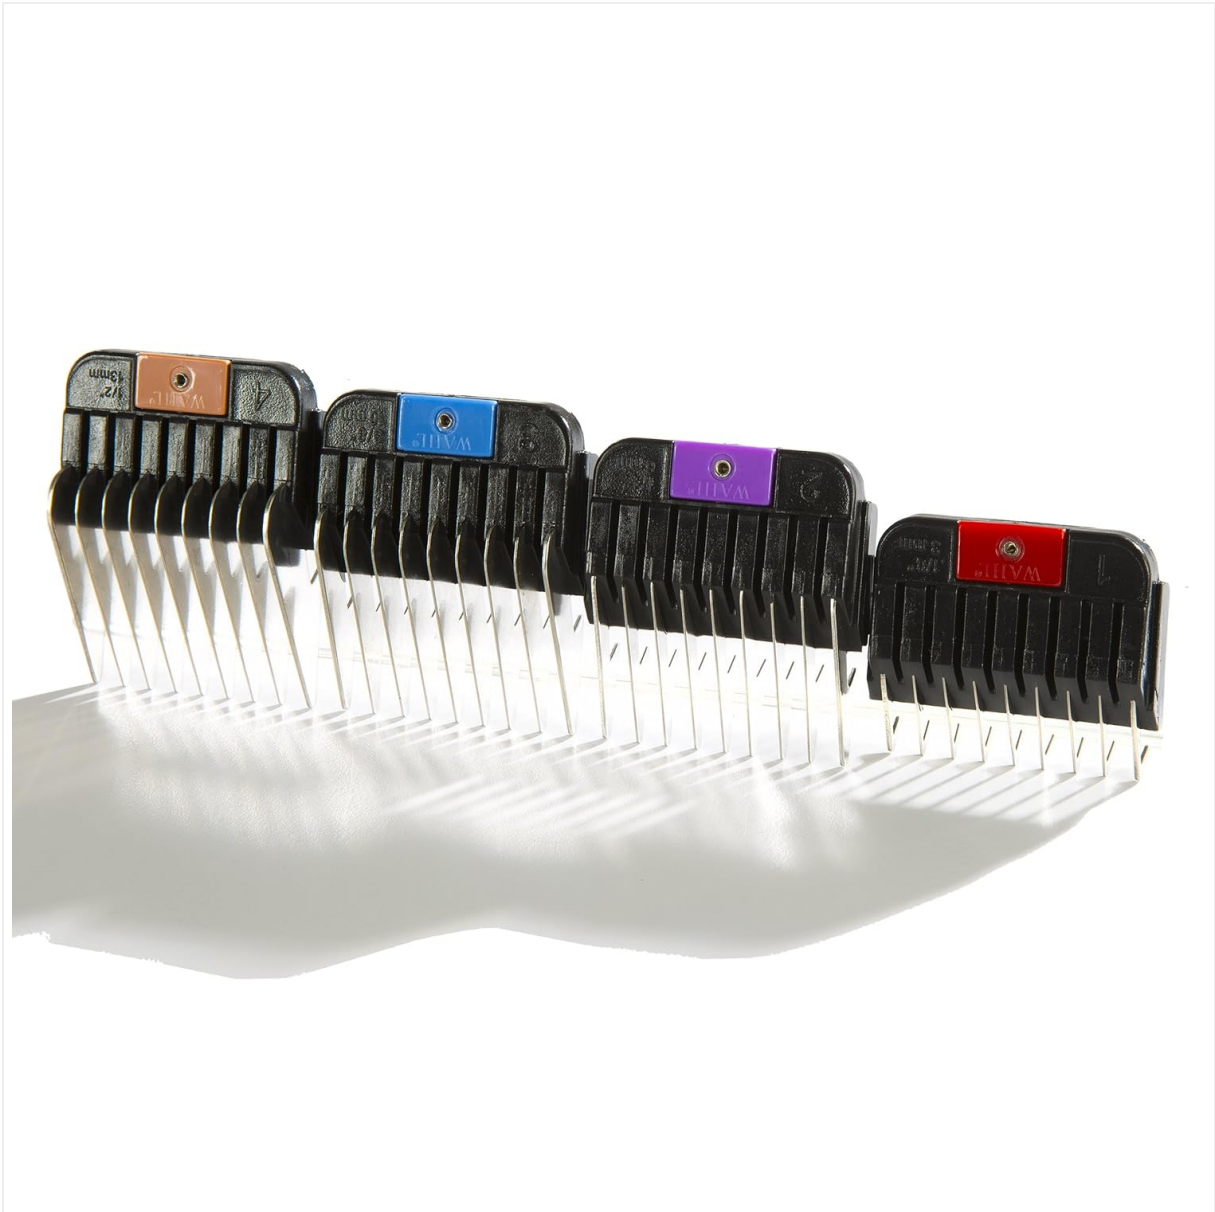


Figure 3: The four steel blade extenders (1/8", 1/4", 3/8", 1/2") included with the clipper, providing various cutting lengths.

SETUP AND OPERATION

Initial Setup

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Blade Installation:** Ensure the #1 detachable blade is securely installed on the clipper. Refer to the included DVD or detailed operating instructions for visual guidance if needed.
3. **Power Connection:** Connect the clipper to the universal transformer and then to a suitable power outlet.



Figure 4: The Wahl 5 Star Rapid Fire Clipper shown with its power adapter, ready for connection to an electrical outlet.

Operating Instructions

1. **Select Blade Extender:** Choose one of the four steel blade extenders (1/8", 1/4", 3/8", 1/2") based on the desired cutting length and attach it firmly to the clipper blade.
2. **Adjust Speed:** The clipper features a variable speed rotary motor controlled with a dial. Adjust the speed from 1800 RPM to 4600 RPM according to your preference and the hair type being cut.
3. **Begin Cutting:** With the desired speed and blade extender set, you can begin using the clipper for hair cutting or trimming.
4. **Maintenance During Use:** For optimal performance, apply a few drops of the provided oil to the blades before and during use, especially during extended periods of operation.



Figure 5: Side view of the clipper, highlighting the ergonomic design and the variable speed dial for precise control.



Figure 6: A detailed view of the variable speed dial, allowing users to adjust the motor speed between 1800 and 4600 RPM.

Instructional Video



Video 1: Official instructional video for the Wahl 5 Star Rapid Fire Clipper, demonstrating its features and operation. This video is provided by the manufacturer.



Figure 7: The instructional DVD included with the clipper, offering comprehensive guidance on its use and maintenance.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Wahl 5 Star Rapid Fire Clipper.

- **Blade Oiling:** Apply a few drops of the provided clipper oil to the blades before and after each use. This lubricates the blades, reduces friction, and prevents rust.
- **Cleaning:** Use the cleaning brush to remove hair clippings from the blades and motor housing after each use. Ensure the clipper is unplugged before cleaning.
- **Drive Tip Replacement:** The clipper features a replaceable tip for the drive finger. Refer to the operating instructions for details on how to inspect and replace the drive tip using the provided tool.
- **Storage:** Store the clipper in a clean, dry place, ideally with the red blade guard in place to protect the blades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clipper is noisy or rattling	Loose blade, worn drive tip, or lack of lubrication.	Ensure blade is securely attached. Check and replace drive tip if worn. Apply clipper oil to blades.
Uneven cut or pulling hair	Dull blades, improper blade extender attachment, or insufficient power.	Ensure blades are sharp and clean. Re-attach blade extender firmly. Check power connection. Consider professional blade sharpening or replacement if blades are dull.
Clipper gets hot during use	Extended continuous use, lack of lubrication, or excessive friction.	Allow the clipper to cool down. Apply clipper oil to blades. Ensure blades are clean and free of hair buildup.

SPECIFICATIONS

Model Number: 82332

Brand: Wahl Professional

Motor Type: Variable Speed Rotary Motor

Speed Range: 1800 RPM - 4600 RPM (Standard to Speed Feed)

Blade Type: #1 Detachable Blade (2mm)

Blade Extenders: 4 Steel (1/8", 1/4", 3/8", 1/2")

Dimensions: 7.25 inches (length)

Weight: 14.5 ounces

Power: Universal Transformer

Manufactured: Made in the U.S.A.

WARRANTY AND SUPPORT

Wahl Professional Products purchased from an authorized dealer feature a manufacturer's warranty. This warranty is not available from unauthorized dealers. For specific warranty terms and conditions, please refer to the documentation included with your product or contact Wahl Professional customer support. For further assistance or inquiries, please visit the official Wahl Professional website or contact their customer service department.

Note: This product is for sale and use in the U.S.A. only.