

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cloud B](#) /

› [Cloud b Tranquil Turtle Ocean Night Light Instruction Manual](#)

### Cloud B CB-7423PR

# Cloud b Tranquil Turtle Ocean Night Light Instruction Manual

## 1. PRODUCT OVERVIEW

---

The Cloud b Tranquil Turtle Ocean Night Light is designed to create a calming and soothing environment for children, aiding in relaxation and sleep. It projects gentle underwater light effects and plays two soothing sound options: ocean waves or a tranquil melody. The brightness and movement speed of the projection are adjustable, and the device features an automatic shut-off timer.



Image 1: The Cloud b Tranquil Turtle Ocean Night Light in purple, ready to create a calming atmosphere.

## 2. SAFETY WARNINGS

- For external use only.
- Avoid contact with eyes.
- Keep away from any flame or heat source.
- Ensure battery compartment is securely closed to prevent access by children.

## 3. PACKAGE CONTENTS

- 1 x Cloud b Tranquil Turtle Ocean Night Light (Model: CB-7423PR)
- Instruction Manual

## 4. SETUP

### 4.1 Battery Installation

The Tranquil Turtle requires 3 Lithium metal batteries (not included).

# Apprivoiser la peur du noir

Cette peluche deviendra un fidèle compagnon de l'heure du coucher

La coque s'illumine et projette son effet sous-marin dans une couleur aigue-marine extrêmement relaxante

3 piles AA requises (non fournies), lumières LEDs longue durée, aucune chaleur émise.

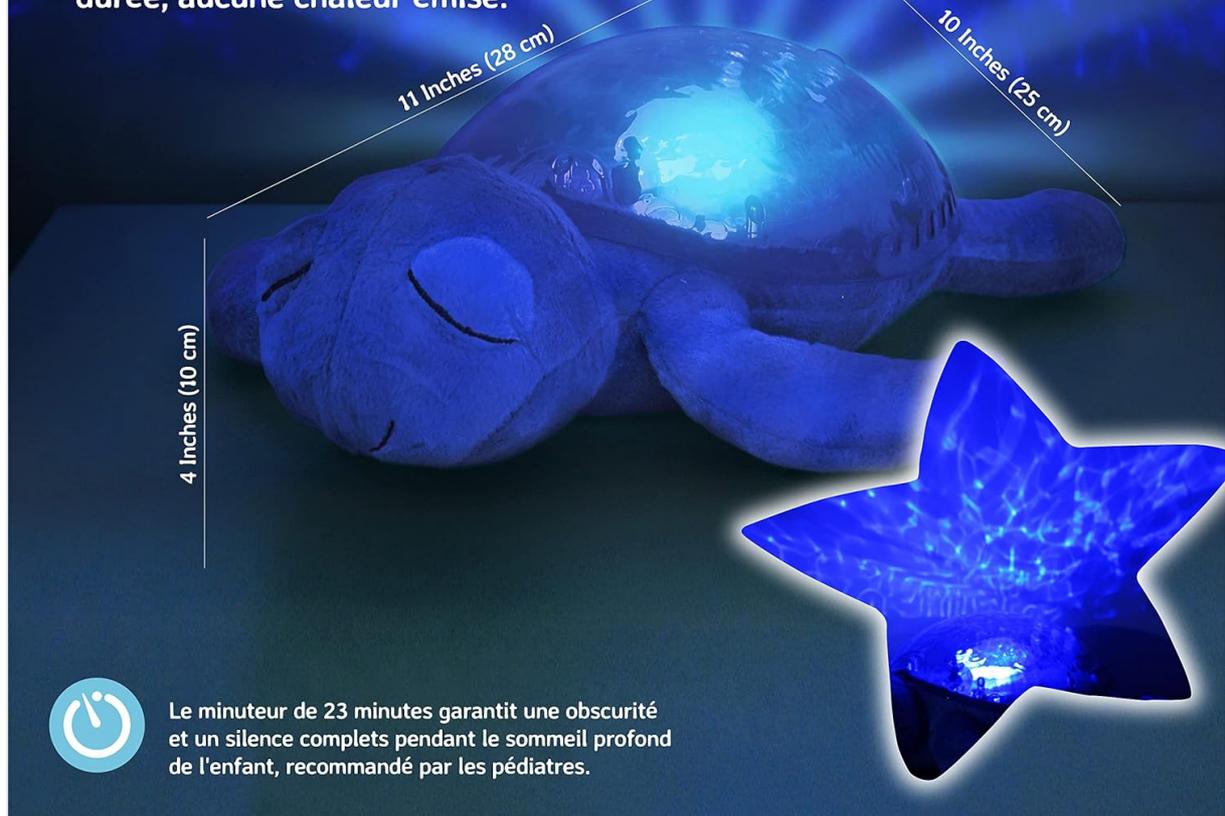


Image 2: The underside of the Tranquil Turtle, illustrating the battery compartment and product dimensions.

1. Locate the battery compartment on the underside of the turtle's shell.
2. Open the fabric flap and unscrew the battery compartment cover using a small Phillips head screwdriver.
3. Insert 3 new Lithium metal batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw.
5. Close the fabric flap.

## 5. OPERATING INSTRUCTIONS

The control buttons are located on the turtle's shell.

# Ambiance sous-marine + 2 sons apaisants



Technologie  
brevetée



Image 3: Detail of the control buttons on the turtle's shell.

## 5.1 Power On/Off

- Press the main power button (usually the largest button) to turn the unit on or off.

## 5.2 Light Projection

The Tranquil Turtle projects a soothing underwater light effect onto the ceiling and walls.

# Tranquil Turtle™

Apprivoiser la peur du noir  
Conçu pour calmer les nouveau-nés et  
rassurer les enfants qui ont peur du  
noir. Transformez la chambre de votre  
enfant en une oasis de paix avec la  
tortue Cloud B Tranquil Turtle.



Veilleuse douce



Deux sons apaisants



Arrêt automatique  
23 minutes



Effet sous-marin  
de mouvement des vagues

Image 4: The Tranquil Turtle projecting calming underwater light effects.

## 5.3 Sound Modes

Select between two calming sound options:

- **Ocean Waves:** Recreates the gentle sound of ocean waves.
- **Tranquil Melody:** A soft, soothing musical tune.
- Use the dedicated sound selection button to switch between modes.

## 5.4 Adjusting Brightness and Movement Speed

The light projection's brightness and the speed of the wave movement can be adjusted to create a personalized experience.

- Use the brightness control button to cycle through different brightness levels.
- Use the movement speed button to adjust how quickly the underwater effects move.

## 5.5 Automatic Shut-Off Timer

The Tranquil Turtle features an automatic shut-off timer set for 23 minutes. This ensures complete darkness and silence during a child's deep sleep, as recommended by pediatricians. The unit will automatically turn off after this period.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- Wipe the surface of the turtle with a soft, damp cloth.
- Do not immerse the unit in water or use harsh cleaning agents.

### 6.2 Battery Replacement

Refer to section 4.1 for detailed instructions on battery installation and replacement.

## 7. TROUBLESHOOTING

---

- **No Light/Sound:** Ensure batteries are correctly installed and not depleted. Replace with new batteries if necessary.
- **Dim Light/Weak Sound:** This often indicates low battery power. Replace batteries.
- **Light/Sound Not Changing:** Check if buttons are pressed firmly. If issues persist after battery replacement, contact customer support.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	CB-7423PR
<b>Dimensions (L x W x H)</b>	26.67 x 19.05 x 10.16 cm
<b>Weight</b>	498.95 grams
<b>Materials</b>	Plastic, Plush Fabric
<b>Power Source</b>	3 x Lithium Metal Batteries (not included)
<b>Battery Life</b>	Approximately 60 hours
<b>Automatic Shut-Off</b>	23 minutes

## 9. WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Cloud b website. Keep your purchase receipt for warranty claims.