

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nuby](#) /
- › [Nuby Super Spout Grip N' Sip Cup Instruction Manual, Model 10056](#)

## Nuby 10056

# Nuby Super Spout Grip N' Sip Cup Instruction Manual

Model: 10056

## INTRODUCTION

The Nuby Grip N' Sip cup is designed to assist children in transitioning to self-feeding and drinking. It features two durable handles sized for small hands, providing comfort and ease of holding. The unique one-piece No-Spill soft silicone spout is engineered for simple use and cleaning, promoting natural drinking action and healthy oral development. This spout is designed to prevent drips and spills while being gentle on gums and emerging teeth. The pressure-sensitive TOUCH-FLO feature regulates fluid intake, closing the spout when sucking ceases to ensure a leak-resistant experience. This product is BPA Free.



Image: A two-pack of Nuby Grip N' Sip cups, showcasing the product in red and teal colors.

### Key Features:

- One-piece No-Spill soft silicone spout for easy use and cleaning.

- Two handles perfectly sized for little hands.
- No-Spill spout designed to prevent drips and spills.
- Suitable for ages 4 months and up.
- BPA Free materials.



Image: An infographic detailing the cup's easy grip handles, no-spill soft spout with Touch Flo valve, and BPA-free material.

## SETUP

---

Before first use, disassemble all components of the cup and wash thoroughly. Ensure all parts are completely dry before reassembly.

1. **Disassembly:** Unscrew the lid from the cup base. Carefully remove the silicone spout from the lid.
2. **Cleaning:** Wash all parts (cup, lid, and silicone spout) in warm, soapy water or place them on the top rack of a dishwasher.
3. **Drying:** Allow all components to air dry completely or dry with a clean cloth.
4. **Reassembly:**
  - Insert the silicone spout firmly into the lid from the top, ensuring it is seated correctly and flat to prevent leaks.
  - Screw the lid onto the cup base until secure. Do not overtighten.



Image: An assembled Nuby Grip N' Sip cup in teal, showing the spout and handles.

## OPERATING INSTRUCTIONS

---

The Nuby Grip N' Sip cup is designed for easy use by infants and toddlers.

1. **Filling the Cup:** Unscrew the lid and fill the cup with your desired liquid (water, milk, juice). Do not overfill. Ensure the liquid level is below the rim of the cup to prevent spills when attaching the lid.
2. **Securing the Lid:** Screw the lid back onto the cup base firmly. Verify that the silicone spout is properly aligned and flat

against the lid's underside to ensure a leak-resistant seal.

3. **Drinking:** The cup features a pressure-sensitive TOUCH-FLO valve. Liquid will flow only when your child applies sucking pressure to the spout. When sucking stops, the spout closes, preventing drips and spills.
4. **Using Handles:** The ergonomic handles are designed for small hands, making it easy for your child to grip and hold the cup independently.



Image: A baby holding and drinking from a green Nuby Grip N' Sip cup, demonstrating the use of the handles.

The No-Spill GripN'Sip is uniquely engineered with Easy Grip handles that are sized to fit your child's grasp. Engineered to make feeding and handling easier, designed with two people in mind, the No-Spill cup is perfect for beginners.

You will be delighted with the transition thanks to Nuby's valveless, leak resistant design. The soft silicone spout is uniquely designed to prevent drips and spills while being delicate and gentle to baby's gums and emerging teeth. The pressure sensitive TOUCH-FLO feature regulates fluid intake with sucking action of child. When sucking action ceases, the spout closes, ensuring a leak resistant cup.

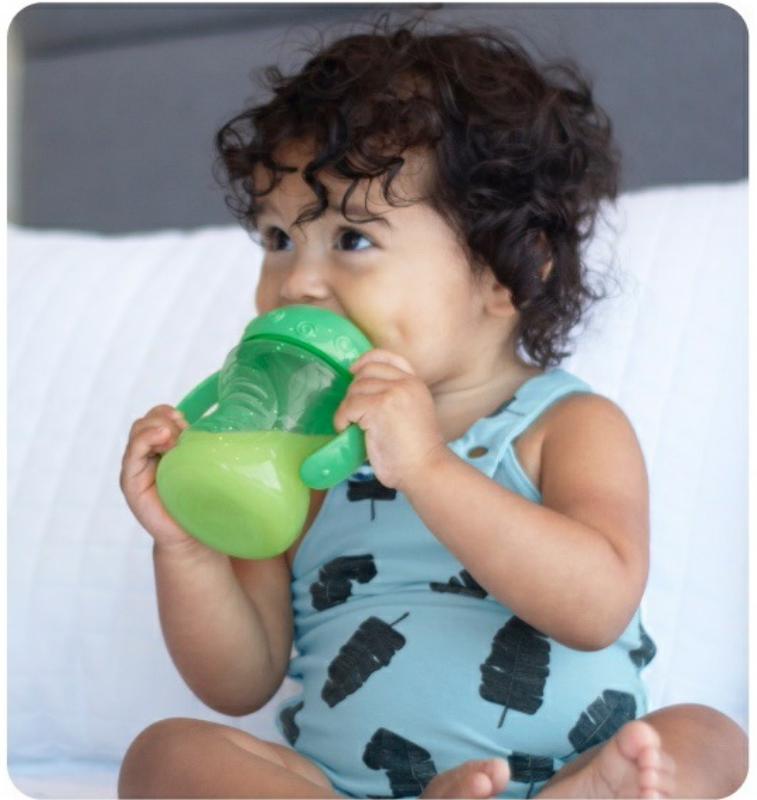


Image: An infographic explaining the No-Spill GripN'Sip design, highlighting the easy grip handles and the pressure-sensitive TOUCH-FLO feature for leak resistance.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of the Nuby No-Spill Grip N' Sip Soft Spout Two Handle Cup. This video highlights the soft flex silicone spout, Touch-Flo valve, no-spill design, and easy-grip handles.

## CARE AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity and hygiene of your Nuby Grip N' Sip cup.

- **Daily Cleaning:** After each use, disassemble the cup completely. Wash all parts with warm, soapy water. Rinse thoroughly.
- **Dishwasher Safe:** All components are safe for cleaning on the top rack of a dishwasher.
- **Drying:** Allow all parts to air dry completely before reassembling or storing to prevent mold or mildew growth.
- **Inspection:** Regularly inspect the silicone spout for any signs of wear, tears, or damage. Replace the spout if any damage is observed to maintain its no-spill function and for your child's safety.
- **Storage:** Store the cup in a clean, dry place when not in use.



Image: A hand placing a Nuby Grip N' Sip cup into the top rack of a dishwasher, illustrating its dishwasher-safe feature.

## TROUBLESHOOTING

---

If you encounter issues with your Nuby Grip N' Sip cup, refer to the following common solutions:

Problem	Possible Cause	Solution
Cup is leaking	<ul style="list-style-type: none"><li>• Lid not screwed on tightly.</li><li>• Silicone spout not properly seated.</li><li>• Spout is damaged or worn.</li><li>• Cup is overfilled.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the lid is screwed on firmly.</li><li>• Disassemble and reassemble the spout, ensuring it lies flat and is fully inserted into the lid.</li><li>• Inspect the spout for tears or damage; replace if necessary.</li><li>• Do not fill liquid above the cup's rim.</li></ul>
Difficulty drinking from spout	<ul style="list-style-type: none"><li>• Child not applying enough sucking pressure.</li><li>• Spout is clogged.</li></ul>	<ul style="list-style-type: none"><li>• Encourage the child to suck more firmly. The TOUCH-FLO valve requires active sucking.</li><li>• Clean the spout thoroughly to remove any blockages.</li></ul>
Unpleasant taste/odor	<ul style="list-style-type: none"><li>• Incomplete cleaning or drying.</li><li>• Residual odors from previous contents.</li></ul>	<ul style="list-style-type: none"><li>• Ensure all parts are thoroughly washed and completely air-dried after each use.</li><li>• For persistent odors, try soaking parts in a solution of baking soda and water, then rinse well.</li></ul>

## SPECIFICATIONS

Feature	Detail
Brand	Nuby
Model Number	10056
Capacity	8 ounces (240ml)
Material	Plastic, Silicone (BPA Free)
Special Features	BPA Free, Freezer Safe, Leak Proof, Two Handles
Product Dimensions	3.5"W x 5.5"H
Care Instructions	Dishwasher Safe (Top Rack)
Recommended Age	4 Months +
Unit Count	2.0 Count (per pack)

## WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the retailer's policy where the product was purchased or visit the official Nuby website. Keep your proof of purchase for any warranty claims.

**Official Nuby Website:** [www.nuby.com](http://www.nuby.com)



