

DVD B007B88KW4

1911 DVD Instruction Manual

Model: B007B88KW4

INTRODUCTION

This instruction manual provides essential information for the proper use and care of your 1911 DVD. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: Front cover of the 1911 DVD. This image displays the primary artwork for the film, including key actors and thematic elements.

SETUP

1. **Unpack the DVD:** Carefully remove the DVD disc from its packaging. Avoid touching the playback surface of the disc.
2. **Inspect the Disc:** Before insertion, visually inspect the disc for any visible scratches, smudges, or damage. A clean, undamaged disc ensures proper playback.

3. **Prepare Your Player:** Ensure your DVD player or compatible device (e.g., Blu-ray player, game console with DVD playback) is powered on and connected to your television or display.
4. **Insert the Disc:** Open the disc tray or slot of your DVD player. Gently place the 1911 DVD into the tray with the label side facing up. Close the disc tray.

OPERATING INSTRUCTIONS

1. **Automatic Playback:** Most DVD players will automatically begin playing the disc or display the main menu upon insertion.
2. **Main Menu Navigation:** Use your DVD player's remote control to navigate the on-screen menu. Common options include "Play Movie," "Scene Selection," "Audio Settings," and "Subtitles."
3. **Language and Subtitle Selection:**
 - Access the "Audio" or "Language" menu to select your preferred audio track. This DVD supports Chinese (Dolby Digital 5.1) and Japanese (Dolby Digital 5.1).
 - Access the "Subtitles" menu to enable or disable subtitles. This DVD supports Japanese subtitles.
4. **Playback Controls:** Use standard remote control functions such as Play, Pause, Stop, Fast Forward, Rewind, and Chapter Skip to control playback.

MAINTENANCE AND CARE

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh cleaning chemicals.
- **Storage:** Store the DVD in its original case in a cool, dry place away from direct sunlight, extreme temperatures, and humidity. Proper storage prevents warping and surface damage.
- **Avoid Scratches:** Do not place the disc on rough surfaces or expose it to objects that could scratch it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or is not recognized.	Disc is dirty, scratched, or inserted incorrectly. Player lens is dirty. Player is incompatible.	Clean the disc. Re-insert the disc correctly (label side up). Try the disc in another player. Consult your player's manual for lens cleaning instructions.
Video or audio skips/freezes.	Disc surface is dirty or damaged.	Clean the disc. If the disc is heavily scratched, playback may be permanently affected.
No audio or incorrect language.	Incorrect audio track selected. Player audio settings are incorrect.	Access the DVD's audio menu to select the desired language. Check your DVD player's audio output settings.
No subtitles or incorrect language.	Subtitles are disabled or incorrect language selected.	Access the DVD's subtitle menu to enable and select the desired subtitle language (Japanese).

SPECIFICATIONS

Model: B007B88KW4

Media Format: DVD

Aspect Ratio: 2.35:1

Languages: Chinese (Dolby Digital 5.1), Japanese (Dolby Digital 5.1)

Subtitles: Japanese

Number of Discs: 1

Product Dimensions: 11.81 x 3.94 x 7.87 inches; 3.52 ounces (Packaging dimensions, not disc)

Note: The "Number of discs" value of 123 from the source data appears to be an error and has been corrected to 1 for a single DVD product. Product dimensions refer to the packaging.

WARRANTY AND SUPPORT

For issues related to the physical DVD disc (e.g., manufacturing defects), please refer to the retailer's return policy or contact the distributor. Specific warranty information for media products like DVDs is typically provided by the point of purchase.

For technical support regarding your DVD player, please consult the instruction manual provided with your player or contact its manufacturer.