

Glacier Bay 65875-2001

Glacier Bay Single-Handle Kitchen Faucet

Model: 65875-2001 | Polished Chrome Finish

Overview	Safety	Contents	Setup	Operation	Maintenance	Troubleshooting	Specifications
Warranty & Support							

1. PRODUCT OVERVIEW

The Glacier Bay Single-Handle Kitchen Faucet in Polished Chrome (Model 65875-2001) features a simple, elegant design that minimizes countertop clutter. Constructed from durable zinc, this faucet boasts an attractive polished-chrome finish, making it suitable for various kitchen decors. Its single-handle design allows for easy and quick water flow and temperature control. This faucet is ADA compliant and requires a 3-hole sink for installation.

Key Features:

- Durable zinc construction.
- Polished chrome finish for a sleek appearance.
- Single-handle design for easy water control.
- ADA Compliant.
- Lightweight design.
- Designed for 3-hole sink installation.



Image 1.1: Front view of the Glacier Bay Single-Handle Kitchen Faucet in Polished Chrome. This image shows the faucet's overall design, including the single handle, spout, and base plate.

2. SAFETY INFORMATION

- Always turn off the main water supply before beginning any installation or maintenance.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during installation.
- Ensure all connections are secure to prevent leaks.
- Do not overtighten connections, as this may damage the faucet or plumbing.
- If you are unsure about any part of the installation, consult a qualified plumber.
- Keep small parts away from children.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- Single-Handle Kitchen Faucet Assembly
- Mounting Hardware (nuts, washers)
- Deck Plate (escutcheon)
- Hot and Cold Water Supply Lines (typically integrated or included)
- Installation Guide



3-HOLE
INSTALLATION

Image 3.1: The Glacier Bay faucet shown with a graphic indicating its suitability for 3-hole sink installations. This image highlights the base plate designed to cover three sink holes.

4. SETUP AND INSTALLATION

This faucet is designed for deck-mounted, 3-hole sink installations. Follow these general steps for proper setup. Specific details may vary; refer to the included installation guide for precise instructions.

Tools Required (Not Included):

- Adjustable Wrench
- Phillips Head Screwdriver
- Plumber's Putty or Silicone Sealant
- Flashlight
- Bucket and Towel

Installation Steps:

1. **Prepare the Sink Area:** Turn off the main water supply to the kitchen. Clear the area under the sink. If replacing an old faucet, remove it and clean the sink surface thoroughly.
2. **Install the Deck Plate:** Apply a thin bead of plumber's putty or silicone sealant around the underside edge of the deck plate (escutcheon). Place the deck plate over the three holes on the sink.
3. **Position the Faucet:** Insert the faucet body through the center hole of the deck plate and sink. Ensure the faucet is

properly aligned and the handle is facing the desired direction.

4. **Secure the Faucet:** From underneath the sink, slide the rubber washer, metal washer, and mounting nut onto the threaded shank of the faucet. Hand-tighten the nut, then use an adjustable wrench to secure it firmly, but do not overtighten.
5. **Connect Water Supply Lines:** Connect the hot and cold water supply lines from the faucet to the corresponding hot and cold water shut-off valves. Use an adjustable wrench to tighten connections, ensuring they are snug but not overtightened.
6. **Check for Leaks:** Once all connections are made, slowly turn on the main water supply. Check all connections for leaks. If leaks are present, tighten the connections slightly until they stop.
7. **Flush the Faucet:** Remove the aerator from the faucet spout. Turn on both hot and cold water to full flow for a few minutes to flush out any debris from the lines. Turn off the water, reattach the aerator, and test the faucet operation.



Image 4.1: The Glacier Bay Single-Handle Kitchen Faucet shown installed on a kitchen countertop with a double sink. This image provides a visual reference for the faucet's appearance in a typical kitchen setting.

5. OPERATING INSTRUCTIONS

The Glacier Bay Single-Handle Kitchen Faucet is designed for simple and intuitive operation.

Water Flow and Temperature Control:

- **Turn On/Off:** Lift the handle upwards to turn on the water. Push the handle downwards to turn off the water.
- **Adjust Water Flow:** The further you lift the handle, the greater the water flow.
- **Adjust Water Temperature:** Move the handle to the left for hot water and to the right for cold water. The position between left and right will provide mixed water at varying temperatures.



Image 5.1: A close-up view of the single handle of the Glacier Bay kitchen faucet. This image highlights the ergonomic design of the lever handle for easy water control.

6. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your Glacier Bay faucet.

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the polished chrome finish.
- **Aerator Maintenance:** If water flow becomes restricted, the aerator may be clogged. Unscrew the aerator from the spout, clean any debris or mineral deposits, and rinse thoroughly before reattaching.
- **Leak Prevention:** Periodically check all connections under the sink for any signs of leaks. Tighten connections if necessary, but do not overtighten.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator; partially closed shut-off valves; debris in supply lines.	Clean the aerator. Ensure shut-off valves are fully open. Flush supply lines.
Faucet Leaks from Spout	Worn cartridge; debris in cartridge.	Replace the faucet cartridge. Consult a plumber if unsure.
Leaks from Base of Faucet	Loose mounting nut; worn O-rings or gaskets.	Tighten the mounting nut under the sink. Inspect and replace O-rings/gaskets if damaged.
Water Temperature Issues	Incorrect hot/cold supply line connection; faulty cartridge.	Verify hot and cold lines are connected correctly. Replace cartridge if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Glacier Bay
Model Number	65875-2001
Mounting Type	Deck Mount
Finish Type	Polished Chrome
Material	Zinc
Color	Chrome
Number of Handles	1
Number of Holes Required	3
Handle Type	Lever
Spout Design	Traditional Curve
Installation Method	Divided (components for assembly)
ADA Compliant	Yes
Weight	Lightweight

For additional information please refer to "Info & Guides" located next to the Product Overview below

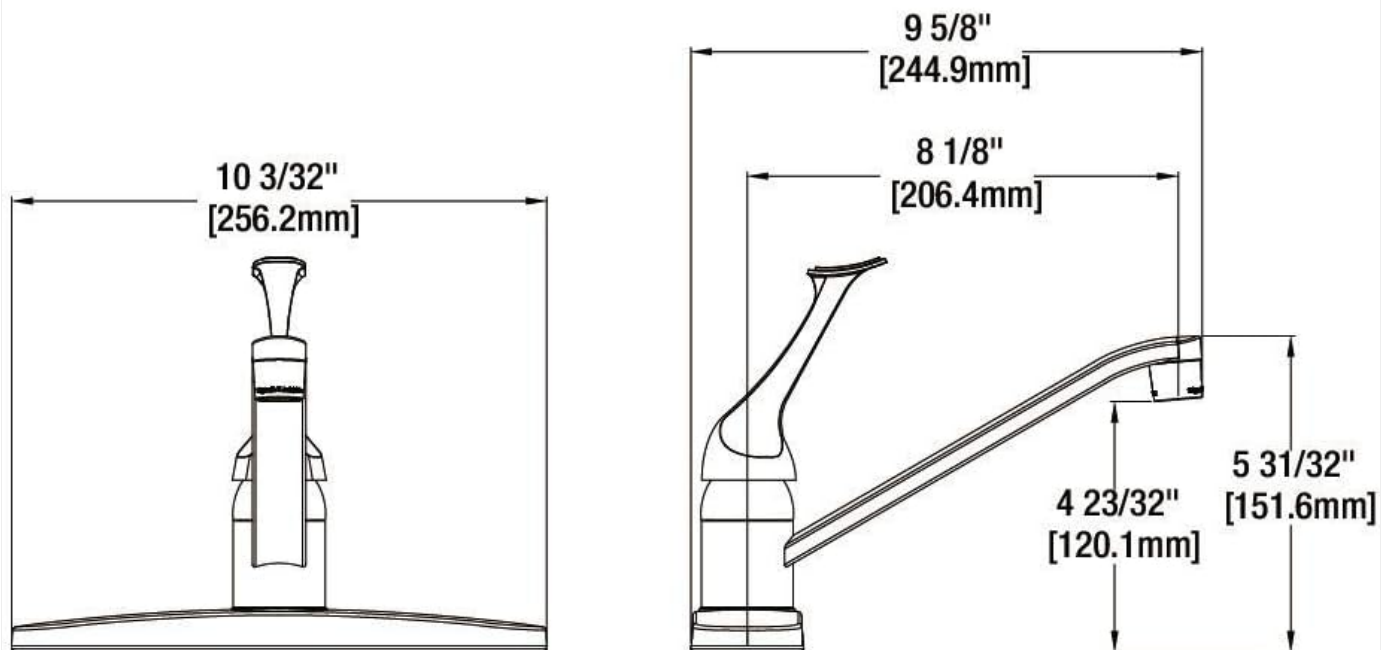


Image 8.1: Dimensional drawing showing the key measurements of the Glacier Bay Single-Handle Kitchen Faucet. This includes height, spout reach, and base plate dimensions in both inches and millimeters.

9. WARRANTY AND CUSTOMER SUPPORT

Glacier Bay products are manufactured to high-quality standards and are backed by a warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, replacement parts, or general inquiries, please contact Glacier Bay customer support. Contact information can typically be found on the product packaging or the manufacturer's official website.

- **Online Support:** Visit the official Glacier Bay website for FAQs and support resources.
- **Phone Support:** Refer to your product documentation for the customer service phone number.

© 2023 Glacier Bay. All rights reserved.

This manual is for informational purposes only. Glacier Bay is not responsible for any damages or injuries resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question